

UNCLASSIFIED

AD NUMBER
ADB191869
NEW LIMITATION CHANGE
TO Approved for public release, distribution unlimited
FROM Distribution authorized to U.S. Gov't. agencies and private individuals or enterprises eligible to obtain export-controlled technical data in accordance with DoDD 5230.25; Aug 94. Controlling DoD office is RL[C3BA], Griffiss AFB, NY 13441-4505.
AUTHORITY
AFRL/IFOIP ltr, 1 Jun 2004

THIS PAGE IS UNCLASSIFIED

AD-B191 869



2

RL-TR-94-121
Final Technical Report
August 1994



ACOUSTO-OPTIC BEAM STEERING STUDY

Harris Corporation

Sponsored by
Ballistic Missile Defense Organization

DTIC
PLATE
NOV 02 1994

D
G

DISTRIBUTION AUTHORIZED TO U.S. GOVERNMENT AGENCIES AND PRIVATE INDIVIDUALS OR ENTERPRISES ELIGIBLE TO OBTAIN EXPORT-CONTROLLED TECHNICAL DATA ACCORDING TO DOD 5230.25; Aug 94. OTHER REQUESTS FOR THIS DOCUMENT SHALL BE REFERRED TO RL(C3BA), GRIFFISS AFB, NY. 13441-4505

INFORMATION SUBJECT TO EXPORT CONTROL LAWS

WARNING - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C., Sec 2751 et seq.) or the Export Administration Act of 1979, as amended (Title 50, U.S.C. App. 2401, et seq.). Violations of these export laws are subject to severe criminal penalties. Disseminate according to AFR 80-34.

The views and conclusions contained in this document are those of the authors and should not be interpreted as necessarily representing the official policies, either expressed or implied, of the Ballistic Missile Defense Organization or the U.S. Government.

Rome Laboratory
Air Force Materiel Command
Griffiss Air Force Base, New York

DTIC QUALITY INSPECTED 2


14112
94-33860



94 11 1 03 5

RL-TR-94-121 has been reviewed and is approved for publication.

APPROVED:

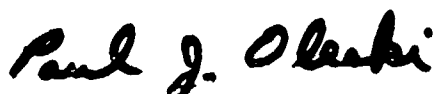

PAUL J. OLESKI
Project Engineer

FOR THE COMMANDER



JOHN A. GRANIERO
Chief Scientist
Command, Control & Communications Directorate

DESTRUCTION NOTICE - For classified documents, follow the procedures in DOD 5200.22M, Industrial Security Manual or DOD 5200.1-R, Information Security Program Regulation. For unclassified limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

If your address has changed or if you wish to be removed from the Rome Laboratory mailing list, or if the addressee is no longer employed by your organization, please notify RL (C3BA) Griffiss AFB NY 13441. This will assist us in maintaining a current mailing list.

Do not return copies of this report unless contractual obligations or notices on a specific document require that it be returned.

ACOUSTO-OPTIC BEAM STEERING STUDY

H. W. Presley
L. M. Burberry
A. F. Abbenante

Contractor: Harris Corporation
Contract Number: F30602-91-C-0131
Effective Date of Contract: 6 Sep 91
Contract Expiration Date: 31 Dec 93
Short Title of Work: Acousto-Optic Beam Steering Study

Period of Work Covered: Sep 91 - Dec 93

Principal Investigator: Harry W. Presley
Phone: (407) 727-5928

RL Project Engineer: Paul J. Oleski
Phone: (315) 330-3092

Distribution authorized to U.S. Government agencies and private individuals or enterprises eligible to obtain export-controlled technical data according to DOD 5230.25; Aug 94. Other requests for this document shall be referred to RL (C3BA), 525 Brooks Rd, Griffiss AFB NY 13441-4505.

This research was supported by the Ballistic Missile Defense Organization of the Department of Defense and was monitored by Paul J. Oleski, RL (C3BA), 525 Brooks Rd, Griffiss AFB NY 13441-4505 under Contract F30602-91-C-0131.

Accession For	
NTIS CR&I	<input type="checkbox"/>
DTIC TAB	<input checked="" type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By	
Distribution/	
Availability Codes	
Dist	Avail and/or Special
2	57

REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.

1. AGENCY USE ONLY (Leave Blank)		2. REPORT DATE August 1994		3. REPORT TYPE AND DATES COVERED Final Sep 91 - Dec 93	
4. TITLE AND SUBTITLE ACOUSTO-OPTIC BEAM STEERING STUDY				5. FUNDING NUMBERS C - F30602-91-C-0131 PE - 63215C PR - 1405 TA - 02 WU - 14	
6. AUTHOR(S) H. W. Presley, L. M. Burberry, A. F. Abbenante					
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Harris Corporation Govt Aerospace Systems Division P.O. Box 94000 Melbourne FL 32902				8. PERFORMING ORGANIZATION REPORT NUMBER N/A	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Ballistic Missile Defense Organization 7100 Defense Pentagon Wash DC 20301-7100 Rome Laboratory (C3BA) 525 Brooks Rd Griffiss AFB NY 13441-4505				10. SPONSORING/MONITORING AGENCY REPORT NUMBER RL-TR-94-121	
11. SUPPLEMENTARY NOTES Rome Laboratory Project Engineer: Paul J. Oleski/C3BA/(315) 330-3092					
12a. DISTRIBUTION/AVAILABILITY STATEMENT USGO agencies and private individuals or enterprises eligible to obtain export-controlled technical data according to DOD 5230.25; Aug 94. Other requests RL(C3BA), 525 Brooks Rd, Griffiss AFB NY 13441-4505.				12b. DISTRIBUTION CODE	
13. ABSTRACT (Maximum 200 words) This is the final report for a 21 month study investigating the use of acoustic-optic beam steering for inter-satellite laser communications (lasercom). The basic technique is demonstrated in a breadboard that uses a customized 2-dimensional acoustic-optic Bragg cell deflector and a magnifying optical system comprised entirely of off-the-shelf components. The breadboard was designed to steer a laser over a range of 360 x 36 degrees. Important characteristics of the acoustic-optic Bragg deflector include high angular resolution, fast switching speed, high electrical and optical efficiency, and high reliability with no moving parts.					
14. SUBJECT TERMS Acousto-Optic Deflector, Laser Beam Steering and Spoiling, Satellite Communications Networks				15. NUMBER OF PAGES 150	
				16. PRICE CODE	
17. SECURITY CLASSIFICATION OF REPORT UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT UNCLASSIFIED	20. LIMITATION OF ABSTRACT SAR		

TABLE OF CONTENTS

1.0	Introduction	1
2.0	Executive Summary	1
3.0	Background and Overview	2
4.0	Subsystem Components	9
4.1	Acousto-optic Bragg Cell Design and Test	9
4.2	Optics	23
4.2.1	Demonstration Optics Design	23
4.2.2	Custom Optics Design	33
4.3	Electronics Design and Test	42
5.0	Breadboard Demonstration	51
5.1	Breadboard Hardware Description	51
5.2	Control and Analysis Software Description	55
5.3	Breadboard Performance Summary	57
6.0	Conclusions	65
Appendix A.	Breadboard Control PC Source Code	A-1
Appendix B.	Breadboard Control PC Help File Listing (User's Guide)	B-1
Appendix C.	Electronic Interface Board Schematics	C-1
Appendix D.	List of Acronyms and Frequently Used Abbreviations	D-1

LIST OF FIGURES

3-1	Example Link Performance Analysis	3
3-2	Beam Parameters vs. Acousto-optic Device Performance	4
3-3	Breadboard Transmitter Optical Concept	5
3-4	Optical Magnification Concept with Wide Angle Lens	6
3-5	Simplified Breadboard Schematic	7
3-6	Simplified Electronics Schematic	8
3-7	Example Beam Pattern of 5X Zoom	8
4.1-1	Fundamental Acousto-optic Process	9
4.1-2	Acoustic Material Figure-of-Merit Trade	11
4.1-3	Degenerate Response in On-Axis TeO ₂	12
4.1-4	Rotated AO Interaction in TeO ₂ : High-Band Mode	13
4.1-5	Rotated AO Interaction in TeO ₂ : Low-Band Mode	14
4.1-6	Theoretical Deflection Response of Low- and High-Band Interactions in 2° Acoustically Rotated TeO ₂	15
4.1-7	Dimensions of 500 Spot (Horizontal) Bragg Cell	16
4.1-8	Bragg Cell Impedance Match Circuits	16
4.1-9	Starting and Finishing Impedance for 200 Spot Bragg Cell	17
4.1-10	Starting and Finishing Impedance for 500 Spot Bragg Cell	17
4.1-11	Matched VSWR for 200 and 500 Spot Bragg Cells	18
4.1-12	Theoretical vs. Experimental Deflection Efficiency of the 500 Spot Bragg Cell	18
4.1-13	Switching Response Test	19
4.1-14	Saturated Response of the 500 Spot Bragg Cell	20
4.1-15	Geometry and Parameters for Thermal Analysis	21
4.1-16	Raw and Corrected Wavefront Contours	22
4.2.1-1	Demonstration Optics Layout	23
4.2.1-2	Front-end Demonstration Optics Layout	29
4.2.1-3	Back-end Demonstration Optics Layout	33
4.2.2-1	Back-end Custom Optics Layout	35
4.2.2-2	Front-end Custom Optics Layout	38
4.2.2-3	Mid-section Custom Optics Layout	38
4.2.2-4	Complete Custom Optics Layout	41
4.3-1	Electronics Subsystem Block Diagram	42
4.3-2	Control Interface Board Block Diagram	43
4.3-3	DDS Card Block Diagram	44
4.3-4	RF Section Block Diagram	45
4.3-5	Spurious Tones Test Results	46
4.3-6	Phase Noise Test Results	47
4.3-7	Settling Time Test Setup	47
4.3-8	Channel X (Horizontal) Settling Time Test Results	48
4.3-9	Channel Y (Vertical) Settling Time Test Results	49
4.3-10	Third Order Intercept Test Results	50

LIST OF FIGURES (CONTINUED)

5.1-1	Photograph of Breadboard Hardware	52
5.1-2	Photograph of Optics Bench	53
5.1-3	Photograph of Electronics Box (Interface Board Side)	54
5.1-4	Photograph of Electronics Box (DDS Side)	56
5.3-1	Breadboard Built-in Test Set (BTS) Block Diagram	58
5.3-2	Test A - Beam Steering Range	60
5.3-3	Measured Optical Power Through Breadboard	62
5.3-4	Component Throughput Percentage	63
5.3-5	Laser Diode Spectral Quality Measurements	64
5.3-6	Laser Diode Spatial Profile Measurements	64

LIST OF TABLES

2-1	Breadboard Goal Specifications and Results	2
4.2.1-1	Demonstration Optical Hardware List	24
4.2.1-2	Alignment Procedure	25
4.2.1-3	Front-end Demonstration Optics Design	27
4.2.1-4	Back-end Demonstration Optics Design	30
4.2.2-1	Back-end Custom Optics Design	34
4.2.2-2	Front-end Custom Optics Design	36
4.2.2-3	Mid-section Custom Optics Design	39
4.2.2-4	Optical Efficiency of the Custom System	41
5.1-1	PC Computer Specifications	51
5.3-1	Itemized Compliance of Breadboard to Goals	57
5.3-2	Test Plan Summary	59
5.3-3	Beam Zooming Test Results	61

1.0 Introduction

This is the final report for a 21 month study investigating the use of acousto-optic beam steering for inter-satellite laser communications (lasercom). The basic technique is demonstrated in a breadboard that uses a customized 2-dimensional acousto-optic (AO) Bragg cell deflector and a magnifying optical system comprised of all off-the-shelf components. Important characteristics of the AO Bragg deflector include high angular resolution, fast switching speed, high electrical and optical efficiency, and high reliability with no moving parts.

The breadboard was designed to steer a laser over a range of $360^\circ \times 36^\circ$. Several unique capabilities are provided by the AO deflector which are not possible with conventional steering mirrors. For example, multiple simultaneous beams can be independently steered anywhere within the total steering range. Also, the AO deflector can produce variable defocus or "zooming" that increases the divergence of the transmitted beam anywhere from 1 to over 10 times the diffraction-limited beam width. A direct-digital-synthesizer (DDS) was fabricated for the breadboard to produce ultra-stable and fast switching frequencies for input to the AO deflector. All of the beam control and diagnostic functions for the breadboard are provided by a menu-driven PC486-33 computer program.

The potential for reducing the overall size of an AO-based lasercom transmitter was also investigated. Using customized optical components and miniaturized packaging techniques an optical system equivalent to the breadboard demonstration could be reduced to the size of a "shoebox" with no sacrifice of performance.

2.0 Executive Summary

This section briefly summarizes the significant results of the effort. An analysis was performed that determined AO technology could meet or exceed all of the desired beam steering specifications for a given "hypothetical" lasercom system (derived from the SDI Brilliant Pebbles concept). Then the technology was experimentally demonstrated in a breadboard using the hypothetical system specifications as design goals. The goal specifications and the final breadboard results are listed in Table 2-1. Overall, the conclusion is easily made that acousto-optic technology is a very effective beam steering technique for use in lasercom transmitter applications.

Table 2-1 illustrates that all of the goal specifications were met by the breadboard with the exception of end-to-end optical efficiency. As explained in Section 5.3 this was partly due to poor spectral quality of the infrared laser diode used in the breadboard (which reduced the Bragg cell deflection efficiency), but mostly due to several optical components that were not designed to operate at the 830 nm wavelength of the laser diode, which resulted in approximately 70% reflection losses. The projected efficiency of a customized optical system with a much lower lens count and properly coated optics using a high quality laser diode source is at least 70%, as discussed in Section 4.2.2.

Table 2-1. Breadboard Goal Specifications and Results

Goal Specification

Breadboard Result

- | | |
|---|---|
| • steering range: approx. 180° x 45° | • implemented 360° x 36° (2 sectors) |
| • transmit beam size: 0.36° round | • successfully demonstrated |
| • zoom factor: minimum 10X (3.6°) | • successfully demonstrated |
| • multiple beam generation: min. 4 | • successfully demonstrated (can "simulate" <u>many</u> more) |
| • end-to-end optical efficiency: min. 50% | • 13% demonstrated (limited by laser and >70% losses in "off-the-shelf" optics) |
| • steering response time: 30 microsec | • successfully demonstrated |

3.0 Background and Overview


In many communications scenarios lasercom has been shown to have significant hardware advantages over traditional RF/microwave approaches: smaller apertures, lower power consumption, and lower weight. These advantages can be directly related to the high carrier frequency of the light which produces narrower beamwidths. In addition, there are significant systems advantages including higher data rates, EMI immunity, jam resistance, and easy frequency allocation. The component technology in lasers, detectors, and modulators is continuing to advance at a rapid pace, leading to increased interest in lasercom for terrestrial and space-based applications. However, the narrow beamwidths that help make lasercom attractive also increase the burden on acquisition, pointing, and tracking (APT) functions.

The motivation for the present effort arises from the need to quickly steer a communications laser over a very wide steering range using relatively small apertures and short link ranges. These requirements were derived from the SDI Brilliant Pebbles scenario. In this scenario traditional opto-mechanical approaches to beam steering become complex and expensive to implement, and reliability becomes a concern. In this report the design and development of a demonstration transmitter subsystem using acousto-optic (AO) technology is presented that meets or exceeds the beam steering requirements for many lasercom applications.

AO deflector technology is very mature and proven reliable in many applications. AO deflectors may also have utility as angular and wavelength discriminators for wide-angle lasercom receivers. Although the present effort was primarily concerned with lasercom transmitter applications there are numerous other related applications for AO deflectors including image processing, robotic scanning/inspection systems, RF antenna processing, laser printing/marketing, visual displays, laser radar (LIDAR), and remote sensing. Closely related AO tunable filters (AOTF) provide high resolution spectral analysis capability for LIDAR, remote sensing, and in the analysis of covert optical communications or threat laser beams (warning sensors) in tactical environments.

An analysis was performed to determine the minimum transmitter apertures (beam diameter) required for various link ranges. For example, Figure 3-1 shows link performance as bit error rate (BER) versus link range for various beam diameters. The assumptions used in developing this trade analysis are listed directly below Figure 3-1. This analysis was not concerned with the performance of specific lasercom systems, but only with determining approximate beam diameters for the design of the AO beam steering subsystem.

Figure 3-1. Example Link Performance Analysis

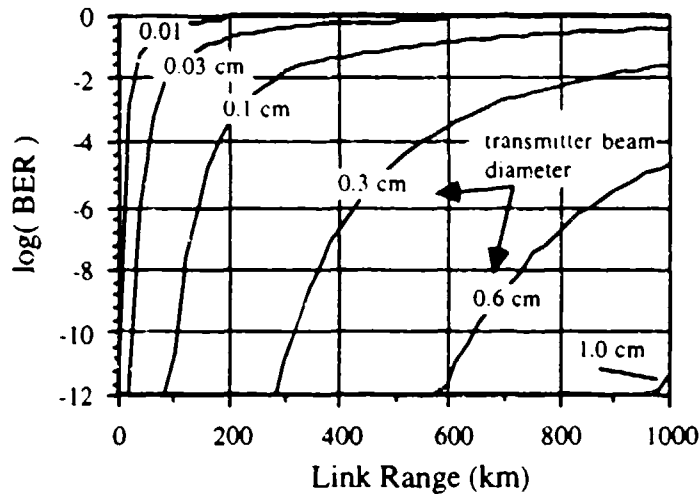

Assumptions:

- Laser: $\lambda = 830$ nm, Power = 1 watt
- Receiver: $D_r = 25$ cm, APD gain = 40
- Data: Rate = 100 Mbps, 2-ARY, no error corrections
- Other: no background noise, no path attenuation, no pointing/tracking errors


It may be seen in Figure 3-1 that for link ranges out to 1000 km an optical aperture as small as 1 cm may provide good BER performance. This result forms the basis for using very wide field-of-regard (FOR) optics and beam deflection by a Bragg cell to achieve steering of the transmit beam. The maximum steering range and transmitted beam size is related to the Bragg cell by

$$\Theta_{\text{range}} \approx \text{TBW} \cdot \Theta_{\text{beam}} \quad (3-1)$$

where Θ_{range} is the desired transmitter steering range, Θ_{beam} is the beam divergence (chosen to meet BER requirements), and TBW is a performance measure of the Bragg cell called the "time-bandwidth product", or also known as the "spot resolution number". In general, Bragg cell efficiency deteriorates with increasing TBW, making it harder to achieve high optical throughput.

The important result of Eq. (3-1) is that the available transmitter steering range is ultimately limited by the Bragg cell performance for a given transmitter beam size, as shown in Figure 3-2.

Figure 3-2. Beam Parameters vs. Acousto-optic Device Performance

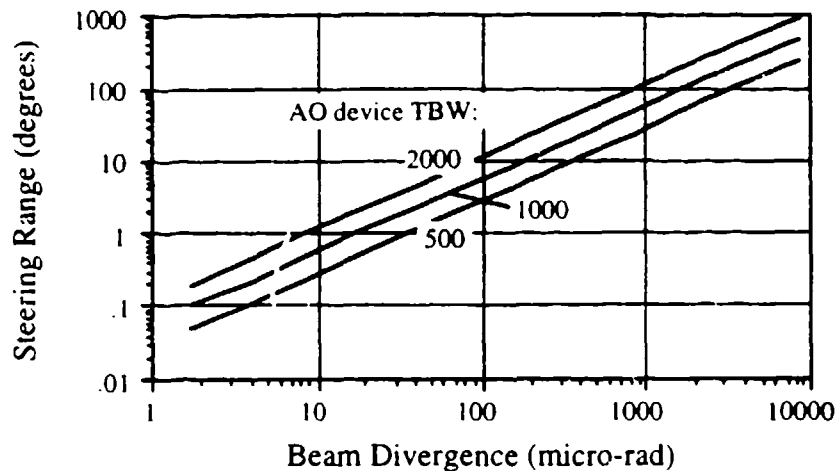

Three different values of Bragg cell TBW's are plotted in Figure 3-2, with a TBW of 500 representing an "easy" Bragg cell design and a TBW of 2000 representing a state-of-the-art design. To obtain a full 360° steering range it may be seen that a moderately complex Bragg cell design with a TBW of 1000 may be used with a beam divergence of about 6 milliradians (upper right hand corner of plot). The maximum link range can then be determined based on specific link parameters such as laser power, path loss, desired BER, background noise, etc.


Figure 3-2 suggests some interesting alternative applications for lasercom AO Bragg steering. For example, in certain applications such as terrestrial or space data relays it is not necessary to steer the beam over a very wide range, and larger transmit apertures may be required. Also, when very fast steering speeds are not required over a wide steering range one may employ auxiliary mechanical gimbals for coarse pointing. In these types of applications an AO Bragg deflector can provide high performance "fine-tune" beam steering in association with the larger beam sizes. For example, as shown in the lower left hand corner of Figure 3-2, a Bragg cell design of $TBW = 1000$ and a beam divergence of 2 microradians can provide a fine-tune steering range of 0.1° . Therefore, AO Bragg steering also has utility in lasercom systems requiring transmit beams 10 cm or more in diameter and link ranges well beyond 1000 km (referring to Figure 3-1).

The trade analysis presented in Figure 3-2 is not limited just to lasercom transmitters, but is also valid for receivers. In other words, an AO deflector may be used in an optical receiver employing wide FOR optics in order to select the desired angle of arrival to the photodetector. This uses the AO device in the reverse sense from the transmitter: here one wishes to hold a constant deflected angle (onto the detector) for various chosen input angles. In this application there is no actual change in the Bragg cell itself, but only a change in the way that it is utilized. Since lasercom receivers require somewhat larger apertures for low BER communication the lower left hand corner of Figure 3-2 is generally the applicable region for receiver operation. As in the long range transmitter case, for large receiver apertures the AO device serves primarily as a very fast fine-tuning element with a coarser steering assist from slower gimbal mechanisms as needed.

For the purpose of technology demonstration a breadboard lasercom transmitter was developed that provides a $360^\circ \times 36^\circ$ optical steering range. This is achieved optically by a field

splitter that divides the beam space and routes the Bragg cell output field to two optical magnification sectors that each cover a $180^\circ \times 36^\circ$ FOR. This concept, illustrated in Figure 3-3, can be easily extended to provide three or more output sectors as required.

Figure 3-3. Breadboard Transmitter Optical Concept

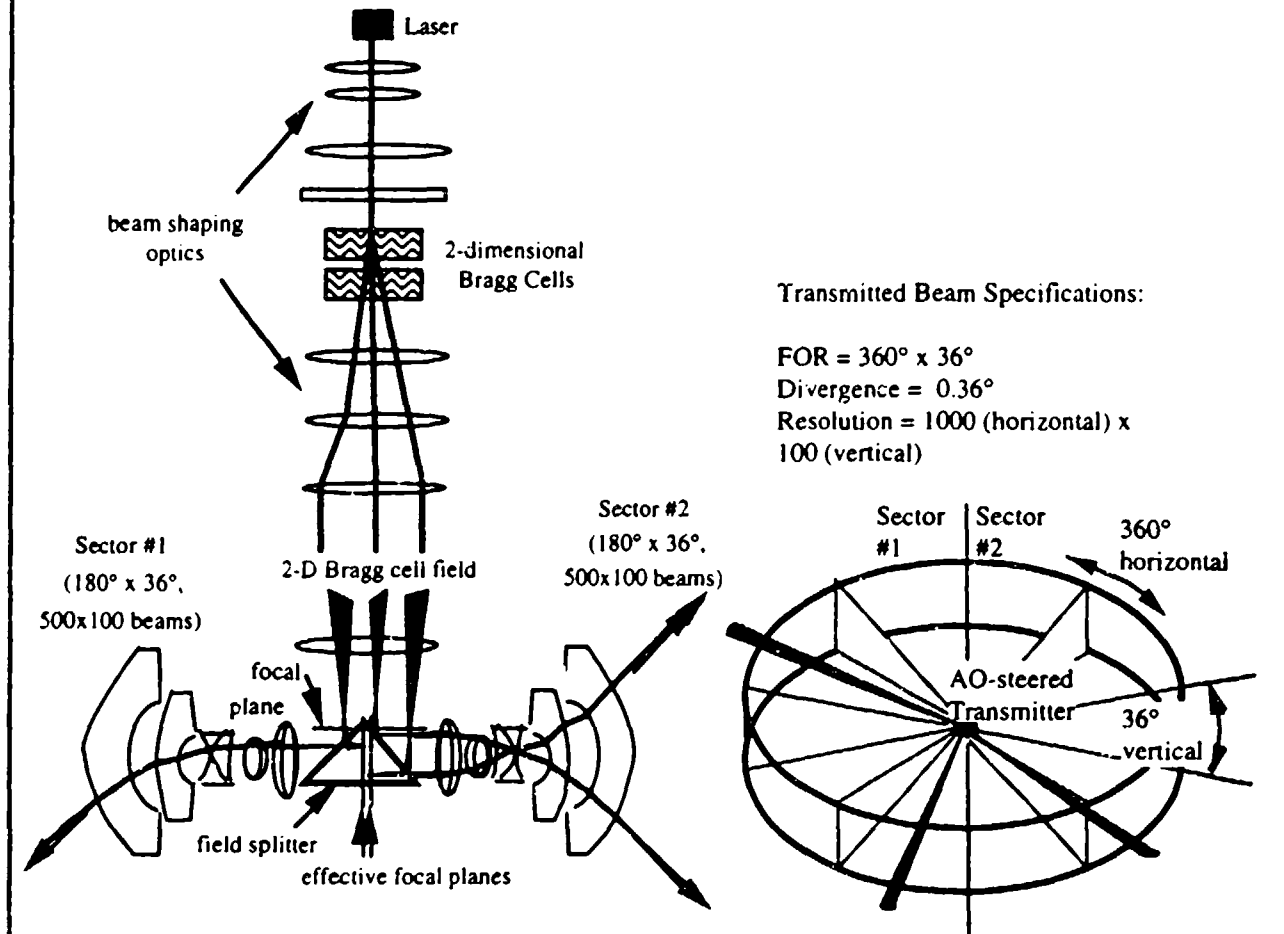


In order to achieve two axes of beam steering two Bragg cells turned orthogonal to each other are required. The time-bandwidth TBW, or spot resolution, required for the Bragg cells can be determined from the ratio of total steering range to far-field beam width: 1000 ($360^\circ/0.36^\circ$) in the horizontal axis and 100 ($36^\circ/0.36^\circ$) in the vertical axis. However, this would result in two highly asymmetric Bragg cell designs, and since the optical field can be divided as shown in Figure 3-3, a more equitable solution is to implement a 500 (horizontal) x 200 (vertical) spot Bragg cell pair and optically split the field in half along the 200 spot axis. In the end, this approach produces the optical equivalent of a 1000 x 100 spot Bragg cell pair.

The relatively small steering range that the Bragg cell inherently produces must be angularly magnified in order to meet the lasercom transmitter requirements. The 1.2° steering range of the

500 Spot Bragg Cell must be magnified to 180° as it exits the lasercom terminal, so an optical magnification factor of 150X is required. Angular magnification results in an effective decrease in the beam diameter, which in this case becomes $25 \text{ mm} / 150 \approx 165 \text{ microns}$. For the 200 Spot Bragg Cell the optical magnification factor required is approximately 70X. Due to the relatively small beam sizes a simple wide angle 35mm camera lens was employed to achieve the required optical magnification. Figure 3-4 illustrates the concept of the wide angle camera lens. The breadboard optical design has been extensively modeled on CODE V[®] analysis software and shown to have wavefront quality near $\lambda/10$.


Figure 3-4. Optical Magnification Concept with Wide Angle Lens

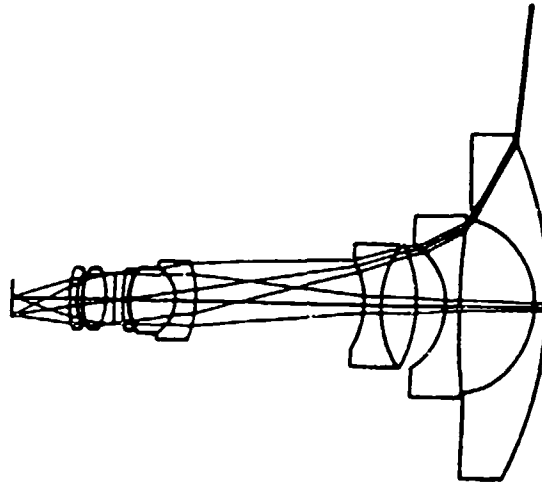

To drive the Bragg cells an electronic subsystem was developed that uses direct-digital-synthesis (DDS) to generate the required frequencies. Since the DDS system can switch frequencies up to 50 times faster than the response time of the Bragg cells one can use time-division-multiplexing of several frequencies in order to produce multiple simultaneous deflected beams or similarly to create higher diverging beams for lasercom acquisition or close-range communication purposes. The DDS system provides phase noise, spurious signal, and drift specifications well within the requirements of the breadboard. The output of two DDS channels is amplified before insertion to the two Bragg cells.

The breadboard control is implemented in a turn-key fashion with a 486-33 PC as the central controller. A very user-friendly menu-driven software interface was developed in Visual Basic[®]. The PC opens two windows on the monitor screen - the "command" and "analysis" windows. In the top half of the monitor the command window shows a flat representation of the 2-D beam steering space ($360^\circ \times 36^\circ$) with a small dot that indicates the current intended beam steering direction. The angular coordinates of the intended steering direction are displayed next to the window. Directly below the command window is the "analysis" window, which displays a real-time image from the CCD array camera that is mounted at an intermediate focal plane of the Bragg cell output. The analysis window thus provides a direct visual check on where the beam is actually being steered vs. the intended direction displayed in the command window. The actual pointing coordinates can be calculated and displayed using a centroiding algorithm that operates on the CCD image data. Figure 3-5 shows a simplified schematic of the demonstration breadboard hardware.


Figure 3-5. Simplified Breadboard Schematic

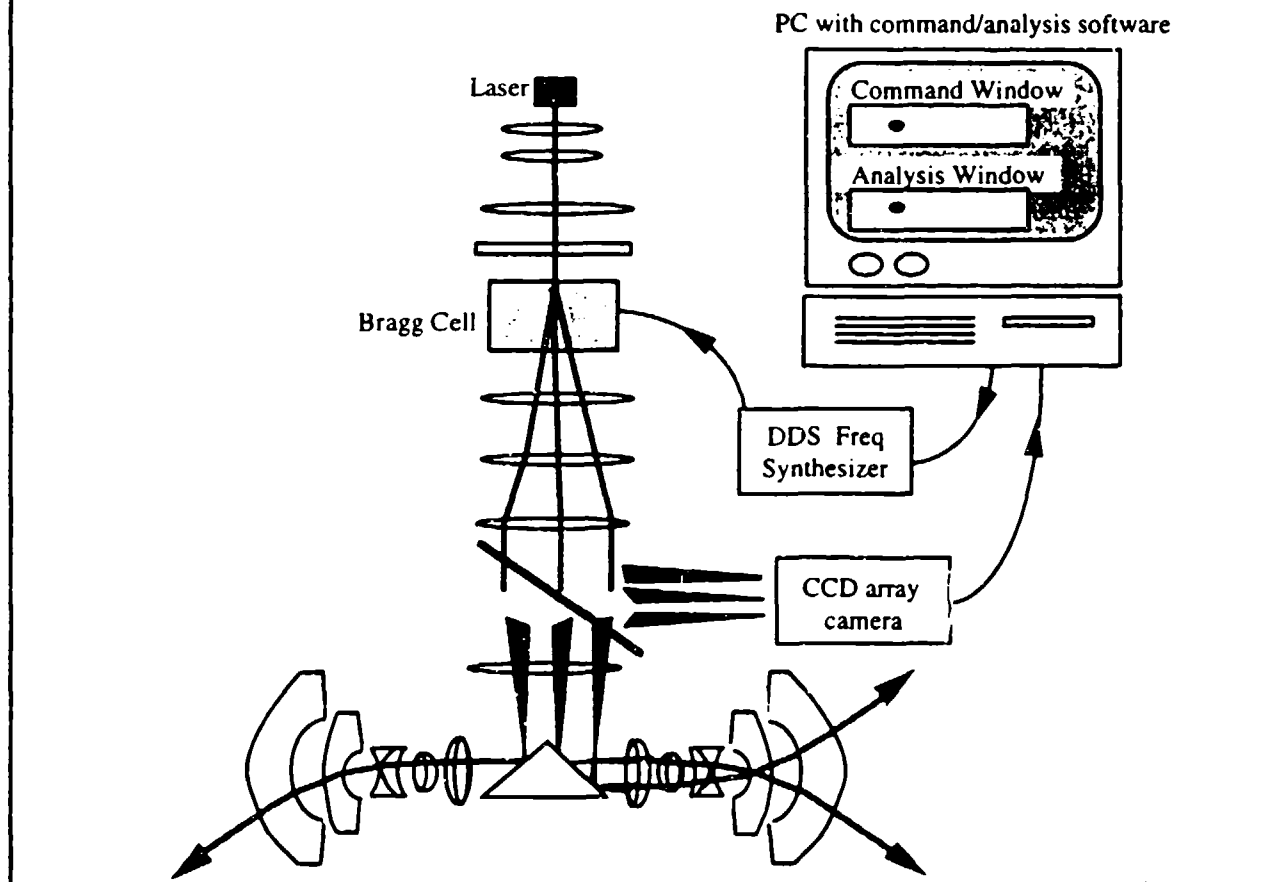

The CCD camera and image analysis software serve as a built-in diagnostic system for the breadboard. Performance parameters that can be directly measured include beam size, beam shape, beam location, scan range, scan linearity, optical efficiency, zoom factor, and multiple beam generation. The CCD camera does not respond fast enough to measure the 30 microsecond switching response.


The PC converts intended steering directions selected in the command window into new horizontal and vertical frequencies for the DDS frequency generator that feed into the Bragg cells. 16-bit frequency data words are loaded into 4096-word FIFO (first-in first-out) memories on a custom digital interface board, and the FIFO memory is continuously cycled to the DDS at the rate of 400 nsec/word. Therefore, to completely fill the 40 microsecond (25 mm) aperture of the 500 Spot Bragg Cell only 100 of the 4096 available FIFO words need to be occupied. In other words, if the FIFO contents are forced to change more rapidly than 100 words at a time then only partially developed deflection beams will be produced by the Bragg cells due to subaperture fill times. A simplified schematic of the electronics subsystem is shown in Figure 3-6.

Figure 3-6. Simplified Electronics Schematic

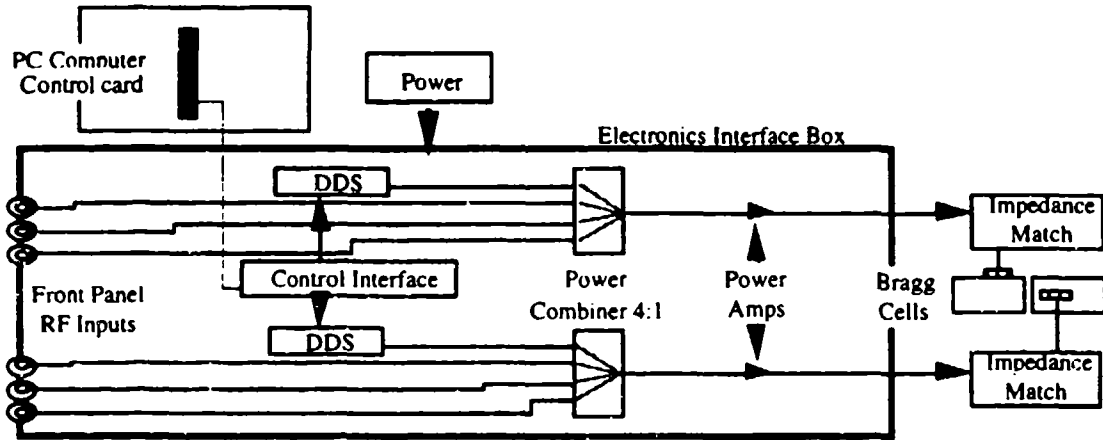

Optical defocus or "zooming" of the beam is executed from a pull-down menu in which zooms from 1X to 11X may be selected. The nominal beam steering direction is unchanged by the zooming function. Specific zoom ratios are accomplished by a combination of multiple frequencies switched at specific duty cycles. The different frequencies will deflect beams in different directions, and the abbreviated duty cycles (less than the full Bragg cell aperture) create smaller diffraction apertures and hence wider divergence angles. The combination of these two effects can be tailored to produce infinitely varying zoom ratios. The FIFO memories are loaded with the appropriate frequency data and duty cycles such that all the required frequencies are always present within the Bragg cell aperture. For example, Figure 3-7 illustrates the spot pattern that results in a 5X beam zoom using 3 frequencies per acoustic axis switched at a duty cycle of 1/3 the Bragg cell aperture of each axis.

Figure 3-7. Example Beam Pattern of 5X Zoom

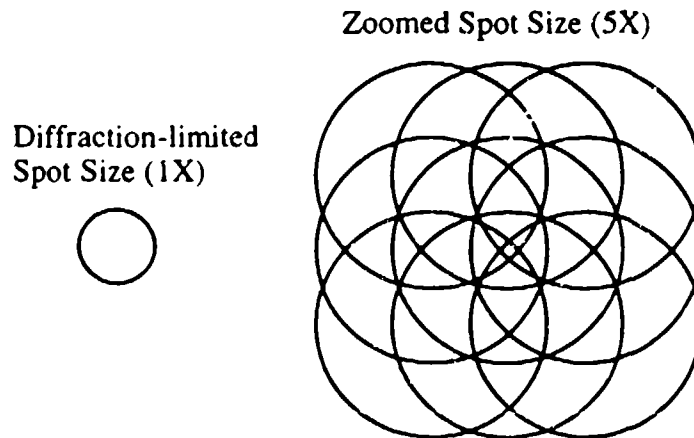


4.0 Subsystem Components

4.1 Acousto-optic Bragg Cell Design and Test

The design of Bragg cells requires a detailed understanding of the fundamental processes illustrated in Figure 4.1-1, which will not be discussed in detail here since many references have covered this in the past. Briefly, an input sinusoidal electrical signal is converted to traveling acoustic waves in the Bragg cell by a piezoelectric transducer.

The acoustic waves produce a refractive index grating through the photoelastic effect, by which the incident light beam is angularly deflected according to the standard theory of diffraction from periodic gratings. The grating spacing will be an inverse function of frequency, and to first order the deflected optical beam angle will be a linear function of the input frequency.

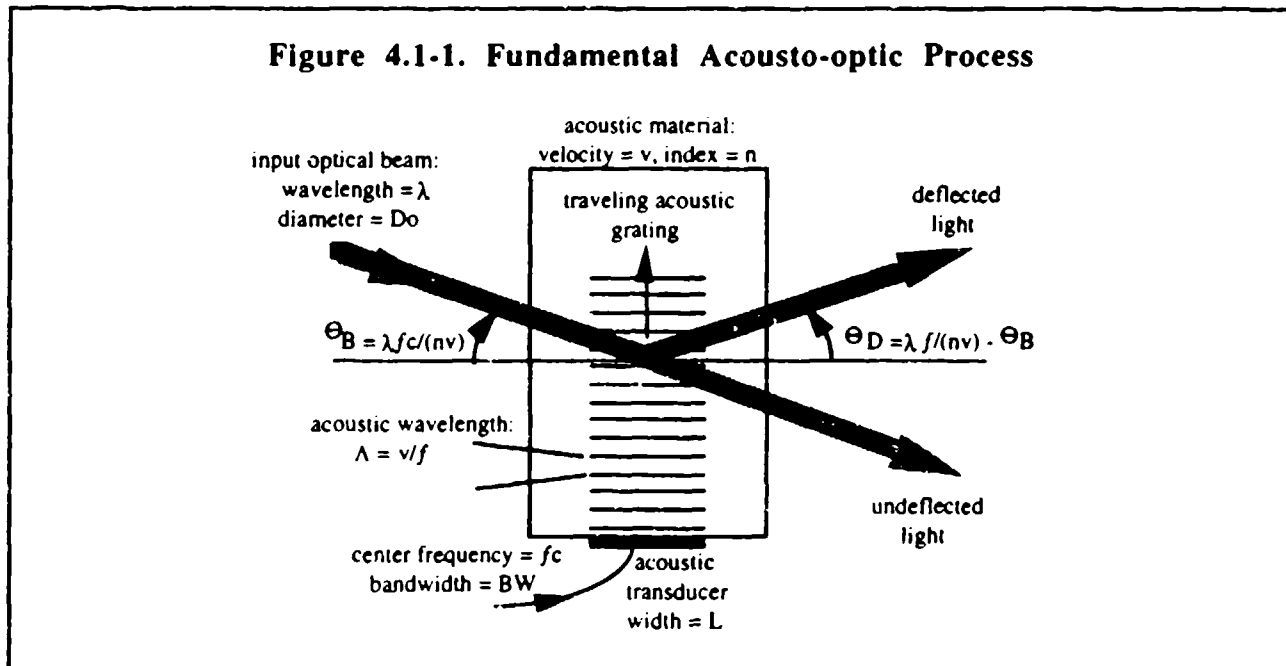

It may be seen in Figure 4.1-1 that the AO material parameters that determine the deflected beam angle, Θ_D , are the acoustic velocity, v , and optical index, n . Material parameters that determine the amount of light that is deflected include the acoustic attenuation coefficient Γ [dB/m/GHz²] and the deflection figure-of-merit $M_2 = n^6 p^2 / (\rho v^3)$ [s³/kg], where ρ is the mass density and p is the photoelastic constant. The time-bandwidth parameter, TBW, is defined as the product of: 1) the time that it is required for the acoustic signal in the Bragg cell to traverse the width of the input optical beam, D_0 , and 2) the bandwidth of the electrical stimulus, BW . This is expressed as

$$TBW = (D_0 / v) BW \quad (4.1-1)$$

where (D_0 / v) is the acoustic transit time. From Eq. (4.1-1) it appears that a large TBW can be obtained by simply choosing a material with low velocity and by using a large electrical bandwidth for a fixed beam width. However, there are other practical limitations, since one must also consider the effects that a large bandwidth may have on the deflection efficiency. One limitation to

the bandwidth arises due to the increase of acoustic attenuation, Γ , with frequency. For most acoustic crystals the intrinsic attenuation varies with approximately the square of the operation frequency. A simple derivation shows that TBW is limited by acoustic attenuation according to

$$TBW \approx 10^{17} / (v \Gamma BW) \quad (4.1-2)$$

where the assumption is made that the fractional bandwidth (BW / f_c) is approximately 0.5 for ease of impedance matching to the acoustic transducer. Performance vs. material trades can therefore be made by solving Eq. (4.1-2) for BW and then Eq. (4.1-1) for D_0 until an overall optimum Bragg cell design is achieved.

There is, however, another major consideration for the choice of acoustic material: the potential wavefront distortion of the deflected beam due to thermal gradients in the material. The thermal gradients arise due to the imperfect conversion of the input electrical signal into acoustic waves by the transducer, and also to some degree by acoustic attenuation within the Bragg cell. A thermal distortion figure-of-merit can be defined for acoustic materials as

$$M_{th} = n M_2 k / \zeta \quad (4.1-3)$$


where k [W/m°C] is the thermal conductivity and ζ [1/°C] is the temperature dependence of the acoustic velocity. The appearance of n and M_2 in this definition reflects the fact that materials with higher diffraction potential require less drive power for a given level of optical efficiency and hence earn a better Figure of merit for thermal distortion. If thermal distortion is a problem, selective heat sinking of the Bragg cell can often alleviate the situation by predominantly forcing only easily correctable linear and/or quadratic distortion terms to occur. Similarly, a figure-of-merit for optical deflection efficiency is given by

$$M_{de} = M_2 / (v \Gamma^{1/2}) \quad (4.1-4)$$

where the acoustic attenuation parameter, Γ , and velocity, v , account for the practical limitations imposed on the actual design of high time-bandwidth Bragg cells. A material trade for high TBW Bragg cells can then be made by plotting M_{th} versus M_{de} as shown in Figure 4.1-2 for six common Bragg cell materials. The shear-wave <110>-mode in Tellurium Dioxide (TeO_2) is seen to have the best overall combination of features for this type of application. The <110>-mode of TeO_2 has been well explored in the literature due to its very slow velocity of 617 [m/sec] and very high $M_2 \approx 1.2 \times 10^{-12}$ [s³/kg], and is commonly referred to as "slow-shear" TeO_2 . The rather high value of $G \approx 22000$ [dB/m/GHz²] in slow-shear TeO_2 severely limits its bandwidth range via Eq. (4.1-2), but does not typically degrade optical efficiency at smaller bandwidths due to the offsetting effects of the very high M_2 via Eq. (4.1-4). There are, however, numerous complications involved in properly utilizing slow-shear TeO_2 in practice, especially due to its acoustic anisotropy and optical birefringent properties.

With TeO_2 as the chosen acoustic material the bandwidth can be found from Eq. (4.1-2) to be about 14 MHz for the 500 spot (horizontal) acoustic axis. The beam diameter D_0 can then be found from Eq. (4.1-1) to be 22 mm. This results in a 100% switching response time of $D_0/v \approx 36$ microsec. If the beam diameter for the 200 spot axis is chosen to be 11 mm (in order to produce a 2:1 aspect ratio corresponding to the output of many laser diodes) then the bandwidth from Eq. (4.1-1) is 12 MHz, which is well below the maximum limit imposed by Eq. (4.1-2).

Figure 4.1-2. Acoustic Material Figure-of-Merit Trade

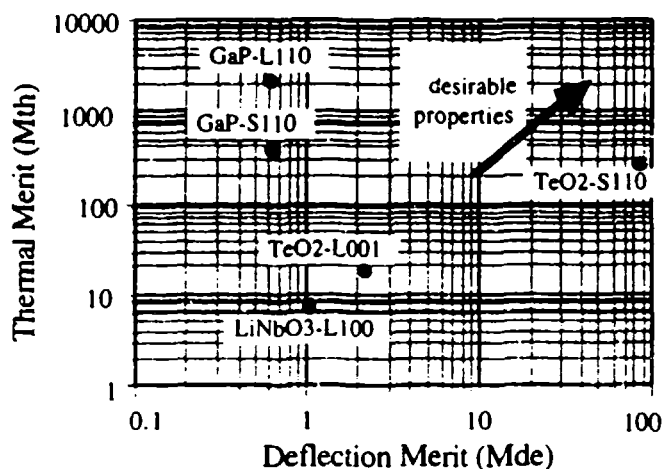


As mentioned previously, the choice of center frequency is somewhat complicated by the birefringence in TeO₂. A low center frequency is typically desired in order to reduce acoustic attenuation, and a fractional bandwidth of less than 60% is also desired for piezoelectric transducer and impedance matching requirements. In the pure $\langle 110 \rangle$ "slow shear" mode of TeO₂ the inherent center frequency is fixed at about 24 MHz for an optical wavelength of 830 nm. This would result in a marginal fractional bandwidth of 58%. A Bragg cell designed at this frequency, however, will have a severe degenerate notch in the deflection response when driven to high optical efficiency centered at the 24 MHz frequency.

The explanation for this "self" or "1-tone" degeneracy is illustrated in the momentum-matching diagram of Figure 4.1-3. The incident and deflected output light vectors, \mathbf{k}_i and \mathbf{k}_o respectively, are defined by $2\pi n_x/\lambda$, where the extraordinary index (n_e) is used for the incident light and the ordinary index (n_o) is used for the output light. For a Bragg interaction to occur these two vectors must form a triangle with the acoustic vector \mathbf{K}_a , defined by $2\pi f/v$. Due to the symmetry of the pure-mode $\langle 110 \rangle$ interaction it is seen that the deflected beam may be re-deflected to the outer index along \mathbf{k}'_o at the 24 MHz center frequency. The degenerate interaction, denoted by the primed \mathbf{k} 's in Figure 4.1-3, does not have as much bandwidth due to the non-tangential nature of the interaction, leading to the notch formation in the response band of the primary interaction.

The degeneracy may be removed, and/or the center frequency increased, by rotating the acoustic mode slightly off of the pure-mode $\langle 110 \rangle$ slow-shear axis. Alternatively, the center frequency could be increased by utilizing a phased array piezoelectric transducer. In other applications it may also be advantageous to rotate the optical axis of the Bragg cell. For the present application a simple acoustical rotation is the logical choice based on a trade of electrical drive power and size of the TeO₂ crystal. However, in a 2-D deflector it is not possible to acoustically rotate both axes in a single crystal without also inducing unwanted optical rotations. The easiest solution to this dilemma is to use two separate crystals that are each acoustically rotated. These can then be brought together, or even glued together, to form a quasi-monolithic single Bragg cell. This approach also serves to reduce the fabrication complexities of a 2-D single crystal Bragg cell.


Figure 4.1-3. Degenerate Response in On-Axis TeO₂

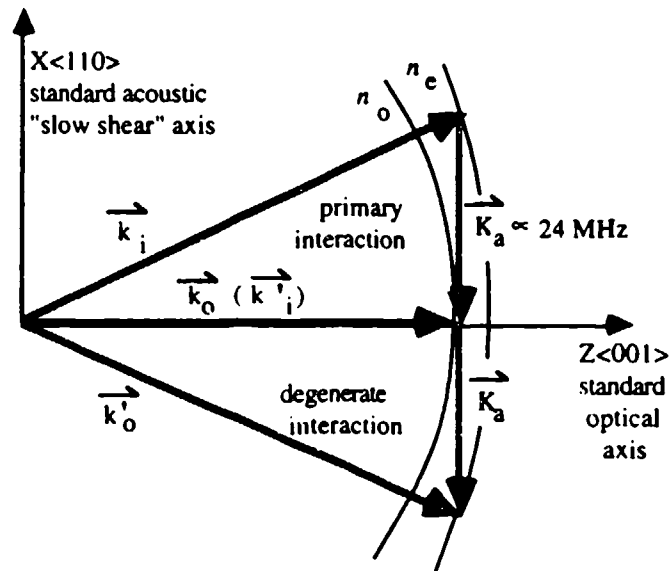

Several primary issues must be addressed in acoustically rotating a TeO₂ crystal: the center frequency and bandwidth of the interaction, the "walkoff" of the acoustic energy in the crystal due to anisotropy of the velocity, and the conjugate frequency pair at which secondary interactions occur. These secondary interactions are actually split manifestations of the degenerate 1-tone interaction that occurs in the <110> pure-mode, and may be considered as "2-tone" degeneracies since two frequencies are involved. For applications where only one frequency is introduced into the Bragg cell at a time then 2-tone degeneracy is not a concern. For the lasercom demonstration system, however, it is desired to use discrete simultaneous frequencies to produce multiple deflected beams, so if a 2-tone degeneracy exists then it would likely be encountered in operation.


Figure 4.1-4 illustrates the concept of acoustic rotation and the usable bandwidth region where 1- and 2-tone degeneracy can be avoided. In this configuration the 1-tone degeneracy is prevented as long as the bandwidth does not extend below the frequency corresponding to K_{10} . This also happens to be the condition for preventing 2-tone degeneracies since it can be seen that frequencies higher than that corresponding to K_{10} cannot re-match to the outer index. The only practical limitation to the upper end of the bandwidth is how well the line of interaction matches to the inner index. For maximum bandwidth the interaction line should not be perfectly tangent to the inner index but should be slightly "de-tuned" by the input k_i angle so as to bisect the inner index in two places with a small offset mismatch at the center frequency.

Figure 4.1-4. Rotated AO Interaction in TeO₂: High-Band Mode

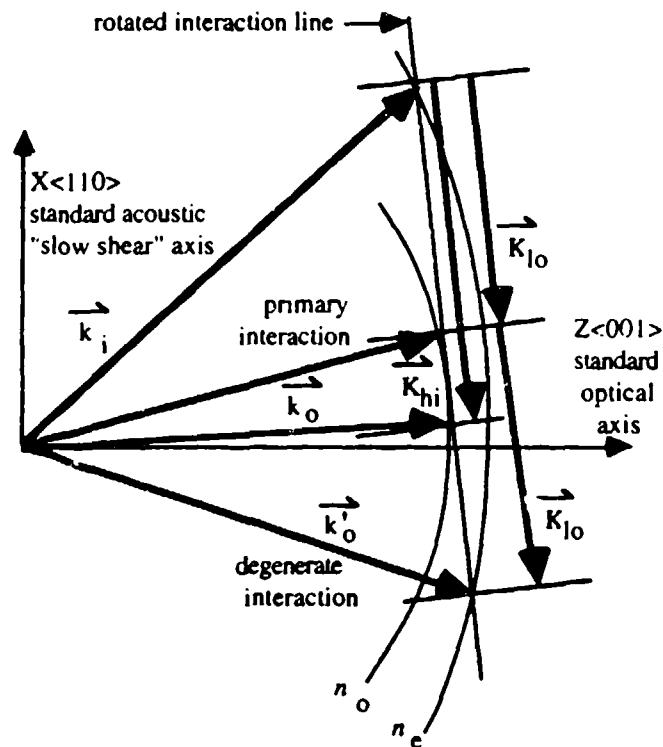

Note that the rotated AO interaction illustrated in Figure 4.1-4 may be reversed in operation such that the degenerate interaction is utilized as the primary interaction, as shown in Figure 4.1-5. In this case 1- and 2-tone degeneracies are prevented as long as the bandwidth does not extend above the frequency corresponding to K_{hi} . It can be seen in Figure 4.1-5 that the acoustic vectors are shorter than in the previous case, so this orientation is referred to as the up-shifted low frequency interaction, or "low-band" mode. The advantage of the low-band mode is less acoustic attenuation and, more significantly, a wider bandwidth due to the fundamental $1/f_c$ dependence of interaction bandwidth for a given transducer size.


Figure 4.1-5. Rotated AO Interaction in TeO₂: Low-Band Mode

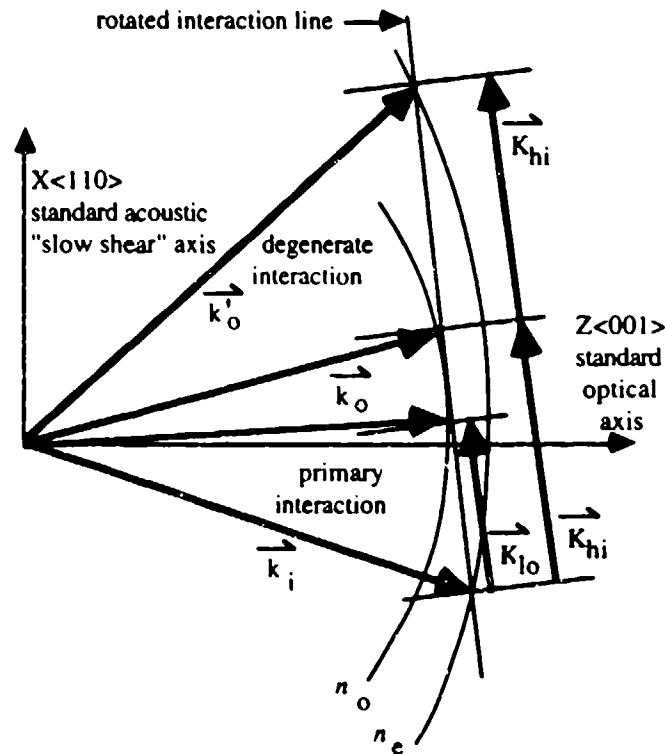

The theoretical small-signal deflection response of both the high- and low-band modes is shown in Figure 4.1-6, normalized to 1 watt of electrical drive power. Here the acoustic rotation is 2° and the optical aperture is 22 mm as required for the 500 Spot Bragg Cell axis. It can be seen that the center frequency of the low-band mode is hardly changed from the non-rotated case of ≈ 24 MHz due to the circularly-symmetric nature of optical activity in the vicinity of the $<001>$ axis, but the high-band mode center frequency has moved significantly upward to nearly 40 MHz. Degenerate effects are not included in the responses shown in Figure 4.1-6.

In order to obtain the required 14 MHz bandwidth for the 500 Spot Bragg Cell axis it is seen from Figure 4.1-6 that only the low-band interaction mode is practical. The 1-tone degeneracy occurs at about 33 MHz, and since the degenerate notch width is about 10% of the total interaction bandwidth then the upper bandwidth limit of the low-band mode should not exceed 31 MHz. Therefore the 500 spot acoustic axis can be satisfied with a 14 MHz bandwidth centered at 24 MHz on the low-band interaction mode. The resulting fractional bandwidth is 58%.

Figure 4.1-6. Theoretical Deflection Response of Low- and High- Band Interactions in 2° Acoustically Rotated TeO₂

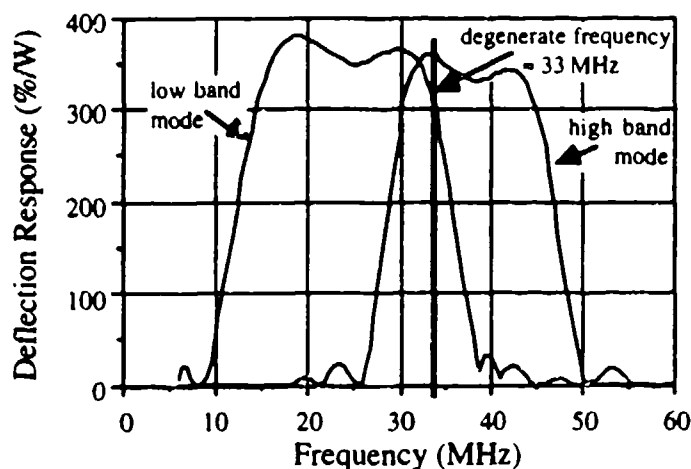

The same center frequency of 24 MHz was chosen for the 200 spot acoustic axis in order to use duplicate and interchangeable electronic frequency generation circuits for the two Bragg cell axes. The deflection response of the 200 spot axis is essentially the same as that shown in Figure 4.1-6 for the 500 spot axis. For acoustic rotation angles less than 4° the energy walkoff angle due to anisotropy is about 10 times greater, so for a 2° acoustic rotation the crystal must be sized properly for a 20° beam propagation over the optical aperture length. The approximate dimensions of the 500 Spot Bragg Cell are shown in Figure 4.1-7. Acoustic reflection interference from the back surface of the Bragg cell is almost completely eliminated by appropriately beveling and coating the back surface with a proprietary acoustic absorbing material.

RF impedance matching circuits were designed and constructed for the Bragg cells. The schematic of these circuits is shown in Figure 4.1-8. Relatively simple LC "pi"-type circuits were used for the matching, and were they constructed with discrete micro-chip components (inductors and capacitors) due to the relatively low frequencies involved. The starting point impedance for the 200 Spot Bragg Cell and the final matched impedance are shown in Figure 4.1-9, in Smith Chart form. Similar data for the 500 Spot Bragg Cell is shown in Figure 4.1-10.

Figure 4.1-7. Dimensions of 500 Spot (Horizontal) Bragg Cell


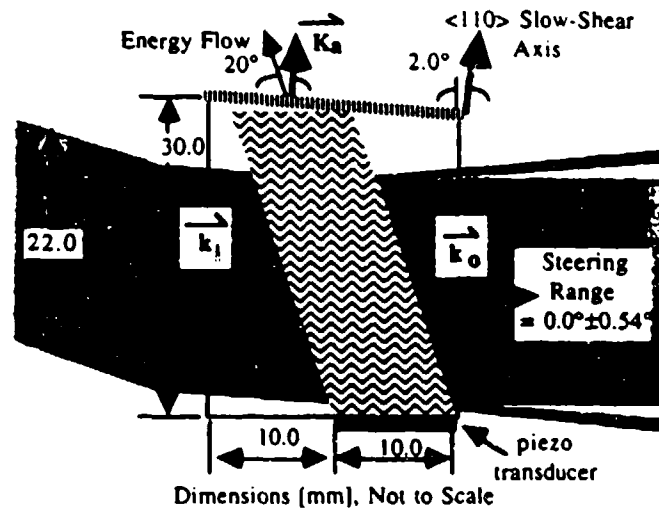


Figure 4.1-8. Bragg Cell Impedance Match Circuits

200 Spot Cell Circuit

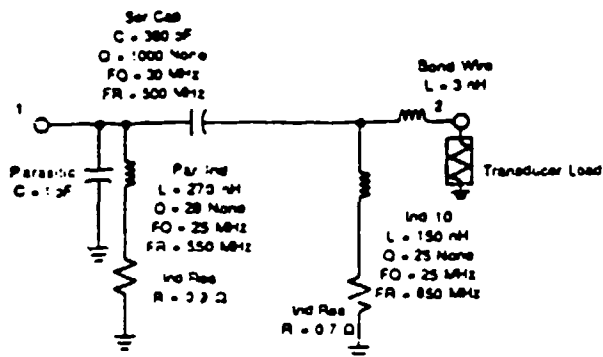

500 Spot Cell Circuit


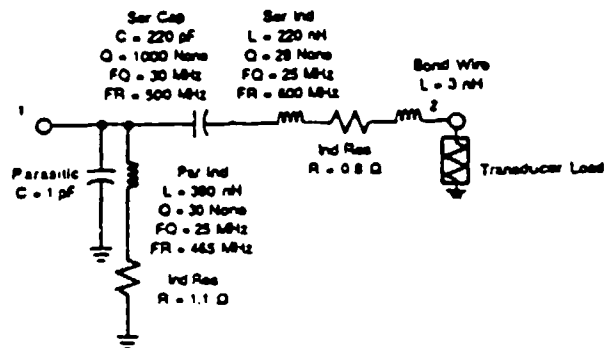


Figure 4.1-9. Starting and Finishing Impedance for 200 Spot Bragg Cell

Starting Impedance

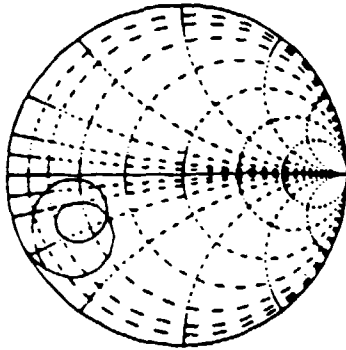

Finishing Impedance



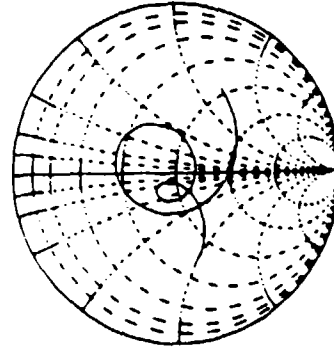


Figure 4.1-10. Starting and Finishing Impedance for 500 Spot Bragg Cell

Starting Impedance

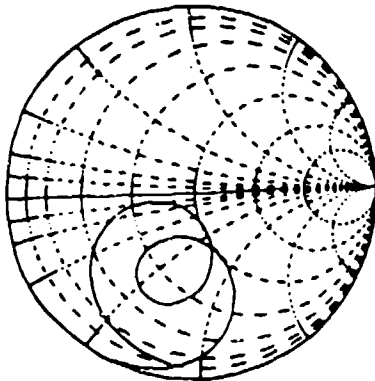

Finishing Impedance

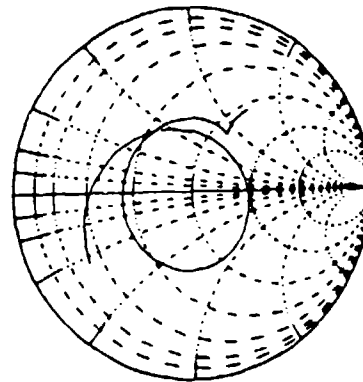


The resulting VSWR for the 200 and 500 Spot Bragg Cells is shown in Figure 4.1-11. The frequency range in Figures 4.1-9 through 4.1-11 ranges from 15 to 35 MHz, although only 17 to 31 MHz is actually used during operation of the Bragg cells. The VSWR values over the range of operation are no worse than 2.5:1, corresponding to an electrical insertion loss of less than 1.0 dB ($\approx 20\%$ power transmission loss). All subsequent Bragg cell performance references to deflection efficiency vs. drive power (i.e., expressed as %/Watt) include this RF matching loss.

The small-signal deflection efficiency response of the 500 Spot Bragg cell is shown in Figure 4.1-12. The theoretical response is shown on the left-hand side, assuming a flat matching VSWR of 2.0. On the right-hand side of Figure 4.1-12 is the experimentally measured response, which has a match VSWR of about 2.0 at 20 MHz as was shown in Figure 4.1-11. The small-signal response is a commonly used measurement for acousto-optic devices because it avoids the issue of the non-linear deflection response with increasing RF drive power. In other words, it is a

convenient method for comparing the efficiency performance of different AO devices without having to state the exact drive power that was used. The peak response, measured at about 20 MHz, is seen to be $\approx 700\%/W$. The slight deviation from the theoretical response at frequencies greater than 20 MHz can be seen to be at least partially due to the rising VSWR in Figure 4.1-11. Very similar results were obtained for the 200 Spot Bragg cell, except the peak efficiency was measured to be about $400\%/W$.

Figure 4.1-11. Matched VSWR for 200 and 500 Spot Bragg Cells

200 Spot Cell VSWR

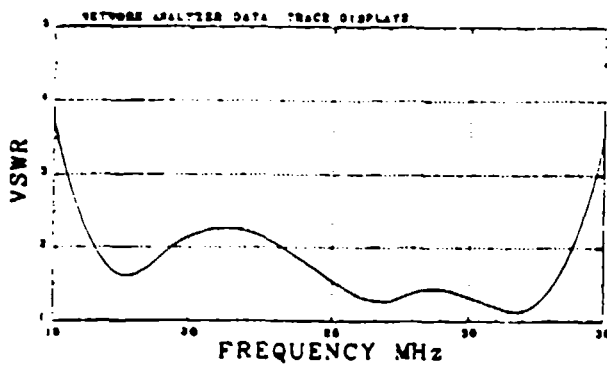

500 Spot Cell VSWR



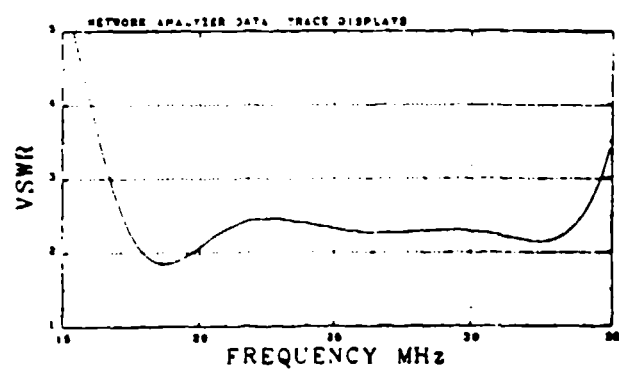


Figure 4.1-12. Theoretical vs. Experimental Deflection Efficiency of the 500 Spot Bragg Cell

Theoretical:
assumes flat 2.0 VSWR

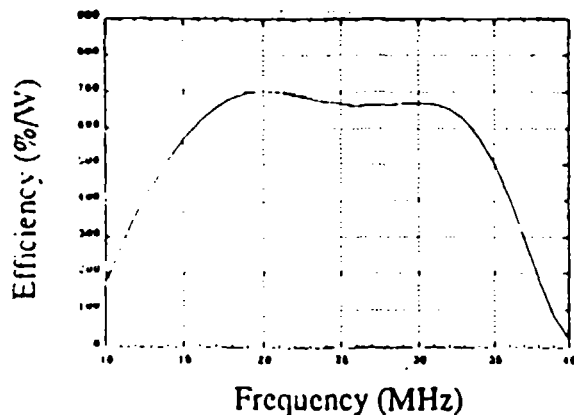


Experimental:
VSWR ≈ 2.0 @ 20 MHz, then rising

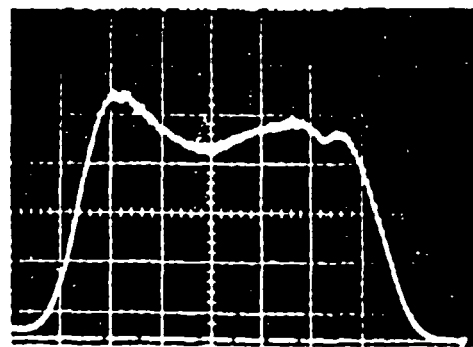

The optical switching response, or steering speed, of the 500 Spot Bragg Cell was measured using a pulsed input RF signal. Since the optical deflection angle is a function of the RF frequency that is inserted into the cell, then the speed at which the angle can be changed depends on how fast the frequency content of the cell can be changed. The switching speed will therefore be determined by the ratio of the illumination beam width over the acoustic velocity. For this test the 500 Spot Cell was illuminated with an accurately measured 24 mm wide optical beam, which should correspond to about 40 μsec of acoustic aperture if the acoustic velocity is 620 m/sec in the slow-shear TeO_2 . For a given beam width the switching speed is solely determined by the acoustic velocity, so this test is really a verification of the acoustic velocity of the Bragg cell. Therefore, if an RF pulse of 15 μsec duration is input to cell then it should require a total of 55 μsec from the time that the pulse first enters the illumination aperture until it completely disappears. If the deflected beam is monitored on a photodetector then the response should be seen to correspondingly rise and fall within the same 55 μsec . This test and the experimental results are illustrated in Figure 4.1-13.


Figure 4.1-13. Switching Response Test

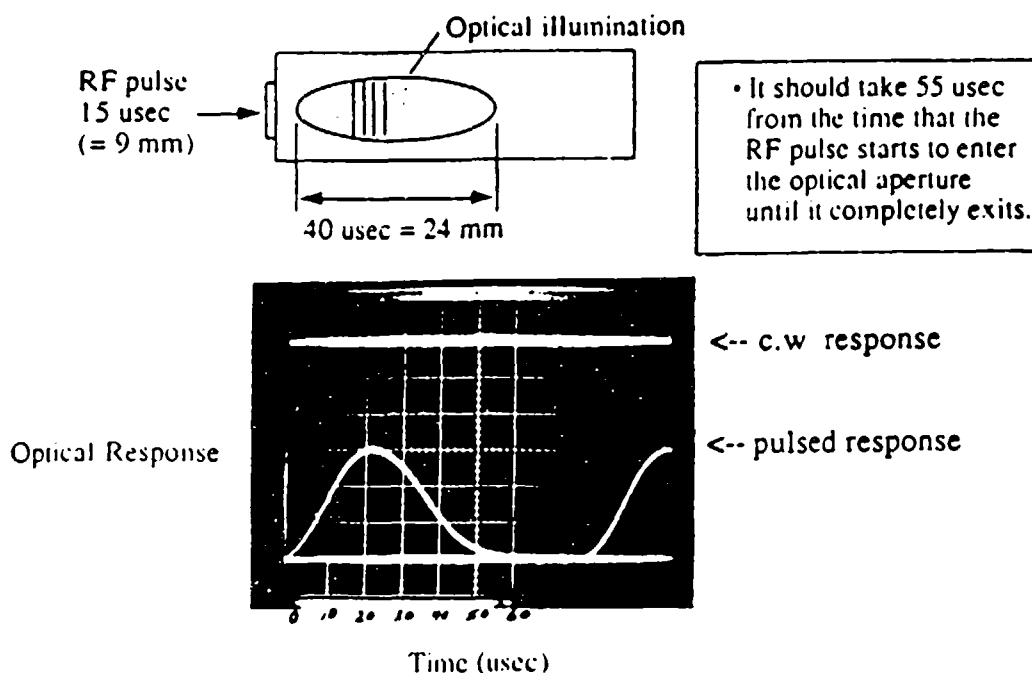

The illumination for the test in Figure 4.1-13 was a Gaussian intensity profile; had the illumination been uniform then the response would have had a flat "plateau" between about 15 and 40 μsec . The response is seen to correctly rise and fall at the 55 μsec interval, confirming that the 100% switching response time is 40 μsec for the 500 Spot Bragg Cell. Note that the response peaks at about half the c.w. response simply due to the fact that the RF pulse always occupies less than half of the illumination aperture. The 200 Spot Bragg Cell similarly would have a 200 μsec switching speed due to its smaller 20 μsec aperture.

Figure 4.1-14 illustrates the "saturated" response of the 500 Spot Bragg Cell. At about 400 mW of input RF power the deflection response peaks on this cell and will actually start to decline with increasing drive power. This saturation effect will cause the frequency response of the cell to flatten out to a large degree as shown in Figure 4.1-14. The saturated response is seen to deviate about $\pm 5\%$ around the nominal value.

Figure 4.1-14. Saturated Response of the 500 Spot Bragg Cell

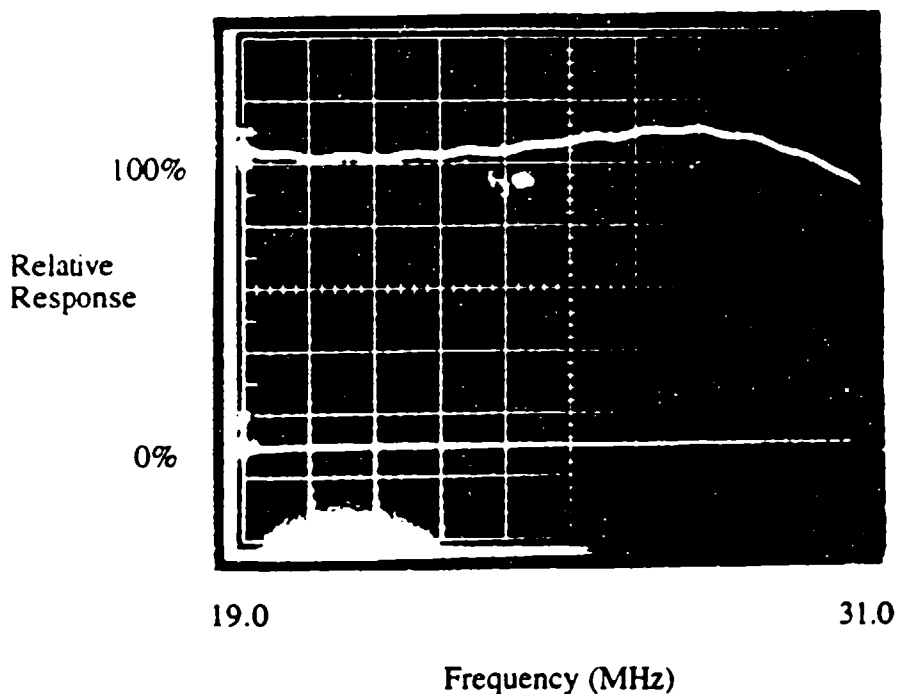

A thermal analysis was performed on the Bragg cells to investigate the potential wavefront distortion effects caused by temperature gradients inside the cells. Imperfect conversion of the input RF drive power at the piezoelectric transducer is the source of thermal heating, and additional heating occurs due to absorbed acoustic energy at the end of the cell and acoustic attenuation along the length of the cell. The resulting temperature gradients can cause optical distortions due to thermal expansion of the width of the Bragg cell (W) and the temperature dependence of the acoustic velocity (v) and index of refraction (n). The optical phase, ϕ_B , at position " l " from the transducer end of the cell along the exiting face is given by


$$\phi_B(l) = 2\pi \left\{ f \int_0^l \frac{1}{v} dx + \frac{n(l)W(l)}{\lambda_0} \right\} \quad (4.1-5)$$

where f is the RF frequency of excitation (i.e., ≈ 24 MHz) and λ_0 is the optical wave length.

Figure 4.1-15 shows the parameters and geometry of the heat sinking used in the thermal analysis, and Figure 4.1-16 shows the results of the analysis. The top of Figure 4.1-16 shows the optical wavefront contours that would result from the temperature gradients, and the bottom of Figure 4.1-16 shows the "corrected" wavefront contours when the simple tilt and quadratic focus terms have been removed. The focus correction can be easily implemented by adjusting the appropriate spherical lens in the breadboard optics, and the tilt term is simply an angular deflection offset. This shows that heatsinking at the back face of the cell produces a very large region of the Bragg cell that is predominantly free of optical aberrations to less than $\lambda/10$ peak-to-valley. This occurs because the symmetry of the temperature gradients along the acoustic axis of the cells lend themselves to well behaved optical distortions that are of low enough order (spherical and linear) to be easily corrected.

Figure 4.1-15. Geometry and Parameters for Thermal Analysis

SIDE VIEW

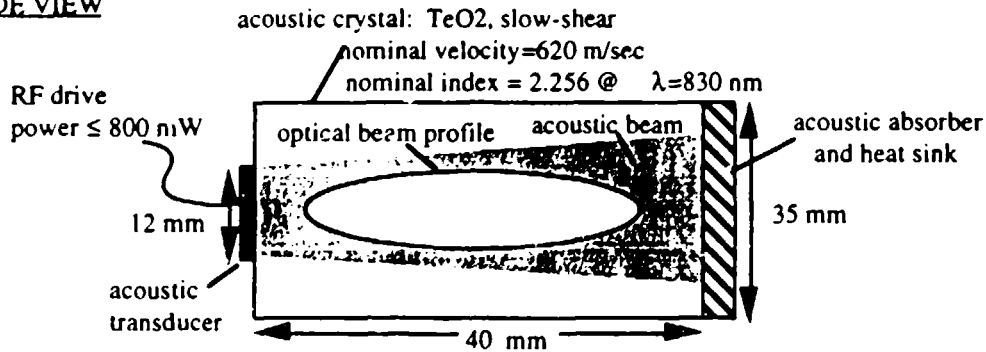

TOP VIEW


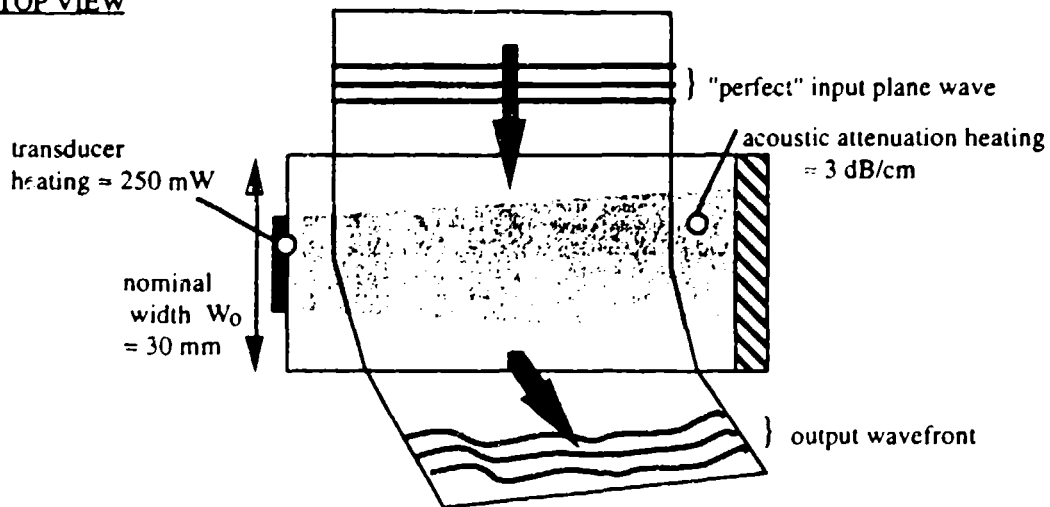


Figure 4.1-16. Raw and Corrected Wavefront Contours


Raw Wavefront Analysis

- integrated wavefront at exit face of cell
- $\lambda/2$ per contour, 8.2λ total deviation

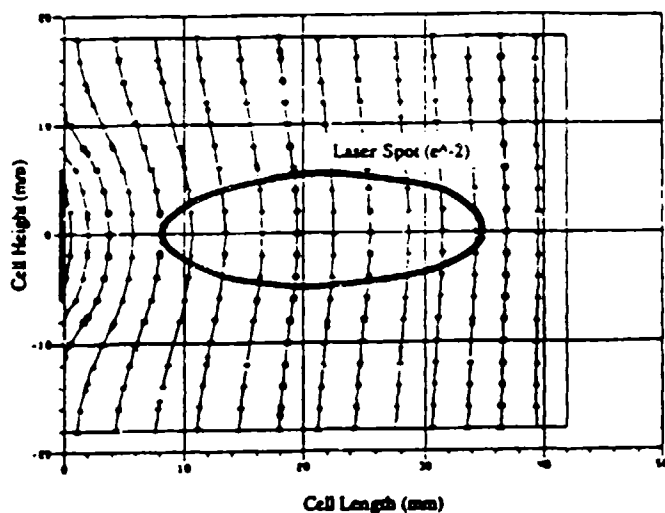

Corrected Wavefront Analysis

- corrected for linear (tilt) and quadratic (focus) terms
- $\lambda/10$ per contour

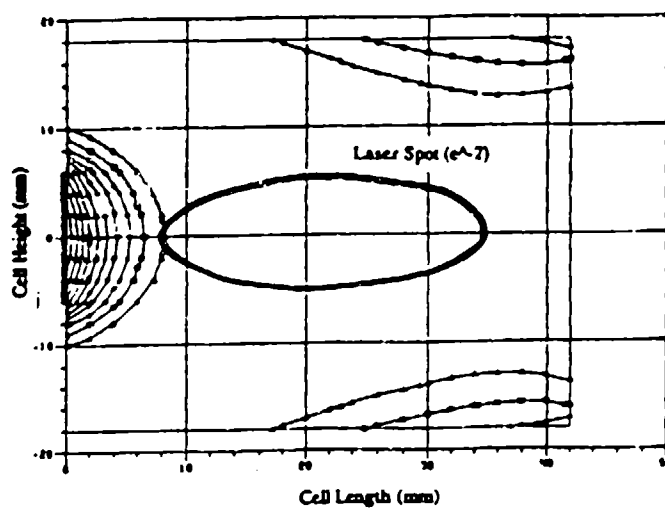

4.2 Optics

4.2.1 Demonstration Optics Design

The purpose of the demonstration optics was to show proof of concept without the expense of building a custom system. Figure 4.2.1-1 illustrates the layout of the demonstration optics. All off-the-shelf optical components were used (except for the Bragg cells) in the breadboard design.

Figure 4.2.1-1. Demonstration Optics Layout

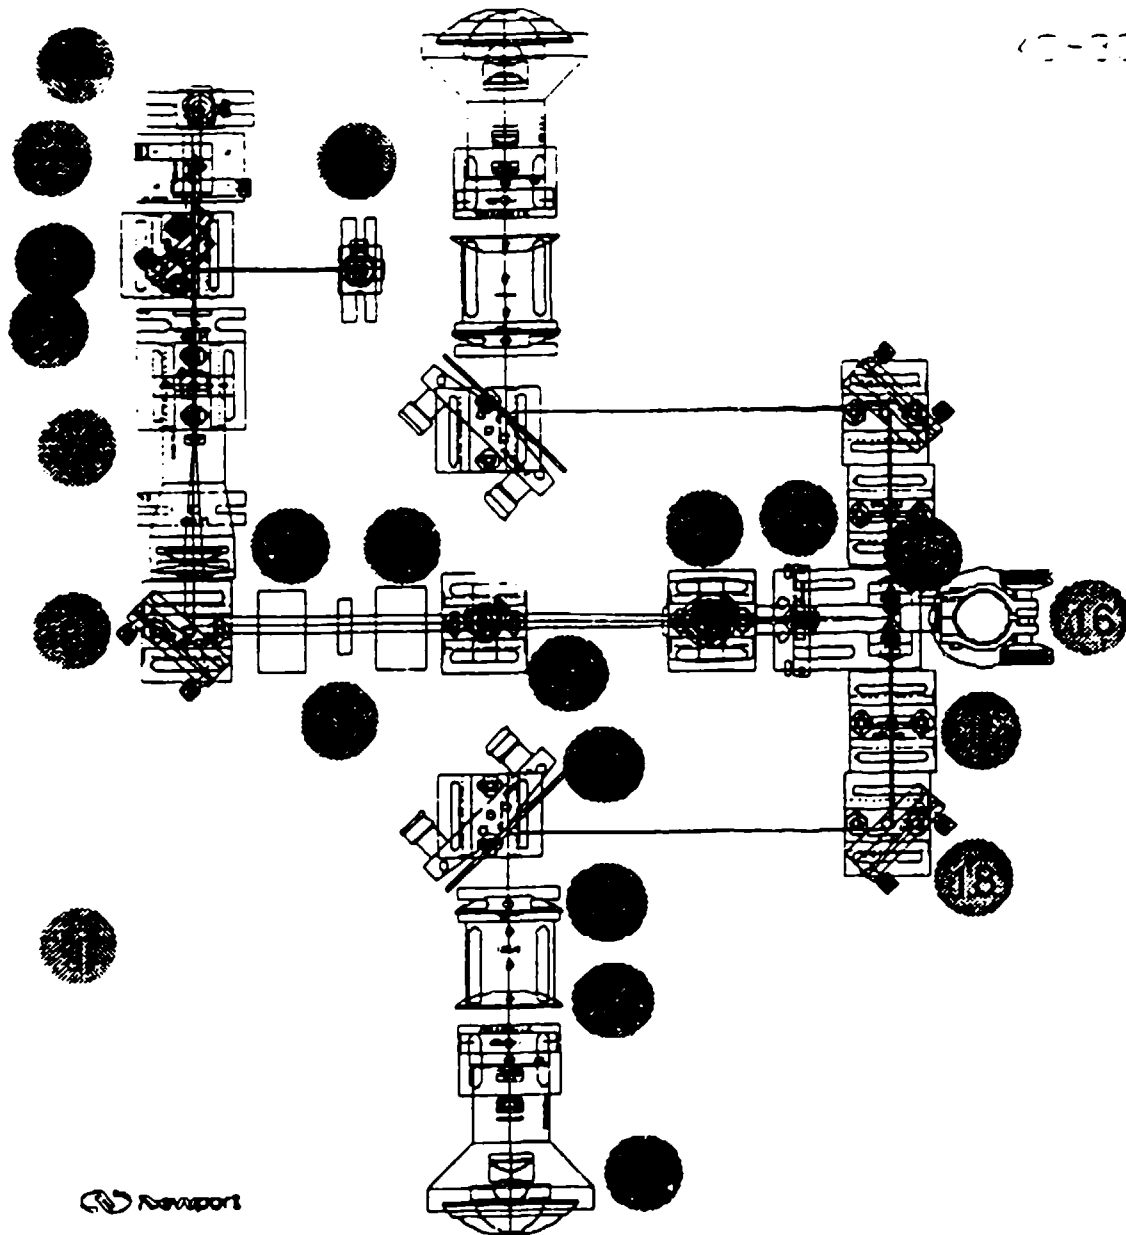


Table 4.2.1-1 contains a list of parts in the Lasercom system illustrated above. Only one 180 degree field is enumerated, with the other field identical.

Table 4.2.1-1. Demonstration Optical Hardware List

- 1) The base plate is a 2 inch thick 3 foot square optical table with a one inch 1/4-20 hole grid pattern.
- 2) The 25 mW 830 nm laser and collimator.
- 3) The 10 mW 670 nm laser and collimator.
- 4) A 2X anamorphic corrector prism pair.
- 5) Hot mirror beam combiner (reflects IR, passes visible).
- 6) A half wave plate and a quarter wave plate.
- 7) A 6X beam expander.
- 8) A 2 inch Folding Mirror.
- 9) The Horizontal Bragg Cell.
- 10) A half wave plate.
- 11) The Vertical Bragg Cell.
- 12) The Horizontal Fourier Transform Lens (300 mm).
- 13) The camera pickoff beam splitter, the camera's Vertical Fourier transform lens, and CCD camera suspended above.
- 14) Holds the Vertical Fourier Transform Lens (80 mm) for the projection legs.
- 15) The image divider mirrors, and two 40 mm Lenses (one for each half field).
- 16) Camera support post.
- 17) 100 mm lens.
- 18) A 2 Inch fold mirror.
- 19) A 3 Inch fold mirror.
- 20) 150 mm lens.
- 21) 150 mm lens.
- 22) 8 mm Nikon Fisheye lens.

The optics consist of several sections. The first part is the illumination optics (2-8), followed by the Bragg cells that do the beam steering (9-11). Next come the Fourier transform optics that form the beam waists (12-14). The beam waist field is then divided in half and each half reimaged to the input field of the fisheye lenses (15-21). Finally, the fisheye lenses project the beams out to free space (22).

This system was optimized for an 830 nm laser. However, to provide a visible demonstration capability, a 670 nm laser was also provided. With the 670 nm laser however, the bandwidth of the Bragg cells is only half that for the 830 nm laser. The power to the laser is provided by a BNC connector on the back panel of the system control box. This connector supplies 5 volts to the two laser drivers. Inline on the power cable is a switch that selects either the RED laser or the IR laser. Only one laser can be used at a time to avoid spot confusion at the CCD camera plane. The aspect ratio required at the Bragg cells is 2:1 with the long axis in the horizontal direction. The aspect ratio out of the RED laser is 4:1, so a 2X prismatic beam expander is used to form the correct ratio. The output of the IR laser is about 2:1, so no correction is required.

The beams are combined using a hot mirror. A hot mirror is a dichroic surface that reflects IR (above 700 nm) and transmits visible light. The beam sizes at this point are about 2 by 4 mm. A 6X beam expander is used to create a 12 by 24 mm beam to illuminate the Bragg cells. The

Fourier Cylinders then form a scan plane with a field of 500 spots by 200 spots. A beamsplitter reflects a small portion of the light to the CCD TV camera for spot position monitoring. The top half and bottom half of the fields are divided by a mirror pair into the left field and right fields, each with 500 by 100 spots. These fields are then reimaged and magnified to fill the input aperture of the fisheye lens. The fisheye then projects the spots to fill each half field of 180 degrees horizontally by +/- 18 degrees vertically.

The alignment procedure listed in Table 4.2.1-2 assumes that all the optical mount holders are in their normal positions (see Demonstration Optics Layout, Figure 4.2.1-1). The optical axis should be aligned to be 5 1/2 inches above the optical table. At all times observe laser safety precautions! Useful tools not supplied are an infrared viewer, an IR sensitive viewing card, a power meter, and an oscilloscope.

Table 4.2.1-2. Alignment Procedure

- 1) Place 830 nm laser with collimator into holder (2).
- 2) Rotate the laser beam to a clear area of the table.
- 3) Adjust laser until near and far field of beam is at 5 1/2 inches above the table.
- 4) Aim the beam at the center of the dichroic splitter (5).
- 5) Adjust the splitter angle to maintain the 5 1/2 inch height and project the beam along the line of components (6), (7), and (8).
- 6) Center the half wave plate and the quarter wave plate (6) on the beam.
- 7) Center the 6X beam expander (7).
- 8) Before inserting turning mirror (8), use the collimation tester (supplied) to adjust the collimation out of the 6X beam expander. Rotate the focus ring until the fringes on the view screen are parallel to the shadow of the wire.
- 9) Insert turning mirror (8) centered on the beam and folding 90 degrees toward the horizontal Bragg cell.
- 10) Position the horizontal Bragg cell (9) in the center of the beam.
- 11) Place a 300 mm lens (supplied) after the cell, and project the spot onto a detector with the detector output displayed on a scope.
- 12) Energize the cell by starting the software. Select Scan Horizontal from the menu.
- 13) Adjust the position and angle of the cell to maximize the output on the detector and maintain a flat bandshape.
- 14) Iteratively adjust the rotation of the halfwave and quarterwave plates (6) to maximize the output of the horizontal cell. Greater than 80% throughput efficiency can be obtained.
- 15) Remove the 300 mm lens.
- 16) Position the halfwave plate (10) in the center of the diffracted beam.
- 17) Position the vertical Bragg cell in the center of the diffracted beam.
- 18) Place a 300 mm lens (supplied) after the cell, and project the spot onto a detector with the detector output displayed on a scope.
- 19) Energize the cell by starting the software. Select Scan Vertical from the menu.
- 20) Adjust the position and angle of the cell to maximize the output on the detector and maintain a flat bandshape.
- 21) Iteratively adjust the rotation of the halfwave plate (10) to maximize the output of the vertical cell. Greater than 80% throughput can be obtained.
- 22) Select Scan Diagonally from the software menu and check the composite deflection efficiency. Greater than 60% should be available across the band.

Table 4.2.1-2. Alignment Procedure (Continued)

- 23) Remove the 300 mm lens.
- 24) Place the 300 mm cylinder lens in position (12). This focuses the scan horizontally.
- 25) Place the beamsplitter (13) so that the diffracted light passes through and is reflected upward.
- 26) Position the vertical Fourier lens (14) into position, centered on the beam.
- 27) Position a second cylinder lens above the beamsplitter, supported off vertical post (16).
- 28) Suspend the CCD TV camera also from post (16).
- 29) Center diffracted light on the camera.
- 30) Select Scan Vertically from the software and focus the line of light on the camera by moving the camera position up and down.
- 31) Select Scan Horizontally from the software and focus the line of light on the camera by moving the suspended cylinder lens.
- 32) Select Multibeam, 8 beam demo from the software menu.
- 33) Center the pattern on the TV camera by moving the camera.
- 34) The TV camera setup may have to be repeated after the projected beams are set up.
- 35) Focus cylinder lens (12) and (14) to form an image in front of folding and splitting mirrors (15).
- 36) Position splitting mirrors (15) to deflect the top half of the image to the left and the bottom half of the image to the right.
- 37) Choose the pattern file RIGHT0.PTN from the File Open menu.
- 38) Position the 40 mm lens (15) for a straight projection of the beams.
- 39) Position the 100 mm lens (17) in the center of the beam.
- 40) Position mirror (18) to direct the beams toward mirror (19).
- 41) Observe the image at position (19). Individual spots should be observed.
- 42) Position Mirror (19) to center the image in the center of the following lens positions.
- 43) Center lens (20) on the beam.
- 44) Center lens (21) on the beam.
- 45) Insert the Nikon Lens (22) into its holder.
- 46) Focus lens (17) to obtain clean spots on the screen.
- 47) Position mirror (19) to center the array of spots in the vertical direction and horizontally.
- 48) Finely adjust the position of lens (22) along the beam path to set the outer spots at the outer edge of the observation screen.
- 49) Iterate any adjustments out of tune.
- 50) Repeat for the other projection leg.

Note: The system can only be nominally adjusted for one wavelength laser at a time. If the 670 nm laser is used for alignment, then the 830 nm laser will no longer be aligned.

The following sections provide the CODE V® design data for the breadboard system. Table 4.2.1-3 and Figure 4.2.1-2 cover the Front-end Demonstration Optics Design and Layout, from laser to Bragg cells. The CODE V® design tool works better when starting from an infinite object, so the data below starts with the collimated beam in the Bragg cells and works backward toward the Aspherical lens in the laser collimator.

Table 4.2.1-3. Front-end Demonstration Optics Design

Code V[®] design data, from Bragg cells to laser diode.

	RDY	THI	RMD	GLA	CCY	THC
OBJ:	INFINITY	INFINITY			100	100
STO:	INFINITY	35.000000		'TEO2'	100	100
2:	INFINITY	25.000000			100	100
3:	INFINITY	3.000000		BK7_SCHOTT	100	100
4:	INFINITY	25.000000			100	100
5:	INFINITY	35.000000		'TEO2'	100	100
6:	INFINITY	50.000000			100	100
7:	INFINITY	0.000000	REFL		100	100
XDE:	0.000000	YDE:	0.000000	ZDE:	0.000000	BEN
XDC:	100	YDC:	100	ZDC:	100	
ADE:	45.000000	BDE:	0.000000	CDE:	0.000000	
ADC:	100	BDC:	100	CDC:	100	
8:	INFINITY	-50.000000			100	100
9:	-125.26610	-7.997000		SK11_SCHOTT	100	100
10:	115.19900	-4.205000		SF5_SCHOTT	100	100
11:	555.66760	-0.748000			100	100
12:	-73.85900	-5.776000		SF11_SCHOTT	100	100
13:	-110.00000	-87.180000			100	100
14:	INFINITY	-2.080000		SF11_SCHOTT	100	100
15:	-31.67600	-2.080000			100	100
16:	INFINITY	-2.080000		SF11_SCHOTT	100	100
17:	-31.67600	-50.000000			100	100
18:	INFINITY	-3.000000		BK7_SCHOTT	100	100
19:	INFINITY	-25.000000			100	100
20:	INFINITY	-3.000000		BK7_SCHOTT	100	100
21:	INFINITY	-50.000000			100	100
> 22:	INFINITY	0.000000	REFL		100	100
XDE:	0.000000	YDE:	0.000000	ZDE:	0.000000	BEN
XDC:	100	YDC:	100	ZDC:	100	
ADE:	40.000000	BDE:	0.000000	CDE:	0.000000	
ADC:	100	BDC:	100	CDC:	100	
23:	INFINITY	50.000000			100	100
24:	3.03022	3.000000		SF57_SCHOTT	0	100
ASP:						
K :	-0.233433	KC :	0			
IC :	YES	CUF:	0.000000	CCF:	100	
A :-.452234E-03		B :-.407418E-04		C :-.112171E-05		D
:-.562827E-06						
AC :	0	BC :	0	CC :	0	DC : 0
25:	9.29061	1.000000			0	100
26:	INFINITY	1.200000		BK7_SCHOTT	100	100
27:	INFINITY	0.695980			100	PIM
IMG:	INFINITY	0.000000			100	100

Table 4.2.1-3. Front-end Demonstration Optics Design (Continued)

SPECIFICATION DATA

EPD	25.00000
DIM	MM
WL	830.00
REF	1
WTW	1
XAN	0.00000
YAN	0.00000
VUX	0.00000
VLX	0.00000
VJY	0.00000
VLY	0.00000

APERTURE DATA/EDGE DEFINITIONS

CA	
CIR S1	20.000000
CIR S2	20.000000
CIR S3	15.000000
CIR S4	15.000000
CIR S5	20.000000
CIR S6	20.000000
CIR S7	25.000000
CIR S9	25.000000
CIR S10	25.000000
CIR S11	25.000000
CIR S12	25.000000
CIR S13	24.000000
CIR S14	7.000000
CIR S15	5.500000
CIR S16	7.000000
CIR S17	5.500000
CIR S18	12.500000
CIR S20	12.500000
CIR S21	12.500000
CIR S22	12.500000
CIR S24	2.500000
CIR S25	2.500000

PRIVATE CATALOG

PWL	830.00
'THIN'	1.010000
PWL	830.00
'TEO2'	2.200000

REFRACTIVE INDICES

GLASS CODE	830.00
SF57 SCHOTT	1.821707
SF11 SCHOTT	1.763120
SF5 SCHOTT	1.657453
SK11 SCHOTT	1.556411
BK7 SCHOTT	1.510206
'TEO2'	2.200000

SOLVES
PIM

Table 4.2.1-3. Front-end Demonstration Optics Design (Continued)

This is a decentered system. If elements with power are decentered or tilted, the first order properties are probably inadequate in describing the system characteristics.

INFINITE CONJUGATES

EFL	26.9927
BFL	0.6960
FFL	7102.4964
FNC	1.0797
IMG DIS	0.6960
OAL	-64.9460

PARAXIAL IMAGE

HT	0.0000
ANG	0.0000


ENTRANCE PUPIL

DIA	25.0000
THI	0.0000

EXIT PUPIL

DIA	0.0950
THI	0.7986

Figure 4.2.1-2. Front-end Demonstration Optics Layout

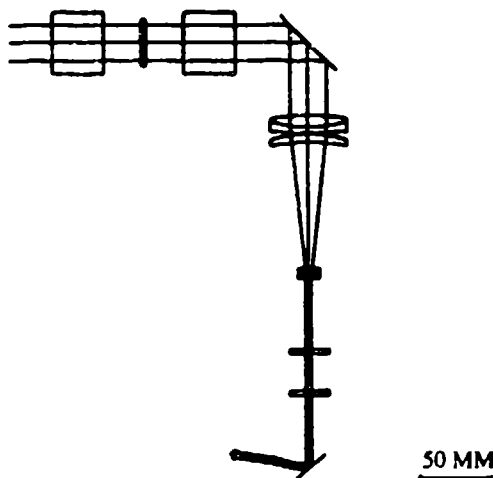

Input to Cell from Laser Diode

HAR

6-JUL-93

The data for the Back-end Demonstration Optics Design, Table 4.2.1-4 and Figure 4.2.1-3, covers the demonstration optics from the output of the Bragg cells through to the output of the Fisheye lens. Because Nikon does not release design data for their lenses, the CODE V® description of the Fisheye lens is an approximation. This approximation was obtained by having CODE V® optimize the performance of the lens until it matched the published lens data such as focal length, field, nodal positions and lens count.

Table 4.2.1-4. Back-end Demonstration Optics Design

Output From Bragg Cell.

	RDY	THI	RMD	GLA	CCY	THC	GLC
OBJ:	INFINITY	INFINITY			100	100	
STO:	INFINITY	45.000000			100	100	
2:	133.61000	5.000000		BK7_SCHOTT	100	100	
CYL:							
RDX:	INFINITY	CCX: 100					
3:	INFINITY	220.505101			100	0	
4:	INFINITY	5.000000		BK7_SCHOTT	100	100	
CYL:							
RDX:	41.49600	CCX: 100					
5:	INFINITY	97.612781			100	0	
6:	69.12100	2.000000		SF5_SCHOTT	100	100	
7:	17.13750	3.500000		SK1I_SCHOTT	100	100	
8:	-25.58640	60.308441			100	100	
9:	177.46180	3.000000		SF5_SCHOTT	100	100	
10:	42.40620	7.000000		SK1I_SCHOTT	100	100	
11:	-63.41870	424.559359			100	100	
12:	77.80500	14.000000		BK7_SCHOTT	100	100	
13:	INFINITY	62.278121			100	100	
14:	77.80500	14.000000		BK7_SCHOTT	100	100	
15:	INFINITY	8.330962			100	100	
16:	INFINITY	0.100000		BK7_SCHOTT	100	100	
17:	INFINITY	-0.007790			100	100	
18:	INFINITY	37.600000			100	100	
19:	45.73557	2.000000		621412.600145	100	100	100
20:	300.00000	0.100000			100	100	
21:	51.80390	2.500000		753909.286741	100	100	100
22:	19.87530	8.500000		487000.704000	100	100	100
23:	-71.69472	8.000000			100	100	
24:	INFINITY	4.600000			100	100	
25:	39.76499	3.000000		744000.447000	100	100	100
26:	21.68338	6.500000		487000.704000	100	100	100
27:	-70.75049	0.100000			100	100	
28:	300.00000	2.500000		648227.447629	100	100	100
29:	-154.23737	3.000000			100	100	
30:	INFINITY	2.000000		755000.276000	100	100	100
31:	INFINITY	28.500000		AIR	100	100	
32:	-60.00000	12.000000		755000.276000	100	100	100
33:	-23.00000	1.300000			100	100	
34:	-21.00000	7.000000		604179.611411	100	100	100
35:	60.00000	17.000000			100	100	
36:	-16.00000	3.000000		487000.704000	100	100	100
37:	-110.00000	22.000000			100	100	
38:	-28.00000	3.000000		487000.704000	100	100	100
39:	-68.00000	10.000000			100	100	
40:	INFINITY	60.000000			100	100	
IMG:	-150.00000	0.000000			100	0	

Table 4.2.1-4. Back-end Demonstration Optics Design (Continued)

SPECIFICATION DATA

SPD	12.50000			
AFI	60.00000			
DIM	MM			
WL	830.00			
REF	1			
NTW	1			
XAN	0.00000	0.00000	0.00000	0.00000
0.00000				
YAN	0.00000	0.12000	0.24000	0.36000
0.48000				
VUX	0.00000	0.00000	0.00000	0.00000
0.00000				
V LX	0.00000	0.00000	0.00000	0.00000
0.00000				
VUY	0.00000	0.00000	0.00000	0.00000
0.00000				
VLY	0.00000	0.00000	0.00000	0.00000
0.00000				

APERTURE DATA/EDGE DEFINITIONS

CA	
CIR S2	15.000000
CIR S3	15.000000
CIR S4	13.000000
CIR S6	7.500000
CIR S7	7.500000
CIR S8	7.500000
CIR S9	15.000000
CIR S10	15.000000
CIR S11	15.000000
CIR S12	40.000000
CIR S13	40.000000
CIR S14	40.000000
CIR S15	40.000000
CIR S19	10.000000
CIR S20	10.000000
CIR S22	10.000000
CIR S23	10.000000
CIR S24	10.000000
CIR S25	10.000000
CIR S26	10.000000
CIR S28	10.000000
CIR S29	10.000000
CIR S30	10.000000
CIR S31	10.000000
CIR S33	16.000000
CIR S34	16.000000
CIR S35	17.000000
CIR S36	16.000000
CIR S37	30.000000
CIR S38	30.000000
CIR S39	55.000000

Table 4.2.1-4. Back-end Demonstration Optics Design (Continued)

```

REFRACTIVE INDICES
GLASS CODE          930.00
BK7_SCHOTT          1.510206
SF6_SCHOTT          1.657453
SKLT_SCHOTT         1.556411
    
```

INFINITE CONJUGATES

```

BFL      22851.2167
BFL      345.3854
PFL      -1.1008E+07
FNO      1928.0973
IMG DIS   60.0000
DAL      1155.3870
    
```

PARAXIAL IMAGE

```

HT      191.4424
ANG      0.4800
    
```

ENTRANCE PUPIL

```

DIA      12.5000
THI      0.0000
    
```

EXIT PUPIL

```


DIA      0.2835
THI      -172.8578
    
```

CODE V> in f1

output from cell

Elem	Surfs	Focal Length
1	2- 3	304.994317 Cylinder in Y direction
2	4- 5	(81.3 mm Cylinder in X direction)
3	6- 8	40.000048
4	9-11	100.000046
5	12-13	152.497158
6	14-15	152.497158
7	16-17	Flat
8	19-20	87.753893
9	21-23	122.109272
10	25-27	73.581878
11	28-29	160.193088
12	30-31	Flat
13	32-33	44.591933
14	34-35	-25.275186
15	36-37	-39.318677
16	38-39	-101.392848

Figure 4.2.1-3. Back-end Demonstration Optics Layout

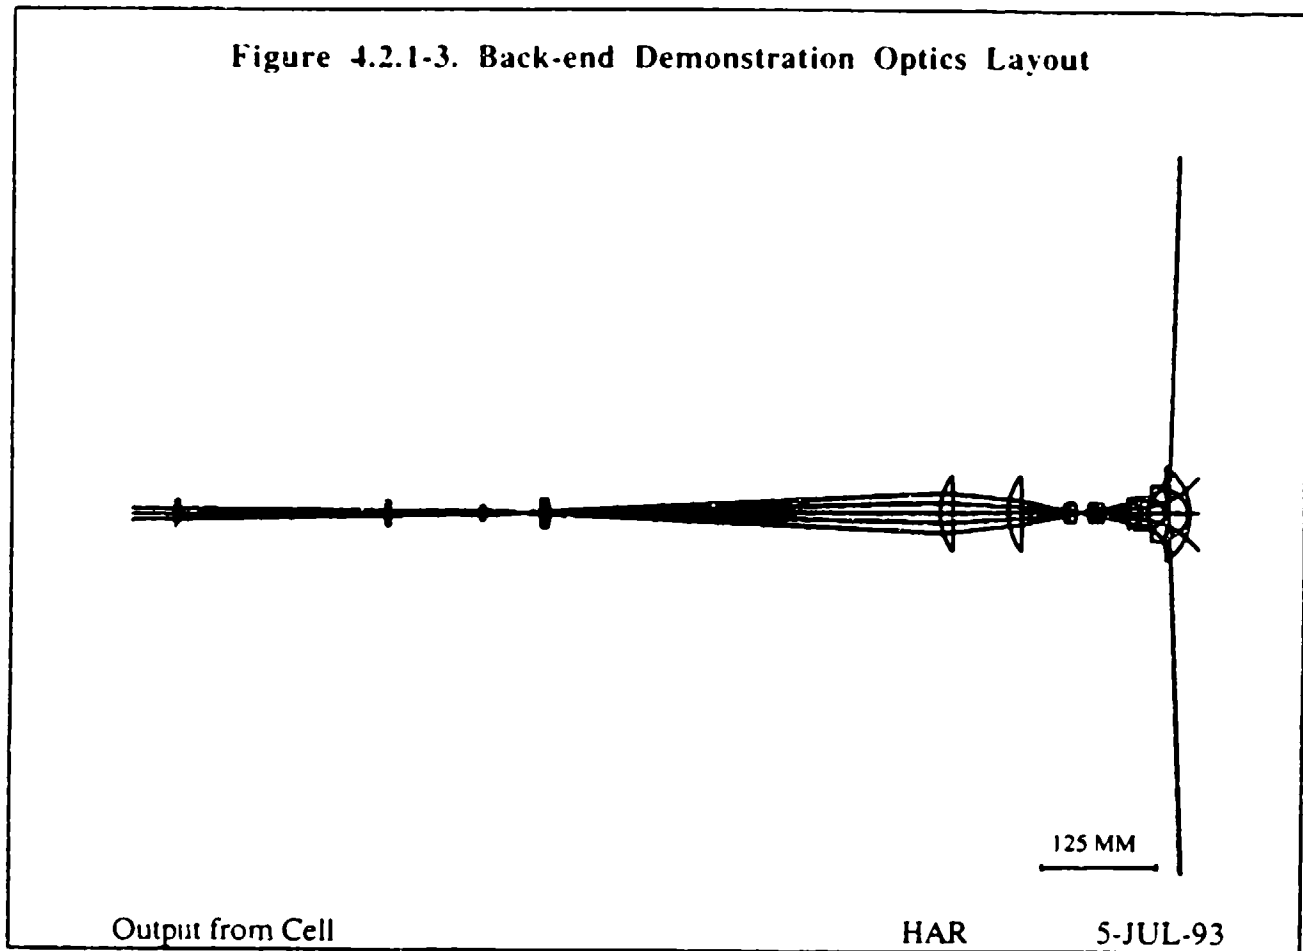

4.2.2 Custom Optics Design


For a spaceborne application, small size and light weight are very important. One program goal was to produce an optimized design for space using custom, instead of off-the-shelf, optics. Optimizing for size and weight meant redesigning the breadboard optics to include the fewest components possible. On the output side, the Fourier transform lenses were retained as a pair of cylinders. The output lens system however was changed from seventeen elements (scaling system consisting of six elements in four groups, and a fisheye of eleven elements in nine groups) to an output fisheye lens with five elements total, a savings of twelve optical components. Table 4.2.2-1 is the Code V[®] design for the custom output fisheye lens, starting from the output and working back to the lens input. Figure 4.2.2-1 illustrates the layout of the custom back-end optics.

Table 4.2.2-1. Back-end Custom Optics Design

Small Fisheye Lens.

	RDY	THI	RMD	GLA	CCY	THC
GLC					100	100
> CBJ:	INFINITY	INFINITY			100	100
1:	INFINITY	25.000000			0	0
2:	49.45403	4.400000		SFL57_SCHOTT	0	0
3:	6.87256	4.676532			0	0
4:	-100.84273	4.400000		SFL57_SCHOTT	0	0
5:	26.52705	18.238627			0	0
6:	-47.69870	4.406043		SFL57_SCHOTT	0	0
7:	-33.85776	0.100000			0	0
STC:	INFINITY	4.558435			100	0
9:	-258.23597	4.531052		SFL57_SCHOTT	0	0
10:	-15.98231	0.100000			0	0
11:	13.92418	4.589311		SFL57_SCHOTT	0	0
12:	-76.55846	7.600000			0	0
13:	INFINITY	0.414966			100	PIM
IMG:	INFINITY	-0.039060			100	100
SPECIFICATION DATA						
NA	0.04167					
DIM	MM					
WL	830.00					
REF	1					
WTW	1					
XAN	0.00000	0.00000	0.00000	0.00000		0.00000
YAN	-59.00000	-45.00000	0.00000	45.00000		89.00000
REFRACTIVE INDICES						
GLASS CODE		830.00				
SFL57_SCHOTT		1.821500				
SOLVES						
PIM						
INFINITE CONJUGATES						
EFL	1.7000					
BFL	0.4150					
FFL	34.3550					
FNO	12.0000					
IMG DIS	0.3759					
OAL	82.6000					
PARAXIAL IMAGE						
HT	97.3952					
ANG	89.0000					
ENTRANCE PUPIL						
DIA	0.1417					
THI	34.4024					
EXIT PUPIL						
DIA	5.0782					
THI	-60.5239					

Figure 4.2.2-1. Back-end Custom Optics Layout

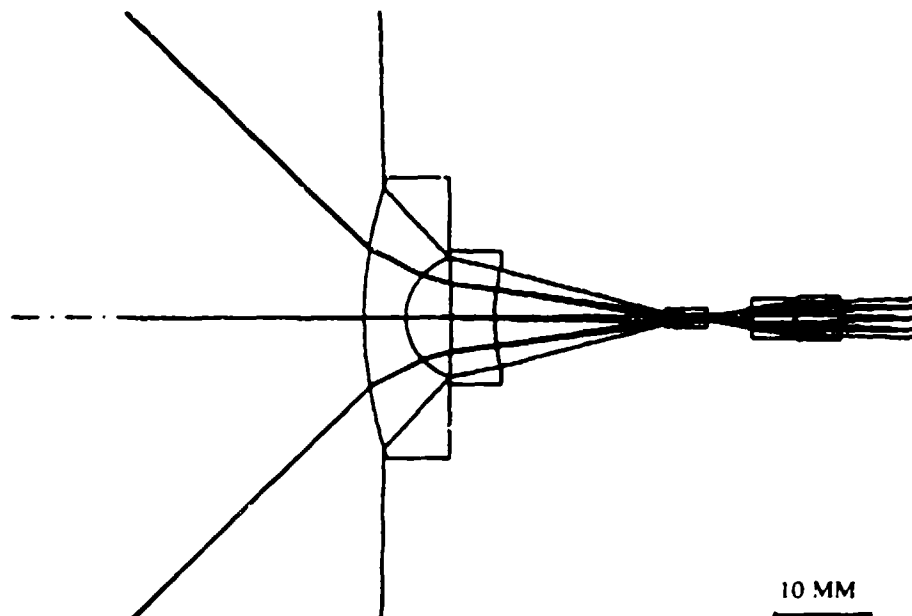

Output from Cell

HAR

7-JUL-93

On the input side to the Bragg cells, the design takes seven elements and reduces the count to three, a savings of four lens components. Table 4.2.2-2 lists the Code V[®] output for this part of the design. Figure 4.2.2-2 illustrates the Front-end Custom Optics Layout.

For the custom optical design, the mid-section optics layout is shown in Figure 4.2.2-3. The mid-section transforms the Bragg cell output, and is implemented using two cylinder lenses. The Code V[®] output design data for this section is shown in Table 4.2.2-3.

Table 4.2.2-2. Front-end Custom Optics Design

Custom Beam Shaping Optics.

	RDY	THI	RMD	GLA	CCY	THC
GLC						
OBJ:	INFINITY	INFINITY			100	100
1:	INFINITY	3.000000		BK7_SCHOTT	100	100
2:	INFINITY	5.000000			100	100
3:	INFINITY	3.000000		BK7_SCHOTT	100	100
4:	INFINITY	5.000000			100	100
> 5:	INFINITY	15.000000			100	100
	XDE: 0.000000	YDE: 0.000000	ZDE: 0.000000	REV		
	XDC: 100	YDC: 0	ZDC: 100			
	ADE: 0.000000	BDE: 0.000000	CDE: 0.000000			
	ADC: 100	BDC: 100	CDC: 100			
6:	INFINITY	12.000000		SF11_SCHOTT	100	100
7:	INFINITY	0.000000			100	100
	XDE: 0.000000	YDE: 0.000000	ZDE: 0.000000	DAR		
	XDC: 100	YDC: 100	ZDC: 100			
	ADE: 0.000000	BDE: 0.000000	CDE: 0.000000			
	ADC: 100	BDC: 100	CDC: 100			
STO:	INFINITY	20.0			100	100
9:	45.84068	13.1		507578.598075	100	100
100						
	XDE: 0.000000	YDE: 0.000000	ZDE: 0.000000			
	XDC: 100	YDC: 100	ZDC: 100			
	ADE: 0.000000	BDE: 0.000000	CDE: 0.000000			
	ADC: 100	BDC: 100	CDC: 100			
	GP1: FK5_SCHOTT SPG:		PRC:			
10:	-18.44596	1.500000		SFL57_SCHOTT	100	100
11:	-58.40115	0.100000		AIR	100	100
12:	21.47053	13.000000		SFL57_SCHOTT	100	100
13:	INFINITY	14.122865		AIR	100	PIM
IMG:	INFINITY	-0.029505			100	0

SPECIFICATION DATA

EPD 25.00000
 XZF
 DIM MM
 WL 830.00
 REF 1
 WTW 1
 XAN 0.00000
 YAN 0.00000
 VUX 0.00000
 VLX 0.00000
 VUY 0.00000
 VLY 0.00000

APERTURE DATA/EDGE DEFINITIONS

CA
 CIR S1 15.000000
 CIR S3 15.000000
 CIR S6 15.000000
 CIR S7 18.000000

Table 4.2.2-2. Front-end Custom Optics Design (Continued)

REFRACTIVE INDICES

GLASS CODE	830.00
SF11 SCHOTT	1.763120
507578.598075	1.500756
SF157 SCHOTT	1.921365
BK7 SCHOTT	1.510206

DEPARTURES FROM CATALOG INDICES

GLASS CODE	830.00
507578.598075	0.019036

SOLVES

PIM


ZOOM DATA

	POS 1	POS 2
EPD	25.00000	12.50000
ADE S5	0.00000	-6.04460
ADC S5	100	100
ADE S7	0.00000	-29.43000
ADC S7	100	100
YDE S9	0.00000	7.38661
YDC S9	100	0
ADE S9	0.00000	19.88279
ADC S9	100	0
YDE S5	0.00000	3.82850
YDC S5	0	0

This is a decentered system. If elements with power are decentered or tilted, the first order properties are probably inadequate in describing the system characteristics.

	POS 1	POS 2
INFINITE CONJUGATES		
EFL	23.4006	23.4006
BFL	14.1229	14.1229
FFL	40.7117	40.7117
FNO	0.9360	1.8721
IMG DIS	14.0934	14.0934
OAL	90.6000	90.6000
PARAXIAL IMAGE		
HT	0.0000	0.0000
ANG	0.0000	0.0000
ENTRANCE PUPIL		
DIA	25.0000	12.5000
THI	35.7791	35.7791
EXIT PUPIL		
DIA	118.6018	59.3009
THI	125.1371	125.1371
STO DIA	25.0000	12.5000

Figure 4.2.2-2. Front-end Custom Optics Layout

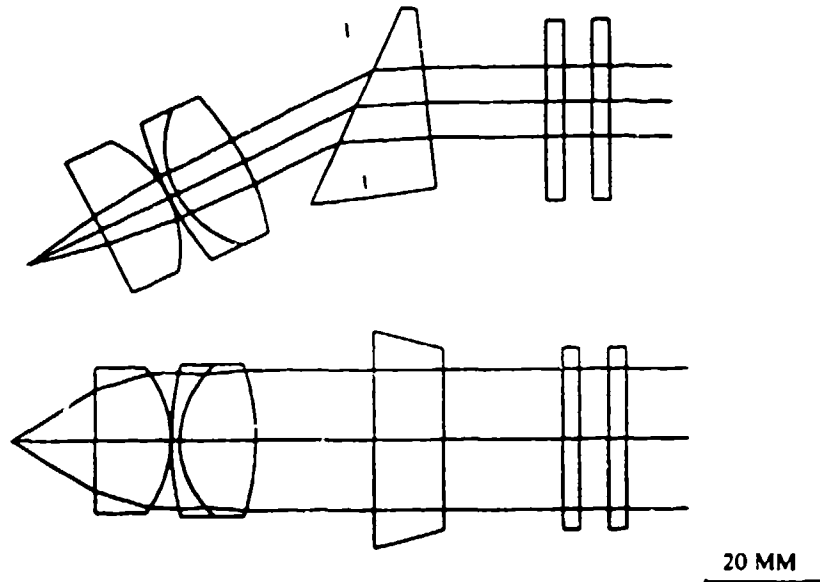


Custom Beam Shaping Optics

HAR

8-JUL-93

Figure 4.2.2-3. Mid-section Custom Optics Layout

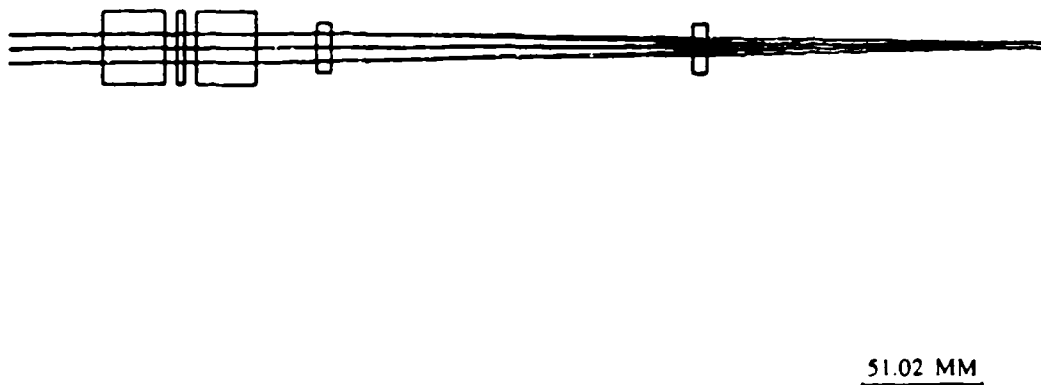

Cylindrical Transform Lens

Scale: 0.49

HAR

9-JUL-93

Table 4.2.2-3. Mid-section Custom Optics Design

Cylindrical Transform Lens.

	RDY	THI	RMD	GLA	CCY	THC
GLC						
> OBJ:	INFINITY	INFINITY			100	100
1:	INFINITY	25.000000		'TEO2'	100	100
2:	INFINITY	5.000000			100	100
3:	INFINITY	3.000000		BK7_SCHOTT	100	100
4:	INFINITY	5.000000			100	100
5:	INFINITY	25.000000		'TEO2'	100	100
STO:	INFINITY	25.000000			100	100
7:	155.04000	6.000000		BK7_SCHOTT	100	100
CYL:						
RDX:	INFINITY	CCX: 100				
8:	INFINITY	152.535673			100	0
9:	INFINITY	6.000000		BK7_SCHOTT	100	100
CYL:						
RDX:	75.20000	CCX: 100				
10:	INFINITY	143.418412			100	PIM
IMG:	INFINITY	-0.104780			100	0
SPECIFICATION DATA						
EPD	12.50000					
PUX	0.50000					
PUY	0.50000					
PUI	0.13500					
XZF						
DIM	MM					
WL	830.00					
REF	1					
WTW	1					
XAN	0.00000	0.00000	0.21300	0.21300		
YAN	0.00000	0.50900	0.00000	0.50900		
APERTURE DATA/EDGE DEFINITIONS						
CA						
CIR S1		15.000000				
CIR S3		15.000000				
CIR S5		15.000000				
CIR S7		10.000000				
CIR S9		10.000000				
PRIVATE CATALOG						
PWL	830.00					
'TEO2'	2.200000					
REFRACTIVE INDICES						
GLASS CODE		830.00				
BK7_SCHOTT		1.510206				
'TEO2'		2.200000				

Table 4.2.2-3. Mid-section Custom Optics Design (Continued)

SOLVES
PIM

INFINITE CONJUGATES

EFL 147.3914

BFL 143.4184

FFL 68.8310

FNO 11.7913

IMG DIS 143.3136

OAL 252.5357

PARAXIAL IMAGE

HT 0.5479

ANG 0.2130

ENTRANCE PUPIL

DIA 12.5000

THI 34.7138

EXIT PUPIL

DIA 54.0018

THI 780.1700

Figure 4.2.2-4 represents the entire custom system from end to end. It is much smaller and more compact than the breadboard. The custom optics consists of the laser output going through a three element 25mm F1 collimator, followed by an 1.5X prismatic beam expander. This system of input optics takes the 3:1 aspect ratio of the laser and forms it into a 12.5 by 25mm output beam. This is followed by a halfwave plate and a quarterwave plate to adjust the polarization to the elliptical orientation necessary to get maximum diffraction efficiency from the Bragg cells. Between the two Bragg cells is another halfwave plate that corrects for the polarization change due to the birefringence of the first cell. After the cells are the two orthogonal cylinder lenses, 300mm for the horizontal output and 145mm for the vertical. These lenses Fourier transform the scan angles into a real image plane at the back focal plane of the fisheye lenses. A splitting mirror directs half the vertical field to each of the two fisheye lenses, which image the focal plane to infinity with a .36 degree beam divergence.

Table 4.2.2-4 below shows the predicted optical throughput for the custom system. With custom optics, designed and coated for 830 nm, and using a Spectra-Diode Labs laser, the output can easily exceed the requirement of 50% throughput. In the Section 5.3, Breadboard Performance Summary, the Custom design expected results are further contrasted with the actual measurements for the breadboard.

Figure 4.2.2-4. Complete Custom Optics Layout

Custom System could be folded into
approximately 4 X 4 X 8 inch package

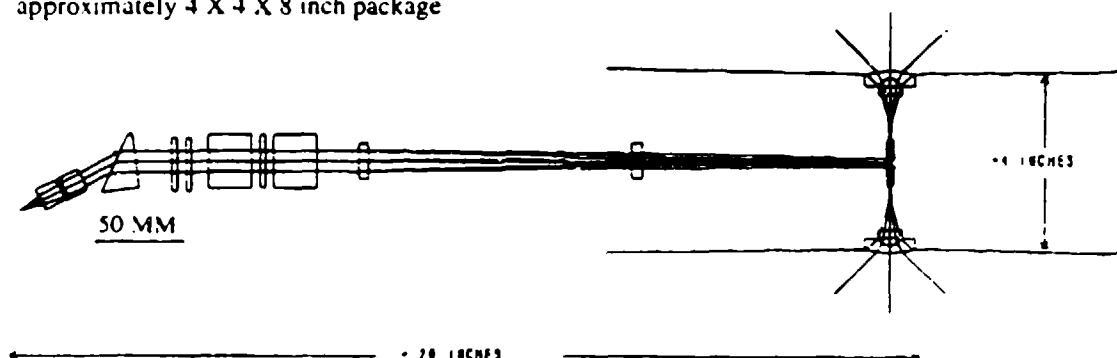


Table 4.2.2-4. Optical Efficiency of the Custom System

Lasercom Light Budget

Custom System

<u>COMPONENT</u>	<u>COMPONENT POWER OUT (mW)</u>	<u>THROUGHPUT</u>
Laser Output	150.0	-
Laser Collimator	145.5	0.97
Wave Plates (1/2 AND 1/4)	139.6	0.96
Horizontal Cell (DC)	136.8	0.98
Horizontal Diffraction	130.0	0.95
Wave Plate (1/2)	127.4	0.98
Vertical Cell (DC)	124.8	0.98
Vertical Diffraction	118.6	0.95
300 mm Cylinder	117.4	0.99
145 mm Cylinder	116.2	0.99
Turning Mirror	115.1	0.99
Fisheye Lens	109.3	0.95
TOTAL	109.3	0.73

4.3 Electronics Design and Test

Figure 4.3-1 shows a simplified block diagram of the electronics subsystem. The electronic subsystem uses direct digital synthesis (DDS) to generate a tunable 18 to 32 MHz frequency output bandwidth. The electronics interface box consists of a control interface card, two DDS cards, and an RF section, all self-contained including a power supply. The breadboard PC computer controls the electronics box via a digital output card.


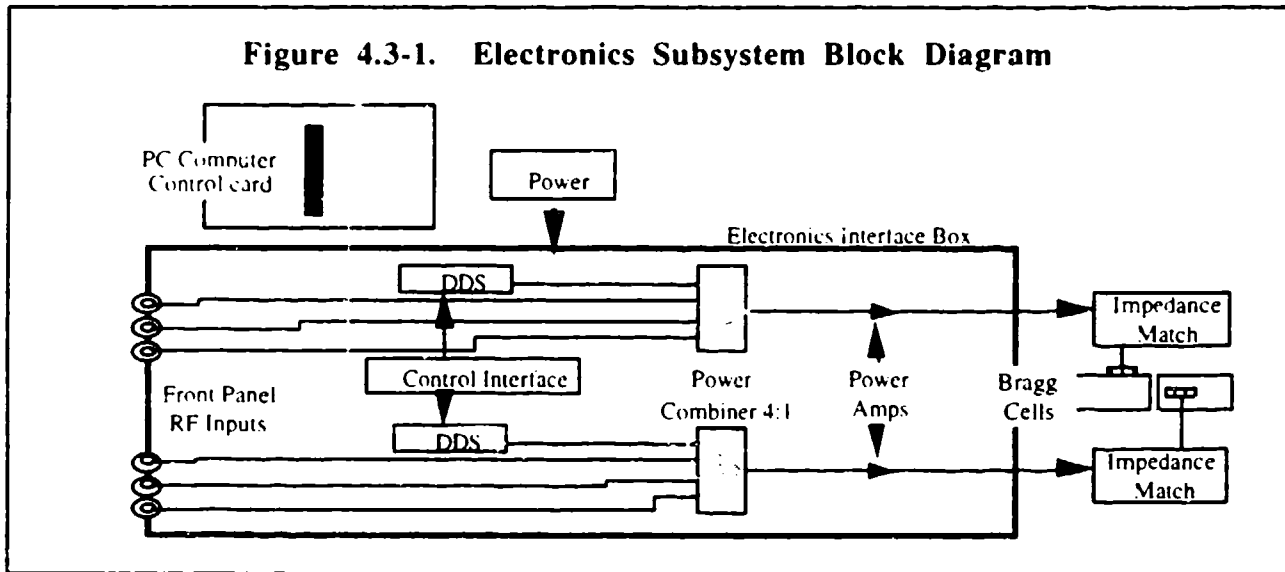


Figure 4.3-2 shows a block diagram of the Control Interface Board. The Control Interface Board buffers digital frequency and control data between the controlling PC and the two DDS cards, strobos this information into the DDS cards upon a read request from the PC, and generates the required clocks for these processes to take place. Appendix C contains a schematic of the Control Interface Board.

The Control Interface Board receives 24 parallel data bits from the controller PC consisting of 17 data bits of frequency data, and 7 data bits of control logic. The frequency data (D0-D16) is latched into four 4096X9-pin FIFO's (CY7C433), two FIFO's per channel, upon a write request (W1, W2) from the PC. A read enable (READ EN) command from the PC enables the FIFO's to read data into the DDS cards via a read (R) command from the PAL (32VX10). The PAL also transmits a DDS latch command (DDS LATCH) to the DDS cards to latch the frequency data into buffers on the DDS card and a DDS load strobe (LSTRB) command to load the information into the DDS chip. Once all the data has been read from the FIFO's an empty flag (EF1, EF2, EF3, EF4) will signal the PAL. The PAL will then send a retransmit command (RT) to the FIFO's requesting the FIFO to loop through the frequency data.

Figure 4.3-2. Control Interface Board Block Diagram

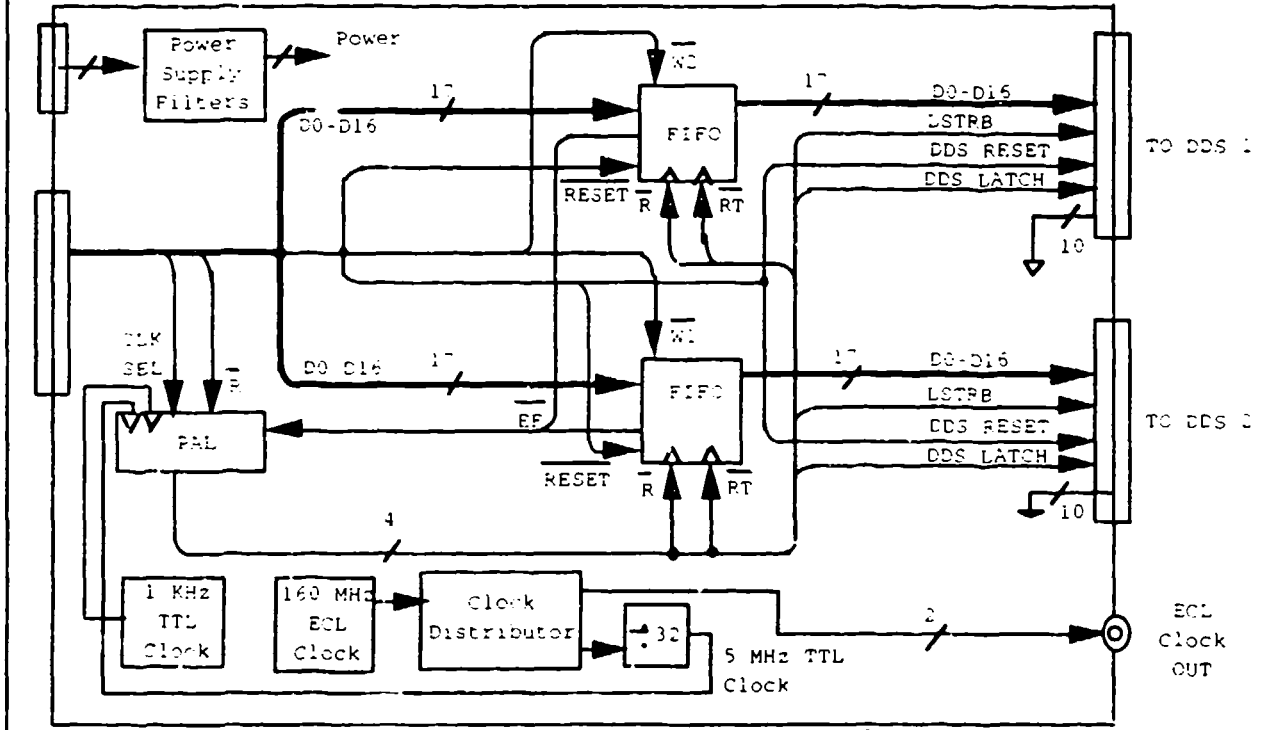


The sequence of operation is as follows:

1. Initial reset of FIFO's and DDS card (RESET, DDS RESET) at turn on.
2. Write to the FIFO's (W1, W2)
3. Read all FIFO's.
 - a. READ EN from PC to PAL.
 - b. R from PAL to FIFO's.
 - c. DDS LATCH from PAL to DDS card.
 - d. LSTRB from PAL to DDS card.
4. FIFO's will continuously loop until a RESET or write command.
 - a. Empty flag (EF1-EF4) from FIFO to PAL.
 - b. Retransmit (RT) from PAL to FIFO.

The Control Interface Board generates a 160 MHz ECL clock, a 5 MHz TTL clock, and a 1 KHz TTL clock. The 160 MHz ECL clock is used as the clock for the DDS boards. The 5 MHz and 1 KHz clocks are clock selected (CLK SEL) by the PC for either fast or slow operation and are used for FIFO read and write operations. The FIFO write rate is determined by the PC and the FIFO read rate is 400ns.

Figure 4.3-3 shows a block diagram of the DDS board. The DDS boards are off-the-shelf Stanford Telecom STEL-2272A single output direct digital synthesizer boards with a maximum output frequency of 110 MHz and a maximum clock speed of 300 MHz. The output frequency changes 33 clock cycles after a LSTRB command. This application uses a 160 MHz clock for a frequency change rate of 206 nsec.

Figure 4.3-3. DDS Card Block Diagram

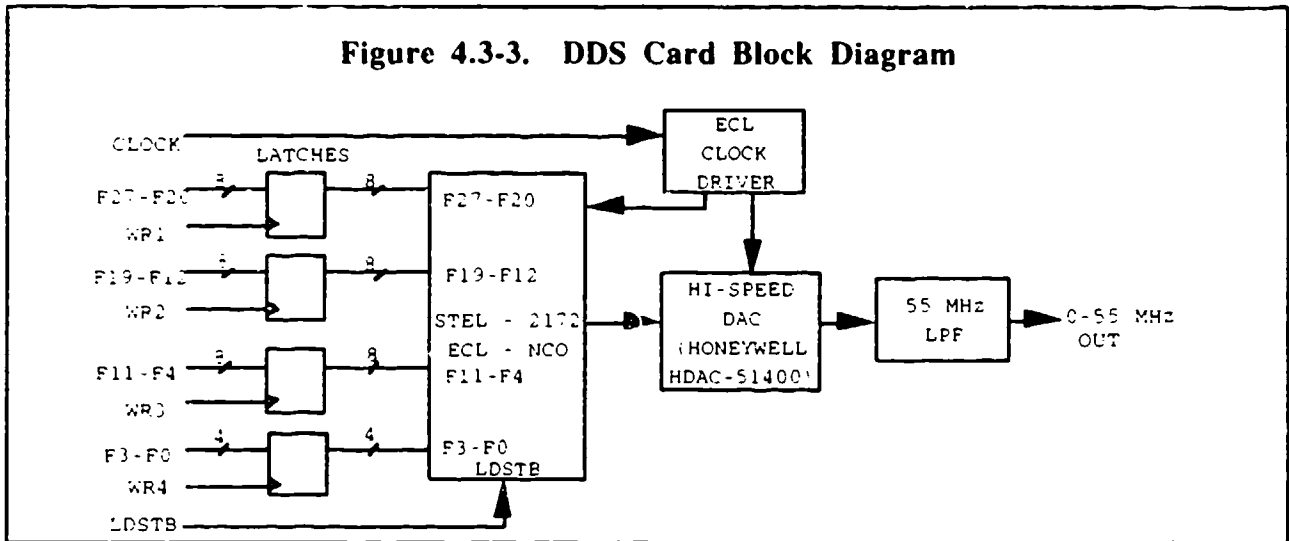


The frequency information from the Control Interface Board is buffered into four 8-bit latches with a DDS LATCH command. A LSTRB command initiates a serial input of the frequency data bits into the STEL-2172A chip at the DDS board clock rate (160 MHz). The DDS chip bounces the data bit information against a look-up table in ROM to translate to a corresponding frequency using the following equation:

$$f_{out} = (\text{phase change}) * f_{clk} / 2^N \quad (4.3-1)$$

where *phase change* = data bits from PC, *fclk* = 160 MHz, *N* = 18, and *fout* = 18 to 32 MHz. For example, if *fout* = 18 MHz, then *phase change* = *fout* * $2^N / f_{clk}$ = $(18 * 10^6) * (2^{18}) / (160 * 10^6) = 2.9491 * 10^4 = 000111001100110011$ (bin). Frequency calculations were made using 18 bits of frequency data to improve frequency resolution to 610 Hz. The two MSB's of the frequency data are always 0 between 18 and 32 MHz.

Figure 4.3-4 shows a block diagram of the RF section. The RF section contains two identical RF paths, one for each channel, containing a power combiner, an attenuator and a high power amplifier. A 4-way power combiner (Anzac, DS-312-SMA) combines the RF from the DDS card with up to three additional frequencies. The attenuator is SMA packaged and can be selected for a desired output power. The high power amplifier (Mini-Circuits, ZHL-1-2W) is a 2 watt device with a minimum gain of 29 dB.

Figure 4.3-4. RF Section Block Diagram

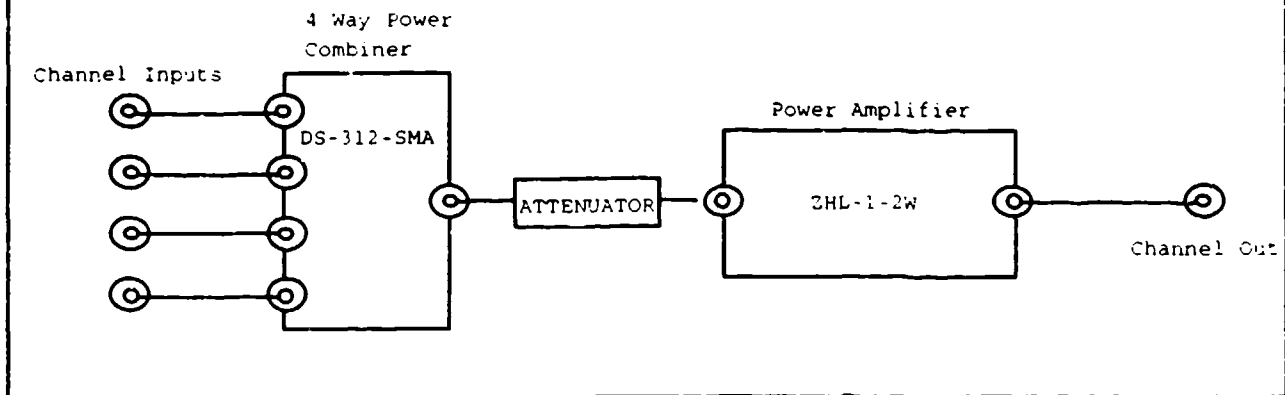

The electronics subsystem was thoroughly tested to verify that the goal specifications were met. The following paragraphs summarize the results per test performed.

Test #1. Frequency Tuning

The Channel X (horizontal) and Channel Y (vertical) were tuned from 18 to 32 MHz. A HP5328B frequency counter was used to measure frequency resolution across the band. A random sampling of 20 frequencies compared to the expected frequency achieved a resolution in both channels of less than 610 Hz.

Test #2. Spurious Tones

This test was performed to verify that spurious tones were at least 40 dBc down.



Channel X - Figure 4.3-5a shows spurious tones across the frequency band at < -40 dBc. The frequency band was swept to annotate worst case dynamic range.

Channel Y - Figure 4.3-5b shows spurious tones across the frequency band at < -40 dBc. The frequency band was swept to annotate worst case dynamic range.

Figure 4.3-5. Spurious Tones Test Results

a. Channel X (horizontal)

b. Channel Y (vertical)

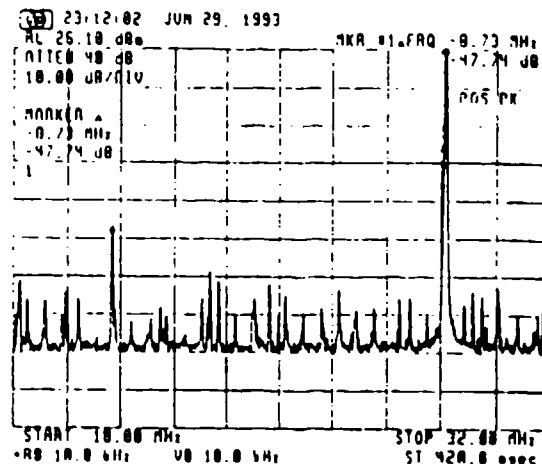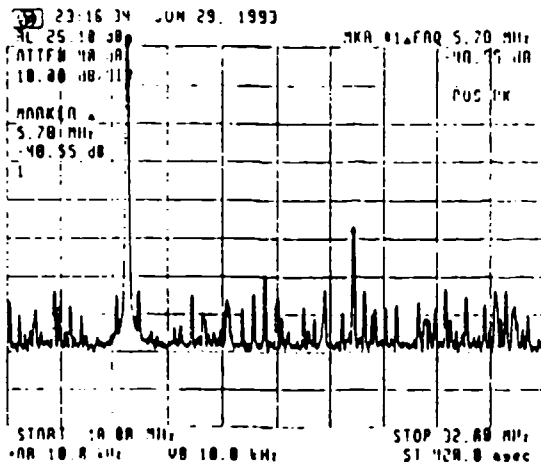

Test #3. Phase Noise

This test was performed to verify that phase noise was no greater than -70 dBc/Hz maximum, 20 KHz from the carrier.

Channel X - Figure 4.3-6a shows a CW signal centered at 18 MHz and at an output power of +27 dBm. The SSB phase noise at 20 KHz offset is approximately -93 dBc/30 Hz or -108 dBc/Hz.

Channel Y - Figure 4.3-6b shows a CW signal centered at 18 MHz and at an output power of +26.5 dBm. The SSB phase noise at 20 KHz offset is approximately -93 dBc/30 Hz or -108 dBc/Hz.

Test #4. Settling Time


This test was performed to verify that the settling time was no more than 200 nsec. Figure 4.3-7 shows the test setup used to check the settling time at turn on and turn off of frequencies generated by the DDS card. A Merrimac quadrature modulator was used as a phase detector with 90 degree phase shift reference. The output of the DDS card was split with one signal entering the modulator at the 90 degree quad and the other at the in-phase combiner. The signals were then combined 90 degrees out of phase to produce a voltage reference. The output of the DDS card was then toggled. The settling time is the time measured 10 to 90 % in amplitude.

Channel X - Figure 4.3-8a shows a rise time of less than 100 nsec. Figure 4.3-8b shows a fall time of less than 75 nsec.

Channel Y - Figure 4.3-9a shows a rise time of less than 100nsec. Figure 4.3-9b shows a rise time of less than 75 nsec.

Figure 4.3-6. Phase Noise Test Results

a. Channel X (horizontal)

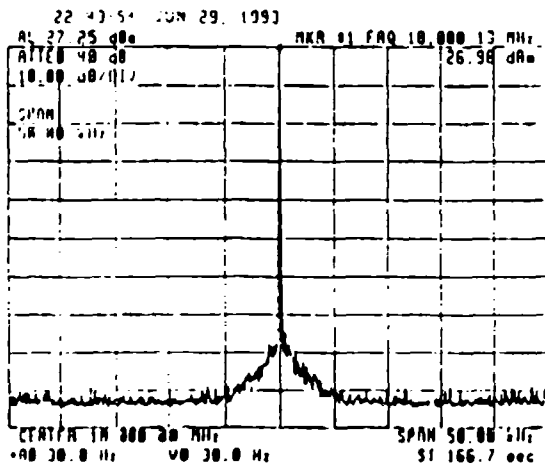

b. Channel Y (vertical)

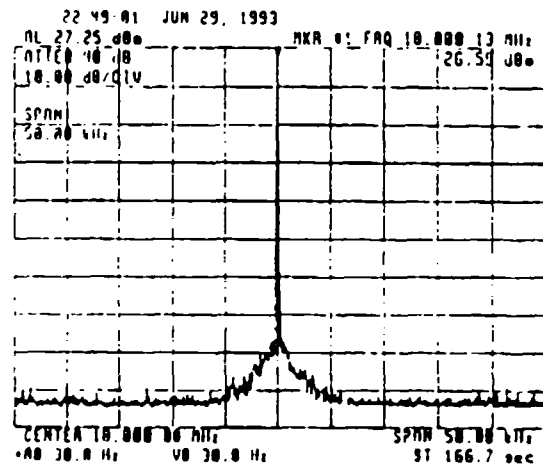


Figure 4.3-7. Settling Time Test Setup



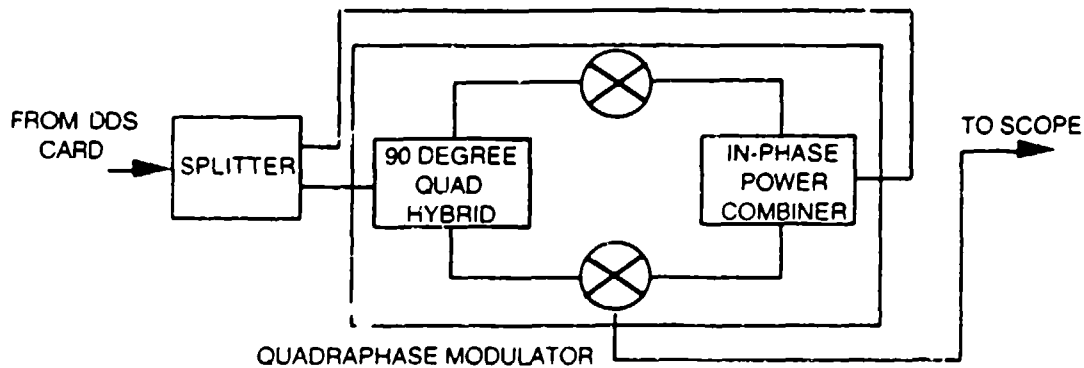


Figure 4.3-8. Channel X (Horizontal) Settling Time Test Results

a. Rise Time

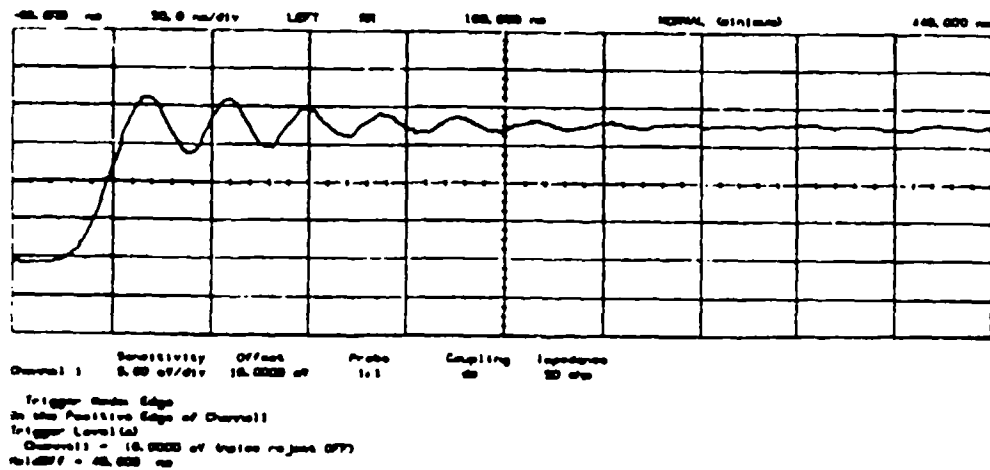

b. Fall Time

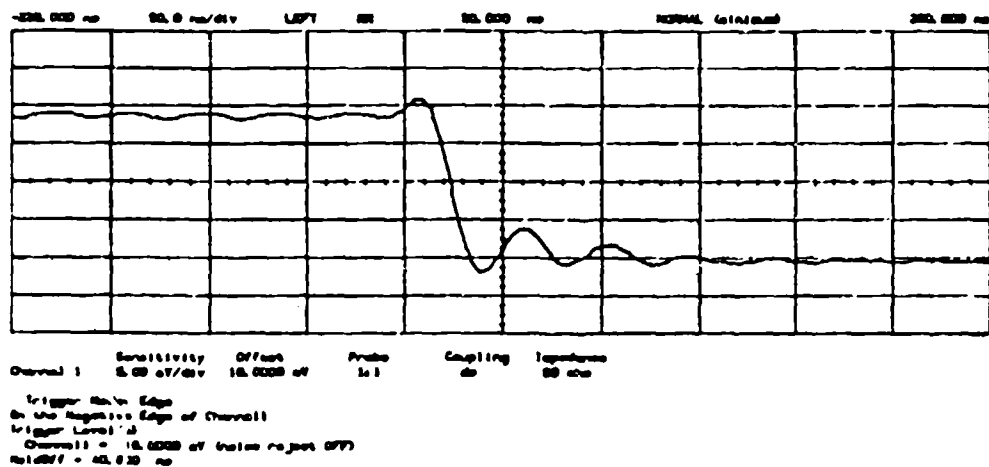


Test #5. Frequency Drift:


This test was performed to verify that the frequency drift was no more than 10 Hz/minute, and less than 50 Hz maximum long term. The test monitored both channels at turn on for 5 minutes with an HP5328B frequency counter, and the achieved drift was less than 10 Hz. The long term test monitored both channels over a twelve hour period, and achieved the same results.

Figure 4.3-9. Channel Y (Vertical) Settling Time Test Results

a. Rise Time

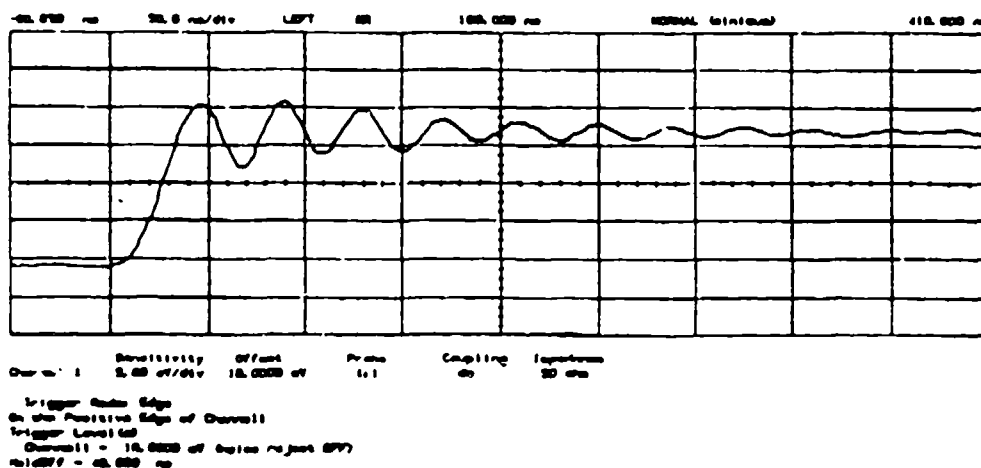

b. Fall Time

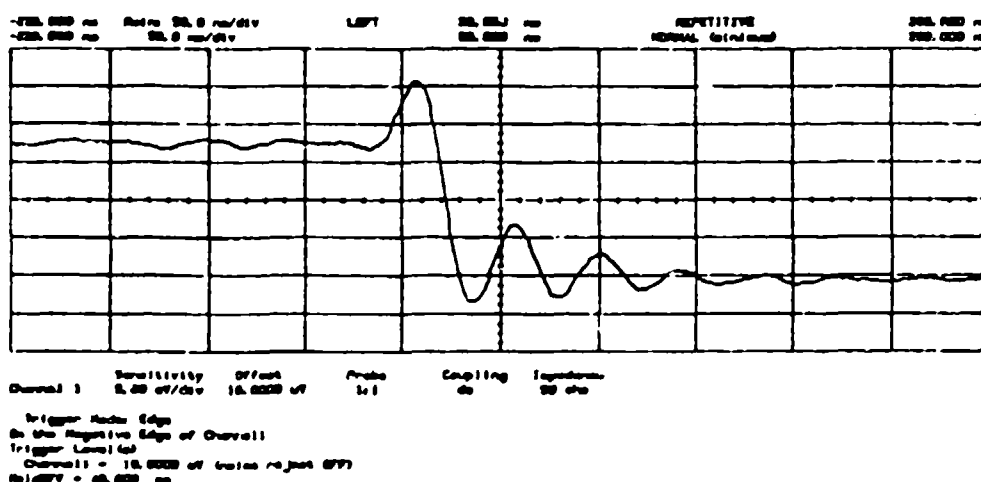

Test #6. Third Order Intercept

This test was performed to verify that the third order intercept was +42 dBm minimum.

Channel X - Figure 4.3-10a shows a two tone test for intermodulation distortion across 18 to 32 MHz. The tone on the left was generated by the DDS card and the other tone was generated by an external signal source combined in the RF section of the electronics subsystem. Both tones were adjusted to +26 dBm output power at the output of the electronic subsystem. The external signal source was swept across the band to generate the worst case intermod tone. The figure shows the intermod +42.63 dBc. The third order intercept point is calculated as follows:


$IP3 = P_{out} + A/2$ where A is the difference of output power and intermod level,
therefore, $IP3 = 26 + 42.63/2 = 47.3 \text{ dBm}$.

Channel Y - Figure 4.3-10b shows a two tone test for intermodulation distortion across 18 to 32 MHz. The tone on the left was generated by the DDS card and the other tone was generated by an external signal source combined in the RF section of the electronics subsystem. Both tones were adjusted to +26 dBm output power at the output of the electronic subsystem. The external signal source was swept across the band to generate the worst case intermod tone. The figure shows the intermod +45.45 dBc. The third order intercept point is calculated as follows:


$IP3 = P_{out} + A/2$, where A is the difference of output power and intermod level,
therefore, $IP3 = 26 + 45.45/2 = 48.7 \text{ dBm}$

Figure 4.3-10. Third Order Intercept Test Results

a. Channel X (horizontal)

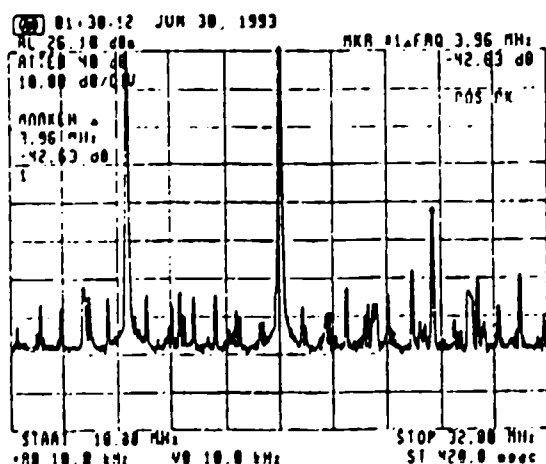

b. Channel Y (vertical)

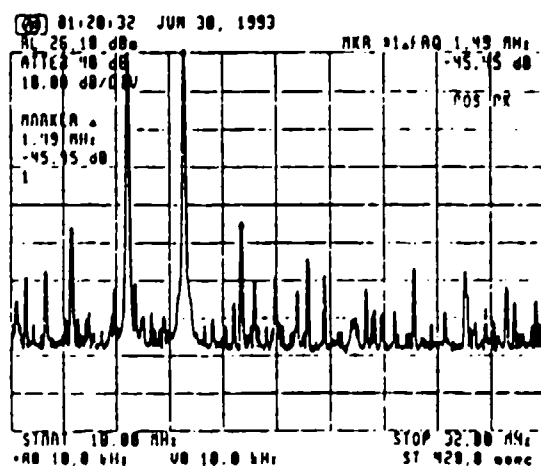

5.0 Breadboard Demonstration

5.1 Breadboard Hardware Description

This section briefly describes the breadboard hardware setup. Figure 5.1-1 shows the major components of the breadboard: the controller PC computer (on the left), the electronics interface box (middle background), and the optics bench (foreground) which contains the lasers, Bragg cells, CCD camera, and the various lenses.

The breadboard is self-contained, requiring no additional lab equipment to operate (other than tables on which to place the computer, electronics box, and optics bench). Once the computer and electronics box are plugged into the AC wall outlet the breadboard is ready to run, and all other components are powered via software control: the lasers, Bragg cells, and CCD camera. The breadboard control software and operational procedure will be discussed in detail in Section 5.2 (see also Appendices A and B). Table 5.1-1 lists the PC computer specifications.

Table 5.1-1. PC Computer Specifications

• Motherboard:	486-33DX with AMI BIOS
• Cache:	64K SRAM
• RAM:	8 Megabytes
• Hard Disk:	120 Megabytes (IDE)
• Floppy Drives:	3.5" (1.44 Meg) and 5.25" (1.2 Meg)
• I/O ports:	2 serial and 1 parallel, 2 IDE and 2 FDC
• Graphics Card:	ATI-VGA Wonder XL-24 (1 Megabyte)
• Monitor:	14" SVGA 1024 x 768 non-interlaced
• Video Overlay Card:	Super Video Windows
• I/O Card:	National Instruments DIO-24
• Software:	DOS 5.0, Norton Desktop 2.0, Windows 3.1, Visual Basic 2.0

Figure 5.1-2 shows a perspective view of the optics bench. The two laser diodes (670 nm and 830 nm wavelength) are in the far left corner of the bench. The Bragg cells are located where the input coax cable terminates in the left central portion of the bench (Note: the mount shown for the Bragg cells is an earlier mount not used in the final breadboard). The CCD camera is suspended vertically at the top of Figure 5.1-2, and the two wide-angle output lenses can be seen at the left and right sides of the bench. The optics bench (TMC Model #77-133-02) has a 3 x 3 foot surface area (9 ft.²), is 2 inches thick, and weighs approximately 135 lbs. (without optics). The Bragg cell design was discussed in detail in Section 4.1.

One side of the electronics box is shown in Figure 5.1-3 with the cover removed. This shows the custom developed interface board containing the programmable array logic (PAL) devices and the first-in-first-out (FIFO) memories. In the upper center this picture shows the heat sink on one of the two signal output amplifiers, and to the left of this is one of the 4:1 signal combiners (3 front panel input ports and 1 internal DDS generator channel). The power supply for the box electronics is on the right side of the box, and a cooling fan is located directly above.

Figure 5.1-1. Photograph of Breadboard Hardware

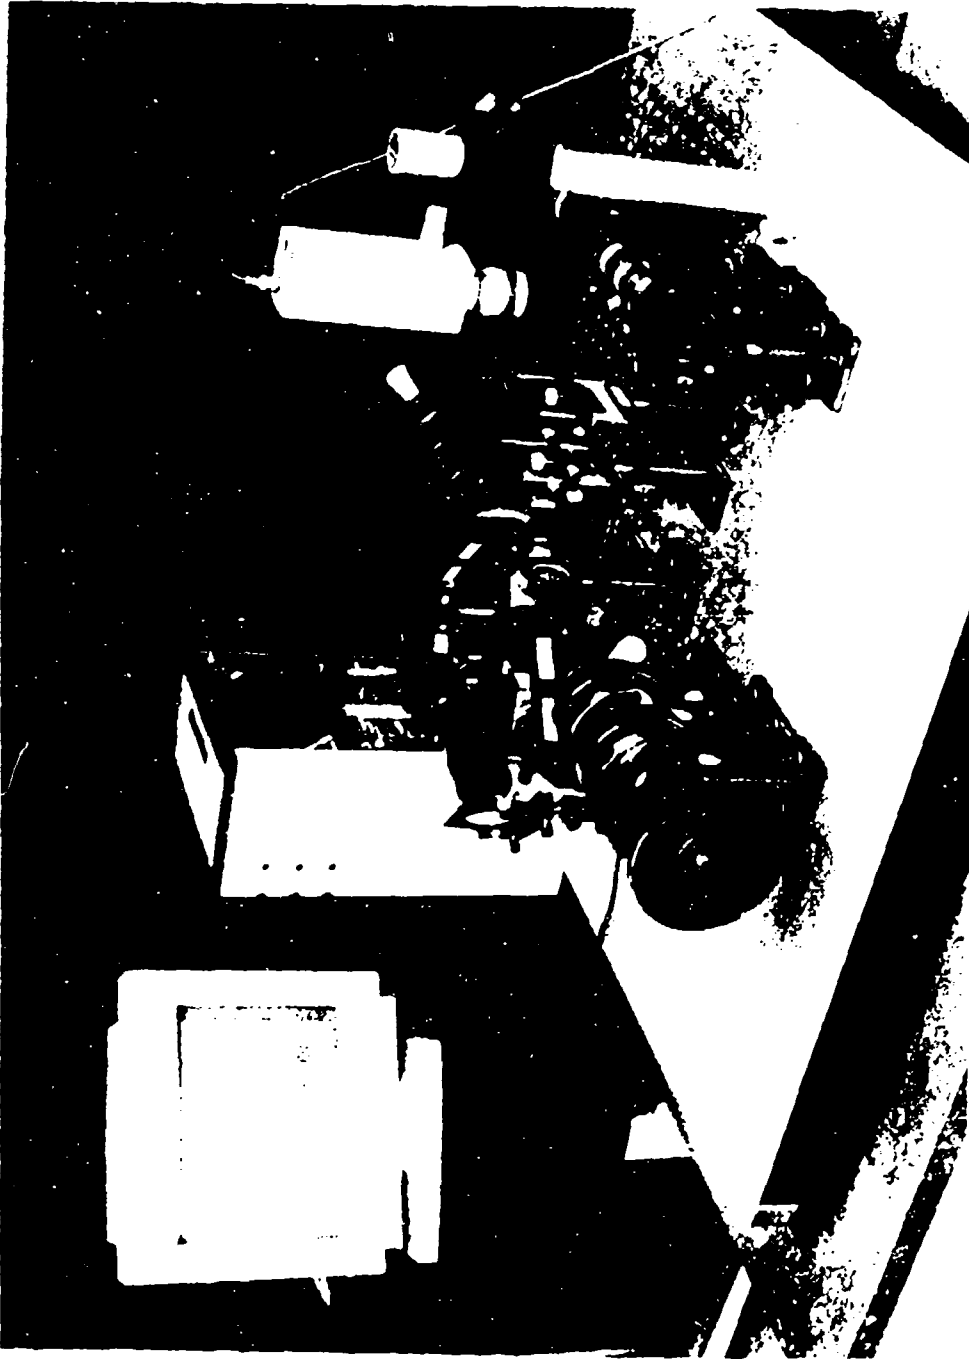


Figure 5.1-2. Photograph of Optics Bench

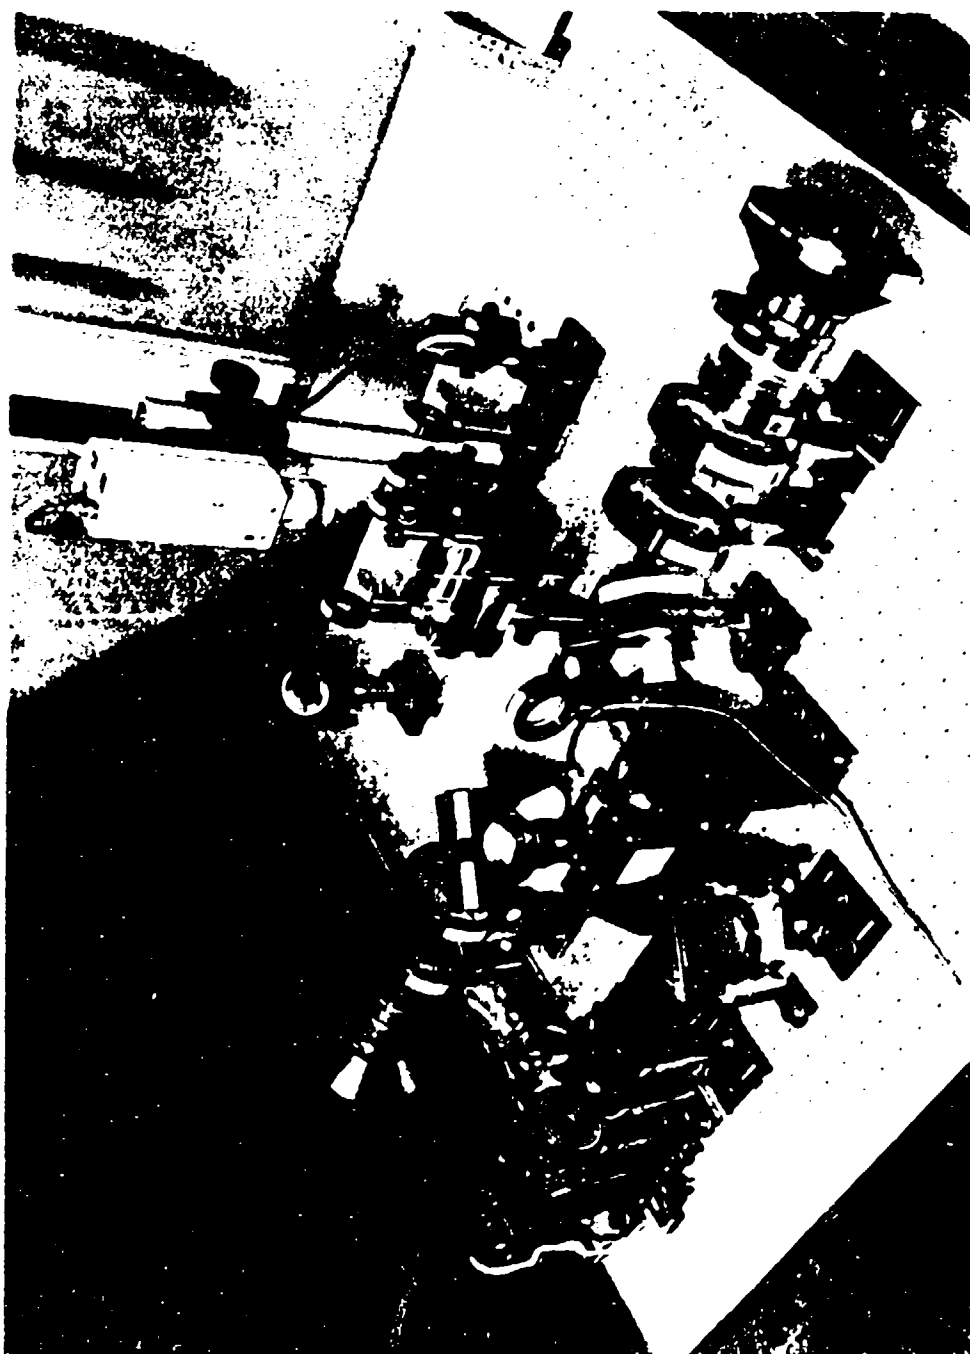


Figure 5.1-3. Photograph of Electronics Box (Interface Board Side)

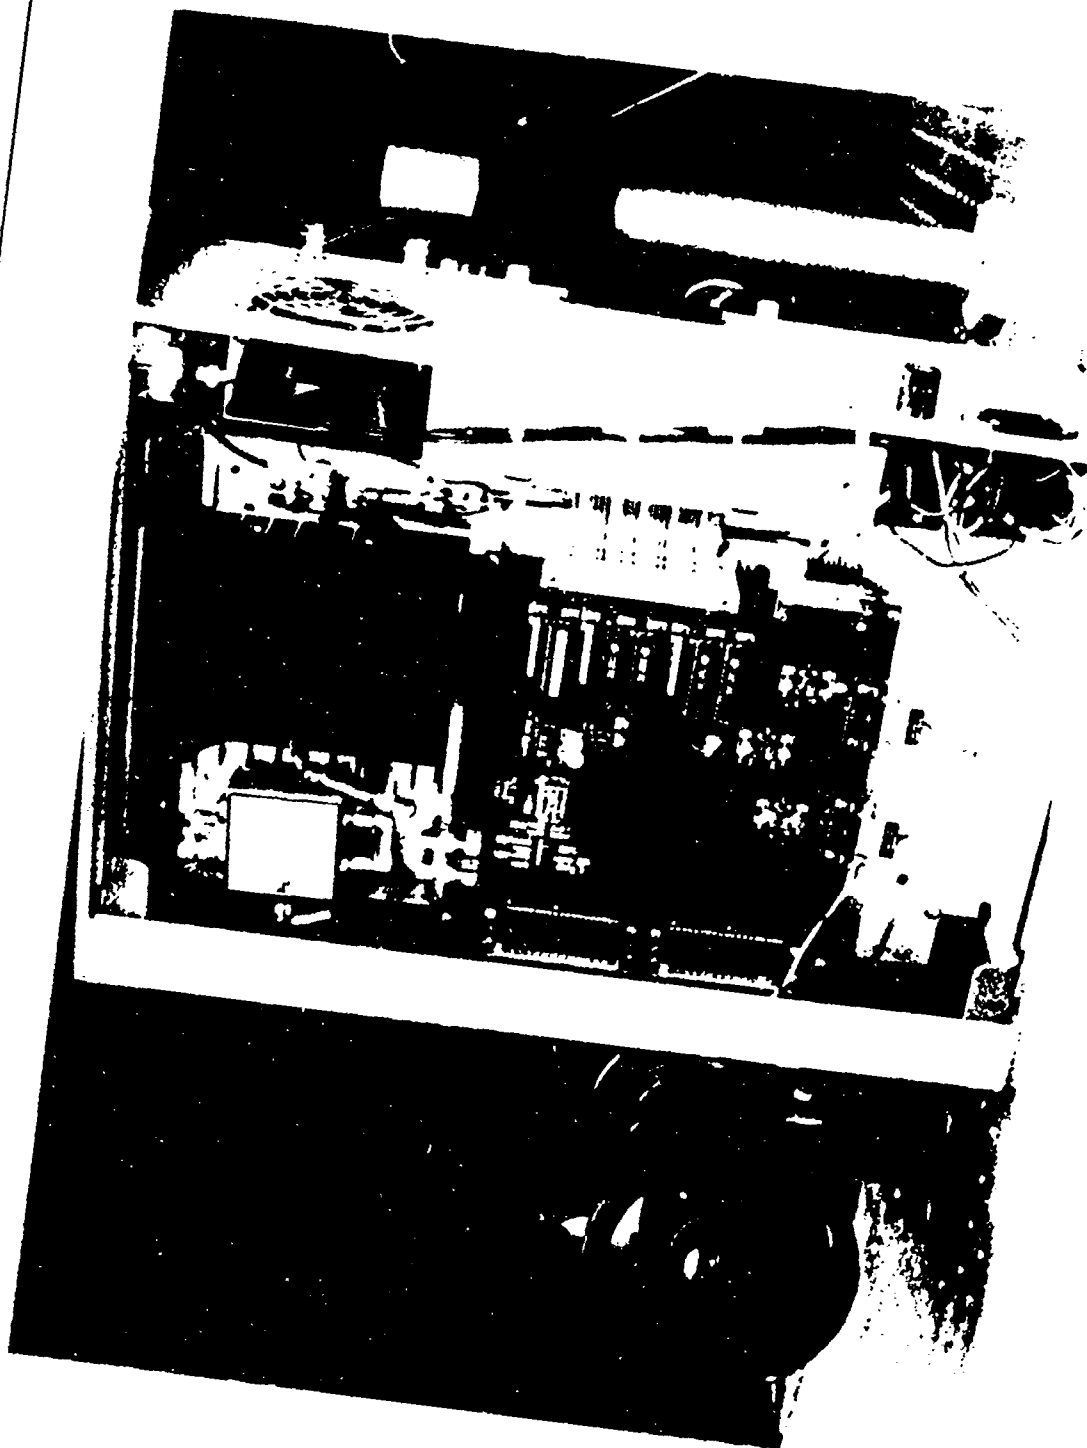


Figure 5.1-4 shows the other side of the electronics box. This view shows the two DDS generator boards on the right side of the box (Stanford Telecom Model #STEL-2272). The other power amplifier is located in the upper central region of the box, and the other signal combiner can be seen in the upper right hand corner. The CCD power transformer is located at the bottom.

5.2 Control and Analysis Software Description

The Lasercom system was designed for ease of use. When the computer boots up, it automatically loads Windows and runs with Norton desktop. To start the Lasercom system, simply double click the left mouse button with the cursor sitting on the Lasercom Icon, in the Applications group. This starts the software and turns on the hardware.


The software was written in Visual Basic 2.0 and is fully commented. Appendix A attached is a printout of the source code. Appendix B is a printout of the Help file, which explains the system operation and control in greater detail.

When the program first loads, a warning dialog box is displayed that explains about laser safety. Then the control window appears. In the top part of the screen is a white control area, in the bottom is the live TV camera output. The laser spot initial condition is on, with the spot centered in the right half of the display area, with the beam exiting the system in the center of the right-hand fisheye lens.

The spot can be moved to a new position by three different methods. The spot can be positioned by placing the mouse cursor anywhere on the white control area and clicking the left mouse button. The spot will then appear at that point. The white display area represents 360 degrees of horizontal positions and ± 18 degrees of vertical positions. The line in the center defines the split in the system between the left-hand fisheye and the right-hand fisheye output. The live TV output is split vertically, with the bottom half mapped to the left area and the upper half corresponding to the right half. Another way to manipulate the spot position is to place the mouse cursor on the spot and, while holding down the left mouse button, dragging the spot to a new location. The third method of spot positioning is to grab the slide bar with the mouse and drag it to a new location. This gives you independent control of the horizontal and vertical positions. The bars and the bar arrows can also be clicked on for coarse and fine position control, respectively. The position of the spot can only be controlled for a single spot. In order to control the position of multiple output spots, either independent frequency sources can be plugged into the front panel, or a pattern file can be written for time division multiplexing the spot positions. See the Help menu for details on writing a pattern file.

Along the top of the program is a menu bar. This lets you control things like displaying pattern files, zooming the spot, displaying multiple spots, scanning the spot, centroiding the spot, and calling on the Help files. To exit the program, either double click in the upper left corner or choose the File - Exit menu.

Figure 5.1-4. Photograph of Electronics Box (DDS Side)

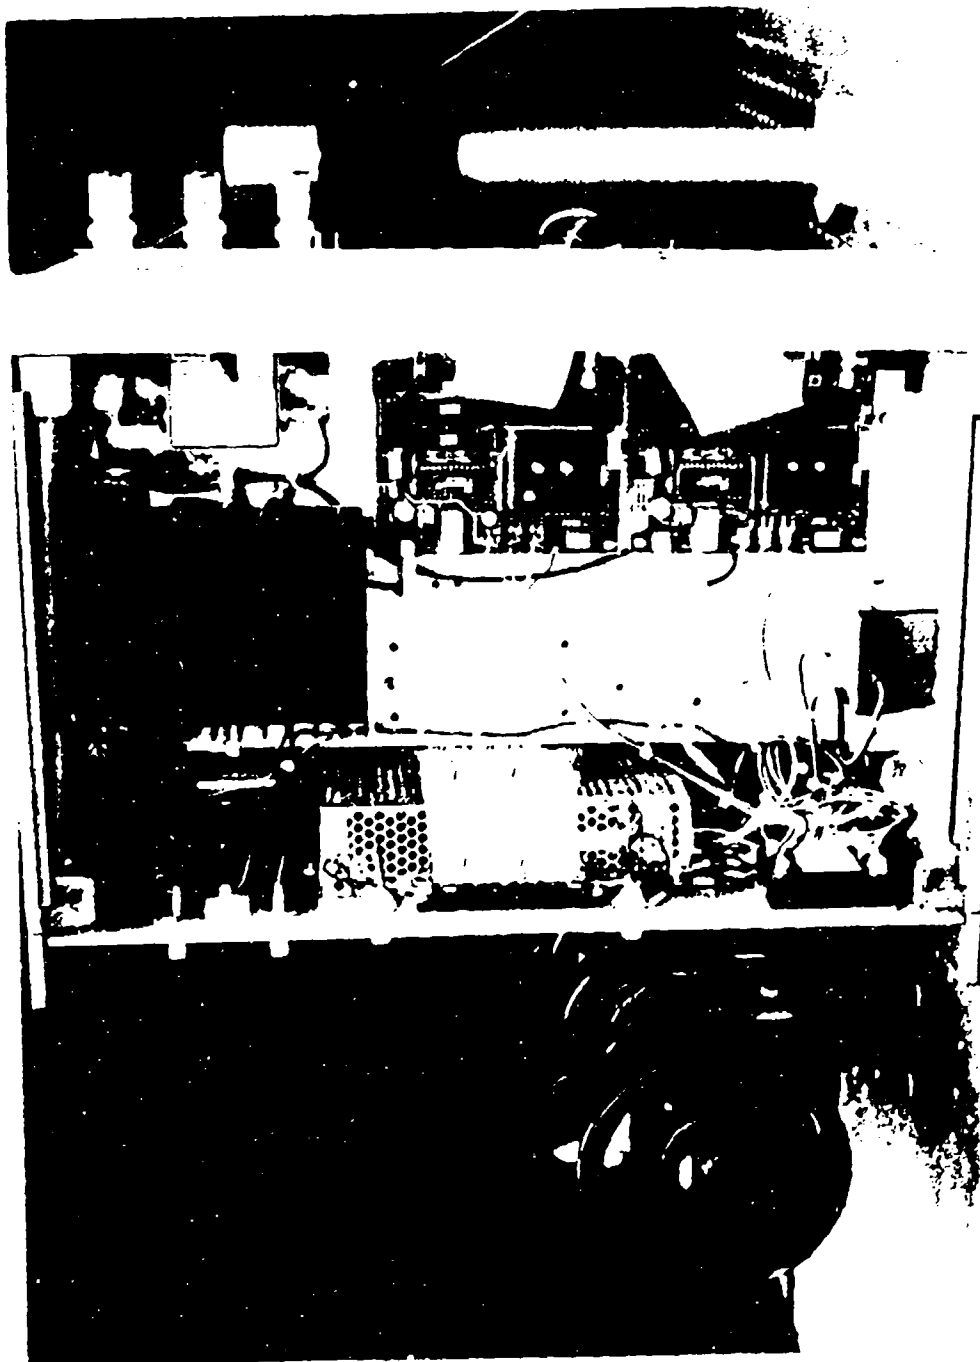

5.3 Breadboard Performance Summary

The primary objectives of the breadboard demonstration were to correlate theoretical predictions of Bragg cell performance (such as efficiency, switching speed, multi-beam generation, and beam zooming) with experimental data and to gather other data concerning system-level operations such as overall steering range, beam divergence, and throughput efficiency. All of the objectives of the breadboard were met, and with the one exception of throughput efficiency, all of the technical goals were achieved. The overall throughput efficiency was found to suffer for two reasons which will be explained in greater detail later: poor laser diode spectral quality and several uncoated (or wrongly coated) optical lens elements. The itemized compliance of the breadboard performance versus goals is given in Table 5.3-1.


Table 5.3-1. Itemized Compliance of Breadboard to Goals

<u>SOW Goal Specification</u>	<u>Breadboard Result</u>
• steering range: approx. $180^\circ \times 45^\circ$	• implemented $360^\circ \times 36^\circ$ (2 sectors)
• transmit beam size: 0.36° round	• successfully demonstrated
• zoom factor: minimum 10X (3.6°)	• successfully demonstrated over 11X
• multiple beam generation: min. 4	• successfully demonstrated (can "simulate" <u>many</u> more)
• end-to-end optical efficiency: min. 50%	• 13% demonstrated (limited by laser and >70% losses in "off-the-shelf" optics)
• steering response time: 30 microsec	• successfully demonstrated

The majority of the breadboard performance parameters can be measured by a diagnostic system that is built into the breadboard itself: a CCD camera array interfaced to the PC control computer with custom analysis software. This particular combination of hardware and software is hereafter referred to as the Built-in Test Set, or BTS. Several tests, however, required initial calibration tests separate from the BTS due to their unique demands. The BTS block diagram is illustrated in Figure 5.3-1. Note that the BTS is a self-contained analysis system that requires no additional laboratory equipment.

The optical design wavelength of the demonstration breadboard is 830 nm (infrared), although a 670 nm (red) laser is also incorporated into the breadboard for purposes of visual (naked eye) demonstration. All test descriptions and results in this Section are assumed to occur at the 830 nm design wavelength. No minimal specifications were implied for the 670 nm wavelength; in fact, it was found to be very difficult to optically align both the 670 and 830 nm lasers to the Bragg cells simultaneously through the same optics. As a result the 670 nm laser does not have the desired visual impact when the optical system is optimized for the 830 nm laser. In hindsight a better solution would have been to provide separate input optics for the two lasers so that they could be optimized individually.

Figure 5.3-1. Breadboard Built-in Test Set (BTS) Block Diagram

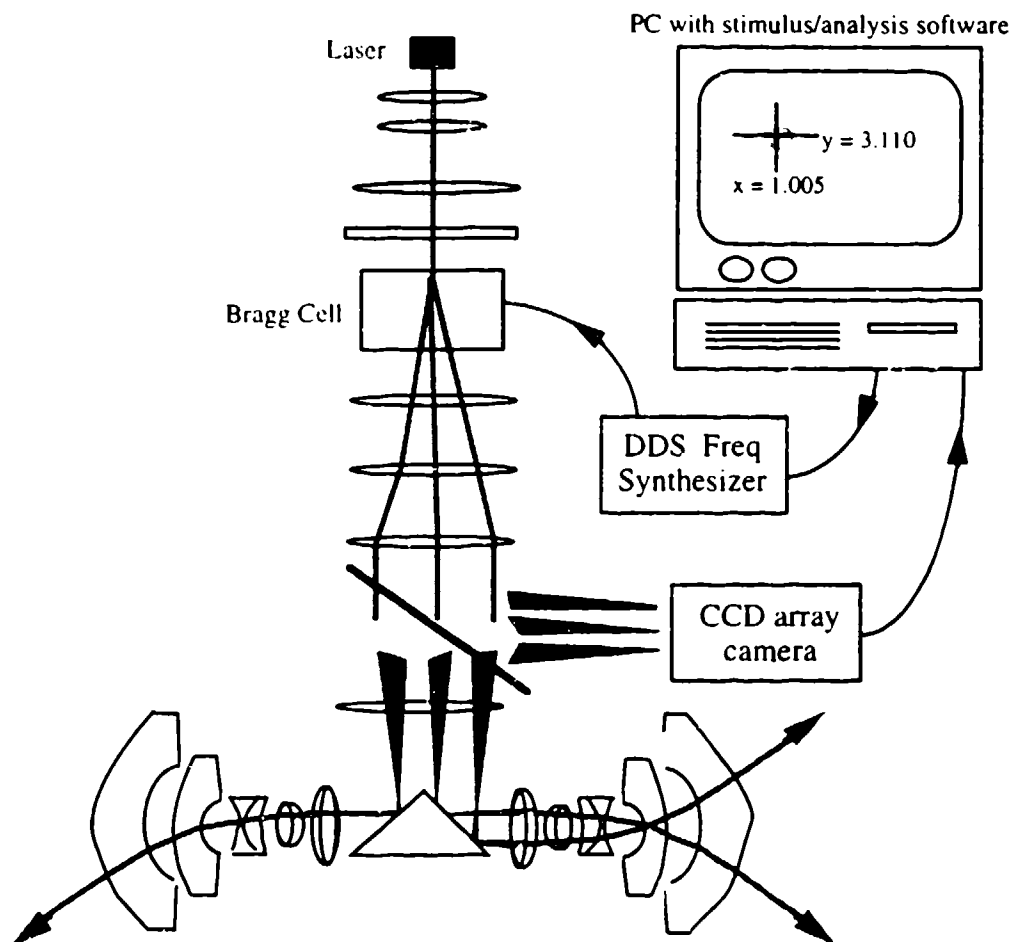

A test plan was developed for the breadboard and implemented with only some minor changes. The tests that were described in the test plan and performed on the breadboard are summarized in Table 5.3-2. The following paragraphs explain how the performance measurements were made and the data that was obtained for each of the SOW performance goals.

Table 5.3-2. Test Plan Summary

<u>Test ID</u>	<u>Test Name</u>	<u>Specifications</u>	<u>Test Setup</u>	<u>Comments</u>
A	Steering Range	360° x 36°	• Special • BTS	• Initially measured with "curved screens". • Measured on CCD after initial calibration.
B	Beam Divergence	0.36°	• Special • BTS	• Initially measured with beam profiler. • Measured on CCD after initial calibration.
C	Divergence Zooming	10:1	• Special • BTS	• Initially measured with beam profiler. • Measured on CCD after initial calibration.
D	Multiple Beams	qty. 4	• Special • BTS	• Visually observed on "curved screens". • Measured on CCD prior to exit lens.
E	Optical Efficiency	50%	Special	Measured with discrete photodetector
F	Response Time	40x 20 microsec	Special	Measured w/ APD detector & oscilloscope.

Test A. Steering Range


This test was performed by measuring the maximum angular steering range of the optical output at the exit of the wide-angle Nikon output lenses. Specifically, the limits of the horizontal and vertical steering range were determined by physically locating the steered beam on a curved screen placed approximately 1 foot from the output lens, as shown in Figure 5.3-2. A hand-held IR viewer was used to locate the beam position on the screen, and at the limits of the beam steering a pencil mark was made on the screen corresponding to the exact beam location. The beam was then incrementally steered by commands from the PC computer until the beam steering limits are reached (where clipping or vignetting of the beam occurs to a level no greater than 1 dBc). The locator marks on the screen were then used to geometrically determine the angular beam steering range as discussed below.

Horizontal range: Drop vertical lines to the bottom of the screen (i.e., to the bench top) from the maximum horizontal extent locator marks. Draw a line that intersects these points with the vertical drop point on the bench top that corresponds to the center of the wide angle lens. After doing this for both left and right steering limits the horizontal steering range can be determined directly from the angle between these lines.

Vertical range: The vertical angular steering range was measured by triangulation between two maximum extent locator marks lying on a vertical drop line and the distance to the wide angle lens.

The results of this test successfully confirmed that the total breadboard steering range is 360° horizontal by 36° vertical.

Figure 5.3-2. Test A - Beam Steering Range

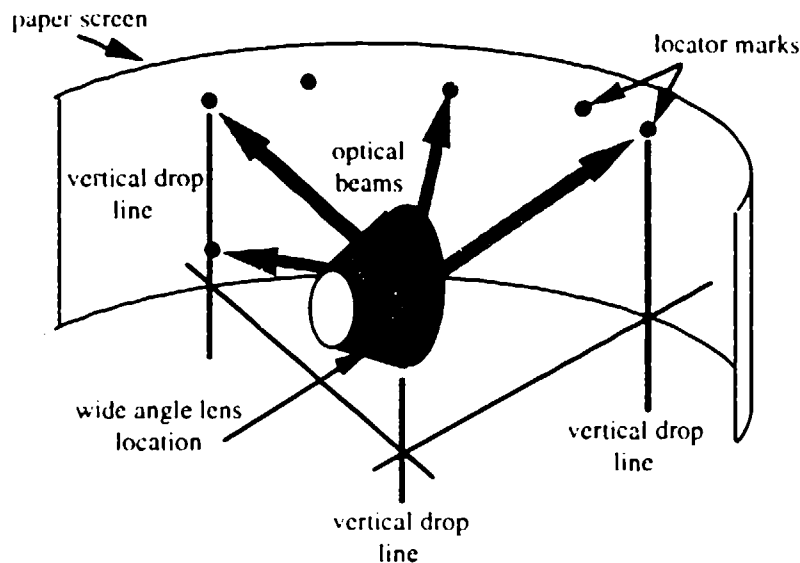

Test B. Beam Divergence

This test was performed using a newly purchased beam profiler system, the Spiricon Model #LBA-100A. Placed after the wide angle exit lens, the Spiricon makes very accurate beam profile measurements including beam diameter at both the $1/2$ (FWHM) and e^{-2} (Gaussian) power points. By taking a measurement at one axial location and then another at a further axial location the Spiricon can automatically calculate the divergence of the beam. This test confirmed that the diffraction-limited beam divergence was 6.29 mrad, or 0.36° . Therefore, the number of resolvable beams is 1000 in the horizontal axis ($360^\circ/0.36^\circ$) and 100 in the vertical ($36^\circ/0.36^\circ$).

Test C. Divergence Zooming

This test is intended to confirm that the optical beam will effectively enlarge or "zoom" by a factor of at least 10 in both axes, or to increase to about 3.6° from the 1X value of 0.36° in both the horizontal and vertical axes. Note that the amount of actual divergence can be varied continuously anywhere between a factor of 1X to 20X or more by commanding the proper number and spacing of frequencies into the Bragg cells. The pull-down "Zoom Menu" in the PC control software has pre-programmed data for generating 1X, 3X, 5X, 7X, 9X, and 11X zooms. This test was performed using the previously mentioned Spiricon beam profiler, and the results are shown in Table 5.3-3. It is seen that very good agreement was obtained between the desired and actual measured zoom ratio. It would have been a simple matter to adjust the frequency programming to the Bragg cells to obtain even better correlation, but it was deemed unnecessary since the primary intent was merely to demonstrate a minimum of 10X zooming.

Table 5.3-3. Beam Zooming Test Results

<u>Desired Zoom Ratio</u>	<u>Measured Zoom Ratio</u>
1 X	1 X
3 X	2.66 X
5 X	4.66 X
7 X	6.59 X
9 X	9.17 X
11 X	10.80 X

Test D. Multiple Beam Generation

The goal of this test is to produce a minimum of four independently steered beams from the Bragg cells. True multiple beam generation requires that frequencies be simultaneously combined before insertion into the Bragg cells. Each Bragg cell therefore has been supplied with four input channels each: 1 internal DDS channel and 3 front panel ports for externally applied signals. We have inserted signals into the front panel ports and confirmed the true multiple beam generation.

This test can also be "simulated" using BTS capability. The procedure is very similar to the previous zoom approach in Test C, except here full-aperture beams are generated in a time-multiplexed fashion. The PC commands the Bragg cells to vary between 4 frequencies that correspond to the desired steering directions. The frequencies are switched at the fastest switching speed of the 500 Spot Bragg Cell (40 microsecond aperture). The simulation occurs due to the fact that the beam is being steered faster than the CCD camera can respond, and therefore 4 statically steered beams "appear" to occur. Note that the steering frequencies can be arbitrarily chosen and that more or less than 4 unique beams may be steered by commanding the proper number of frequencies into the Bragg cells. In fact, this is the same technique that is used to generate special scans and patterns from the pull-down "File Menu" and "Scan Menu".


The result of this test is that the generation of at least 4 simultaneously and independently steered beams was successfully demonstrated. The divergence angle of each beam is the same as for a single CW steered beam. Note that ghost beams are also generated in this process since any steering frequency in one Bragg cell interacts optically with any steering frequency in the other Bragg cell. For example, 2 frequencies input to each cell in order to generate $N=2$ unique beams also produces 2 ghost beams. In general, N^2 total beams are formed, of which N are primarily sought and N^2-N are ghost beams.

Test E. Optical Efficiency

The purpose of this test is to measure the end-to-end optical efficiency of the overall demonstration breadboard, defined as the optical power difference between the output of the source laser diode and the beam that finally exits the wide-angle lens. The optical efficiency of the Bragg cells is a function of their drive power, so this test was performed after the saturation drive power (i.e., maximum efficiency) of the Bragg cells had first been determined. The test was performed by placing a photodetector in the path of the optical beam at various locations between the laser source and the final wide-angle exit lens.

The result of this test is that the overall optical efficiency of the demonstration breadboard is about 13% (-9 dB), instead of the goal 50% (-3 dB). Figure 5.3-3 presents the component-by-component breakdown of the optical power through the system.

Figure 5.3-3. Measured Optical Power through Breadboard

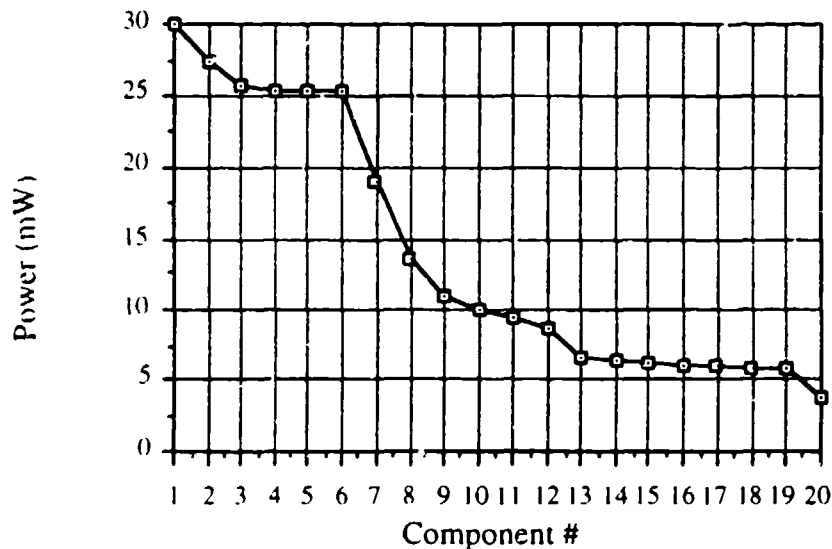


Component Definition:

1. Laser Diode	6. Mirror	11. Splitter	16. Mirror
2. Collimator	7. Horiz. Bragg cell	12. 80mm Cyl lens	17. Mirror
3. Mirror	8. Wave Plate	13. Mirror	18. 150 mm lens
4. 2 waveplates	9. Vert. Bragg cell	14. 40 mm lens	19. 150 mm lens
5. 6X Beam Expander	10. 300mm Cyl. lens	15. 100 mm lens	20. Nikon wide lens

Another way to view the optical power losses is on a component-by-component throughput percentage, as shown in Figure 5.3-4. It can be seen in Figure 5.3-4 that five of the 20 breadboard components failed to meet at least 90% optical throughput efficiency: #7 Horizontal Bragg Cell, #8 Wave Plate, #9 Vertical Bragg Cell, #13 Mirror, and #20 Wide Angle Lens. The lack of a proper 830 nm anti-reflection coating is the reason that #8 Wave Plate (which had to be ordered quickly without time for coating delays) and #20 Wide Angle Lens (which is an off-the-shelf 35mm camera lens coated for visible only) performed poorly. The reason that the #13 Mirror performed poorly is due to the fact that unprotected aluminum-coated mirrors do not reflect well at a 45° angle of incidence at 830 nm wavelength. A gold or silver coated mirror would do a much better job in this location.

Figure 5.3-4. Component Throughput Percentage

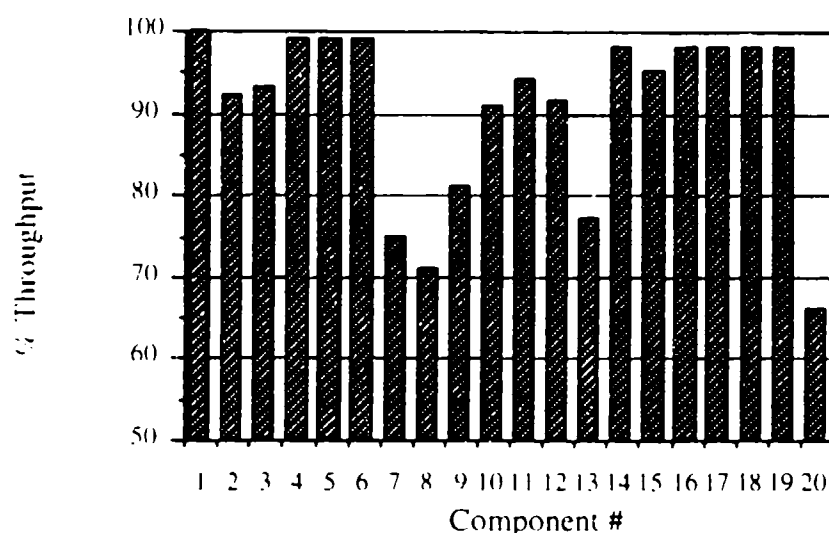

Component Definition:


1. Laser Diode	6. Mirror	11. Splitter	16. Mirror
2. Collimator	7. Horiz. Bragg cell	12. 80mm Cyl lens	17. Mirror
3. Mirror	8. Wave Plate	13. Mirror	18. 150 mm lens
4. 2 waveplates	9. Vert. Bragg cell	14. 40 mm lens	19. 150 mm lens
5. 6X Beam Expander	10. 300mm Cyl. lens	15. 100 mm lens	20. Nikon wide lens

The remaining two components that performed less than expected are the #7 Horizontal Bragg Cell and #9 Vertical Bragg Cell. This was somewhat of a surprise given the excellent initial measurements that were made on the Bragg cells after fabrication. As discussed in Section 4.1 the Horizontal Bragg Cell (500 Spot Cell) had a small signal response of 700%/W, and was expected to approach 95% efficiency or more at approximately 300 mW of drive power. Similarly, the Vertical Bragg Cell (200 Spot Cell) had a small signal response of 400%/W, and was expected to approach 95% efficiency or more at approximately 400 mW of drive power. This led to an investigation of the cause of the performance degradation.

The impressive small-signal responses reported in Section 4.1 are noted to have been made using a very high quality Spectra-Diode Labs laser diode Model 5400 (100 mW, index-guided, single mode). This raised the question as to the quality of the laser diode that was purchased for the breadboard, which is a Sharp laser diode packaged by D. O. Industries (DOI), Model I-9280-SHAC. The spectrum of the laser had been measured at delivery and found to be "adequate", but was remeasured again in light of the efficiency problems. It was found to have degraded significantly. The results are given in Figure 5.3-5, where on the left hand side is the initial measurement and on the right hand side is the latest measurement. It is clear that substantial degradation in longitudinal mode structure has occurred, and the laser is now running with a large number of wavelengths. The spatial profile was also measured using the Spiricon beam profiler, as shown in Figure 5.3-6. This also confirmed that the laser had a degraded transverse mode structure, probably directly related to the degraded longitudinal mode structure.

Figure 5.3-5. Laser Diode Spectral Quality Measurements

Initial Measurement

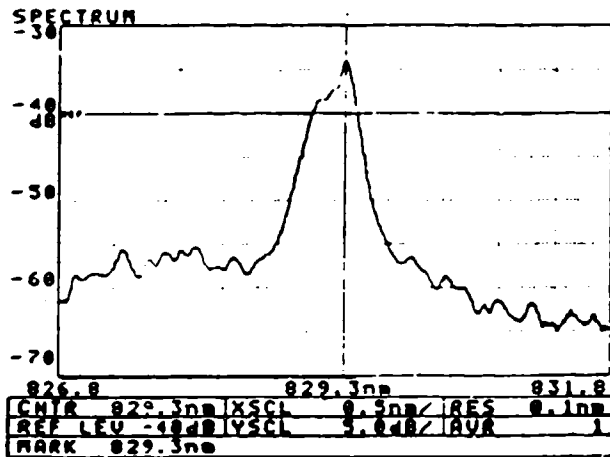

Latest Measurement



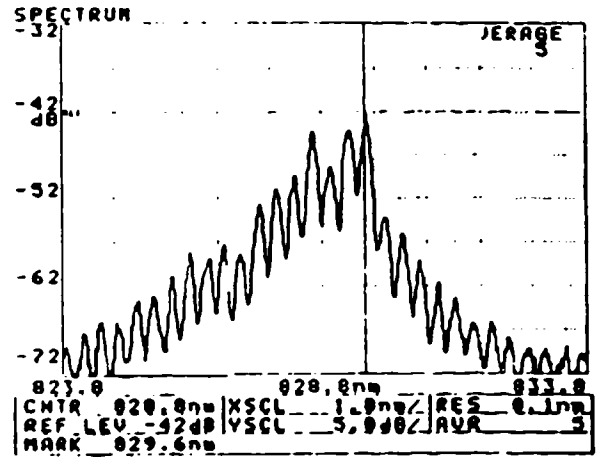


Figure 5.3-6. Laser Diode Spatial Profile Measurement

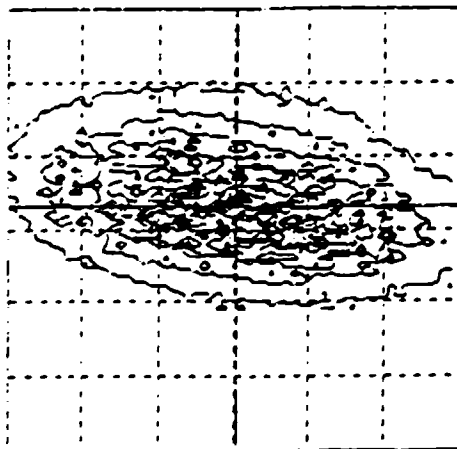

Horizontal Cursor Profile

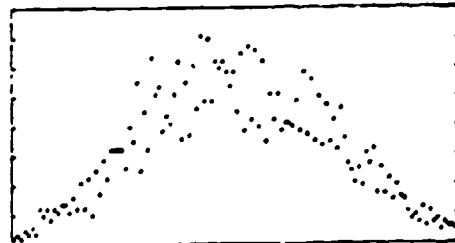

Vertical Cursor Profile



Due to a lack of time and funds at the end of the program the laser diode problem could not be corrected. It is surmised that the poor laser quality directly contributed to the lower than expected Bragg cell performance since the acoustic/optical phase matching requirements inside the Bragg cell are rather stringent. In other words, not all of the multiple wavelengths from the laser can be properly phase-matched simultaneously inside the Bragg cell to produce a high deflection response. Therefore, some of the light from the DOI breadboard laser is being "wasted" since the Bragg cell cannot properly deflect it. The small-signal response was also measured using the DOI laser and found to be about half the response measured previously with the SDL laser.

Test F. Response Time

The purpose of this test was to determine the response time limit for switching of the optical beam steering direction. Since this is completely determined by the Bragg cell response time, the results of this test were given in Section 4.1, Figure 4.1-13 as part of the Bragg cell checkout testing. The response time was measured by pulsing or time-gating a signal through the Bragg cell and observing the rise, dwell, and fall time of the resulting deflected optical beam. This test successfully verified that the 60% response time of the Horizontal (500 Spot) Bragg Cell was 30 microseconds, and 15 microseconds for the Vertical (200 Spot) Cell. The 100% response time for the Horizontal and Vertical Cells is 40 and 20 microseconds, respectively.

6.0 Conclusions

As a result of this effort it has been proven that acousto-optic Bragg cells can perform very useful and unique functions for controlling the transmitted beam in a laser communications system. Analytical tools were developed to model the performance of Bragg cells for this application, and other design trades were made which led to the choice of the optimum Bragg cell material (TeO_2), fabrication geometry, and heat sinking techniques. A breadboard lasercom transmitter was developed which successfully demonstrated that Bragg cells can be used to steer the transmit beam over a very wide range (in this case, $360^\circ \times 36^\circ$) and with very fast speed ($< 40 \mu\text{sec}$). The steered beam was shown to have a diffraction limited beam divergence (0.36° in this case). Several complications led to an overall optical efficiency of about 13% for the breadboard, as explained in Section 5.3, but convincing evidence is provided that the overall optical efficiency of a customized optical system can be greater than 70%, as explained in Section 4.2.2. Also, it is shown that the overall package size for a customized system can be on the order of 128 in³, including lasers, Bragg cells, and all optical components.

Some unique attributes of Bragg cells were demonstrated by the breadboard, including multiple simultaneous beam steering (> 4 simultaneous beams) and variable beam divergence ($> 10:1$ beam spreading). Significantly, all these capabilities are provided by Bragg cells which are rugged, long-life components that have no moving parts. Bragg cells are, therefore, very attractive components from a systems application point-of-view.

A custom electronics box including frequency generators was developed for the breadboard using direct digital synthesis (DDS) to provide ultra-stable and fast frequency switching for the Bragg cells. These electronics can be significantly miniaturized for flight applications.

In summary, acousto-optic beam steering technology has been proven as a viable approach for lasercom beam steering at the breadboard level. The next step for development is to produce brassboard-level hardware which implements miniaturized packaging techniques and to obtain performance data under simulated or real environmental loading conditions.

Appendix A. Breadboard Control PC Source Code

The following pages present the listing of the source code that exists on the breadboard PC computer for all of the control and diagnostic functions. The code is written in Visual Basic®, which is a registered trademark of the Microsoft Corp. The code has been extensively commented; however, it is suggested that any desired changes not be made before contacting the author first to avoid potential complications: Lee Burberry, Harris Corp. HISD, M/S 13-7747, P. O. Box 98000, Melbourne, FL, 32902, phone (407)727-5317.

LASERCOM.FRM - 1

```
Sub BOARDINIT ()
'SETUP DIGITAL I/O BOARD FOR 24 BITS ALL OUTPUT
For I = 0 To 2
    status = DIG_Prt_Config$(ByVal 1, ByVal I, ByVal 0, ByVal 1)
Next I
'set all bits ports 0, and 1 to zero
portout(0) = 0
portout(1) = 0
portout(2) = (2 + 4 + 8 + 16)
'2 = HARDWARE ON 4=RESET 8=W1 16=W2 INITIALIZED TO SET
For I = 0 To 2 'send out initial states
    status = DIG_Out_Port$(ByVal 1, ByVal I, ByVal portout(I))
Next I
XFreqOut = Val(form1!Text2.Text) 'read initial state from screen text
YFreqOut = Val(form1!Text4.Text) 'read initial state from screen text
Call Freqout 'initialize Y and Y frequencies
End Sub
```

Sub CENTROIDING () 'routine to find weighted average of spot location

```
Dim DegreeX, DegreeY As Single 'local X and Y holders
Dim Pix As Single 'Pixel Grey Level
Dim I, J As Integer 'local counters
Dim SumX, SumY, SumW As Double 'Sum holders
Dim XLower, XUpper, YLower, YUpper As Integer 'box size holders
Dim ymax, ymin, YDelta As Integer 'Vertical scale holders
Dim XHalf As Integer 'which half
Static Region As AVrect 'define a region variable for partial frame capture
```

```
Const XOff = 10 'extent of centroid area in X
Const YOff = 30 'extent of centroid area in Y
Const XMax = 210 'Global size of x area for scaling
Const XMin = -30 'Global size of x area for scaling
Const PixThreshold = .1 'if gray level below this, don't count it
```

```
If CentroidOn = True Then 'only do it when button pushed
    form1!Picture2.Visible = True 'Picture2 hold data for centroiding
    form1!AvControl1.Visible = False 'hide real time video
    form1!avoverlay.Visible = False 'hide overlay window
    form1.Timer5.Enabled = False 'turn off timer so no reentry
    OldMouse = Screen.MousePointer 'save old mouse pointer shape
    Screen.MousePointer = 11 'set to hourglass while centroiding
    SumX = 0 'initialize Sum X
    SumY = 0 'initialize Sum Y
    SumW = 0 'initialize Weighted Sum
    YDelta = -47
    'where to centroid around in degree space
    DegreeX = Val(form1!Text1) 'get position from screen text
    If DegreeX >= 180 Then 'Which half?
        Ymin = -160 + YDelta
        ymax = 210 + YDelta
        DegreeX = DegreeX - 180 'X mod 180
        XHalf = 180 'remember to add 180 to output
    Else
        Ymin = -160
        ymax = 210
        XHalf = 0
    End If
    'Form1!Picture2.Scale (-30, 25)-(220, -25) 'scale the data
    form1!avoverlay.Scale (XMin, ymax)-(XMax, Ymin) 'scale the data
    DegreeY = Val(form1!Text3) 'get position from screen text
    'set limits
    YLower = DegreeY - YOff
    If YLower < Ymin Then YLower = Ymin
    YUpper = DegreeY + YOff
    If YUpper > ymax Then YUpper = ymax
    XLower = DegreeX - XOff
    If XLower < XMin Then XLower = XMin
    xupper = DegreeX + XOff
    If xupper > XMax Then xupper = XMax
```

LASERCOM.FRM - 2

```

'draw box around spot
form1!avoverlay.Line (DegreeX - XOff, DegreeY - YOff)-(DegreeX + XOff, DegreeY + YOff), white
, B
'grab video to picture box to get access to pixel data
a$ = "d:\temp.bmp" 'file to hold bitmap on ramdrive
'define the region of the video field to grab
Region.Left = 50
Region.Top = 130
Region.Right = 530
Region.Bottom = 270
LResult = AVgrabtofile(AvControl1.AvVideoHandle, a$, File_windows8gray, Region)'save REGION
OF video to Ramdisk
LResult = AVgrabtofile(AvControl1.AvVideoHandle, a$, File_windows8gray, ByVal 0&)'save ALL vi
deo to Ramdisk
form1!Picture2.Picture = LoadPicture(a$)'get video from disk so can be accessed
form1!Picture2.Scale (XMin, YMax)-(XMax, YMin)'scale the data after screen size dynamically a
djusted
'centroid by waited average
For I = YLower To YUpper
  For J = XLower To XUpper
    'get pixel value (b/w camera)
    Pix = (form1!Picture2.Point(J, I) And 255) / 255'keep numbers small so no overflow
    If Pix < PixThreshold Then Pix = 0
    SumX = SumX + Pix * J 'set up sum of POSITION wights
    SumY = SumY + Pix * I 'set up sum of POSITION wights
    SumW = SumW + Pix 'set up sum of PIXEL wights
  Next J
Next I
If SumW > 0 Then 'If Sum of all the pixels is nonzero then
  XCentroid = SumX / SumW + XHalf 'calculate the X centroid
  YCentroid = SumY / SumW 'calculate the Y centroid
Else 'If all zero then centroid is zero
  XCentroid = 0
  YCentroid = 0
End If
If Calibrated Then 'use calibration table to calculate location
' find calibration box upper left coordinates and frequencies

uxd = Val(form1.Text1) / 30 ' demand x-frequency in array coordinate space
uyd = (18 - Val(form1.Text3)) / 3 ' demand y-frequency in array coordinate space

nx = Int(uxd) ' box left array coord
If nx = 12 Then nx = 11
ny = Int(uyd) ' box top array coord
If ny = 12 Then ny = 11

dx00 = nx * 30 ' demand box left frequency
dy00 = 18 - ny * 3 ' demand box top frequency

' find box corner frequencies
x00 = XCentroids(nx, ny)
x10 = XCentroids(nx + 1, ny)
x01 = XCentroids(nx, ny + 1)
x11 = XCentroids(nx + 1, ny + 1)
y00 = YCentroids(nx, ny)
y10 = YCentroids(nx + 1, ny)
y01 = YCentroids(nx, ny + 1)
y11 = YCentroids(nx + 1, ny + 1)

' estimate "Should-Have-Been" frequencies xfr, yfr
a1 = x10 - x00
a2 = y10 - y00
b1 = x01 - x00
b2 = y01 - y00
dtrm = a1 * b2 - a2 * b1 'matrix determinant
c1 = x11 + x00 - x10 - x01
c2 = y11 + y00 - y10 - y01
d1 = XCentroid - x00
d2 = YCentroid - y00
xxx = 0
vvv = 0

'use successive approximation to find location

```

LASERCOM.FRM - 3

```

For I = 1 To 5
    e1 = d1 - c1 * xxx * yyy
    e2 = d2 - c2 * xxx * yyy
    xxx = (b2 * e1 - b1 * e2) / dtrm
    yyy = (a1 * e2 - a2 * e1) / dtrm
Next I
'These are the calibrated values
XCentroid = dx00 + 30 * xxx
YCentroid = dy00 - 3 * yyy
End If
'Picture 2 is visible, show area of centroiding
form1!Picture2.Line (DegreeX - XOff, DegreeY - YOff)-(DegreeX + XOff, DegreeY + YOff), white,
B
'Display Centroid results as text on the screen
form1.Label6.Caption = Format$(XCentroid, "0.00")
form1.Label8.Caption = Format$(YCentroid, "0.00")
form1.Refresh 'update display
form1.Refresh 'update display
form1.Timer5.Enabled = True 'turn on again for next centroid
Screen.MousePointer = OldMouse 'set back to before state
'Erase box with another Xor draw
form1!avoverlay.Line (DegreeX - XOff, DegreeY - YOff)-(DegreeX + XOff, DegreeY + YOff), white
, B
Else 'centroider is off
form1.Label6.Caption = " Off" 'status output if centroid off
form1.Label8.Caption = " Off"
End If
End Sub

```

```

Sub TIMER6_Timer ()
End Sub

```

```

Sub TVFRAMESETUP () 'set up form1 control sizes
h = form1.Height 'get the vertical size of the form
w = form1.Width 'get the horizontal size of the form
'scale all displays to those sizes
form1.Hide 'turn off the form while resizing
'setup the video frame grabber
form1!AvControl1.Top = h * .25
form1!AvControl1.Left = w * .02
form1!AvControl1.Height = h * .65
form1!AvControl1.Width = (3 / 2) * form1!AvControl1.Height
'setup the video frame grabber overlay window
form1!avoverlay.Top = h * .25
form1!avoverlay.Left = w * .02
form1!avoverlay.Height = h * .65
form1!avoverlay.Width = (3 / 2) * form1!AvControl1.Height
'set up a picture box to hold the data for centroiding
form1!Picture2.Top = h * .25
form1!Picture2.Left = w * .1
form1!Picture2.Height = h * .65
form1!Picture2.Width = (3 / 2) * form1!AvControl1.Height
'put a yellow bar in the middle of the video window to show split halves
form1!Sepbar.Height = form1!AvControl1.Height * .005
form1!Sepbar.Top = form1!AvControl1.Top + (form1!AvControl1.Height / 2) - (form1!Sepbar.Height / 2)
form1!Sepbar.Left = form1!AvControl1.Left
form1!Sepbar.Width = form1!AvControl1.Width
'set up point display windows
form1!Picture1.Top = h * .05
form1!Picture1.Left = w * .1
form1!Picture1.Width = w * .65
form1!Picture1.Height = h * .1
'set up horizontal scroll bar
form1!HScroll1.Top = h * .17
form1!HScroll1.Left = w * .1
form1!HScroll1.Width = w * .65
form1!HScroll1.Height = h * .01
'set up vertical scroll bar
form1!VScroll1.Top = h * .95
form1!VScroll1.Left = w * .77
form1!VScroll1.Width = h * .025

```

LASERCOM.FRM - 4

```

form1.VScroll1.Height = h * .1
'set up X degree text display
form1.Text1.Top = h * .2
form1.Text1.Left = w * .3
form1.Label1.Top = h * .2
form1.Label1.Left = w * .38
'set up X Frequency text display
form1.Text2.Top = h * .2
form1.Text2.Left = w * .5
form1.Label2.Top = h * .2
form1.Label2.Left = w * .58
'set up Y degree text display
form1.Text3.Top = h * .06
form1.Text3.Left = w * .8
form1.Label3.Top = h * .07
form1.Label3.Left = w * .88
'set up Y Frequency text display
form1.Text4.Top = h * .12
form1.Text4.Left = w * .8
form1.Label4.Top = h * .13
form1.Label4.Left = w * .88
'set up centroid Label
form1.centroidlabel.Top = h * .45
form1.centroidlabel.Left = w * .78
'set up X centroid text output
form1.Label6.Top = h * .63
form1.Label6.Left = w * .78
form1.Label7.Top = h * .63
form1.Label7.Left = w * .85
'set up Y centroid text output
form1.Label8.Top = h * .53
form1.Label8.Left = w * .78
form1.Label9.Top = h * .53
form1.Label9.Left = w * .85
'turn the form back on
form1.Show
'put an initial spot on the screen
SPOTDRAW
End Sub

```

```

Sub ABOUT_Click ()
AboutBox.Show 'if requested tell about program origin
End Sub

```

```

Sub CALIBRATE_Click ()
'Routine to Calibrate the Centroider
Dim I, J As Integer 'Local counters
Dim X, Y As Single 'local Degree inputs

Title = "Calibration of Centroider" 'Message Box Title
Msg = "This Will Take a While. " 'set up message
Msg = Msg & " Do you want to continue?" 'more message
DgDef = MB_OKCANCEL + MB_ICONQuestion ' Describe dialog buttons
Response = MsgBox(Msg, DgDef, Title) ' Get user response.
If Response = IDOK Then ' Evaluate response
    Screen.MousePointer = 11 'set to Hourglass
    CentroidOn = True 'set the global variable
    For J = 0 To 12 'step through Y
        Y = (J - 6) * -3 'Get Y from J (18 to -18 step -3)
        For I = 0 To 12 'step through X
            X = I * 30 'Get X from I (0 to 360 step 30)
            HScroll1.Value = X * 100 'set scroll bars, causes
            VScroll1.Value = (VMax / 200 - Y) * 100 'spot to be output
            Call CENTROIDING 'Find Spot centroid
            form1.Timer5.Enabled = False 'turn timer off (centroid turned it on)
            XCentroids(I, J) = XCentroid 'save the position
            YCentroids(I, J) = YCentroid 'save the position
        Next I
    Next J
    CentroidOn = False 'set the global variable
    Screen.MousePointer = 1 'set to Arrow
    Calibrated = True 'set global variable
    form1.centroidlabel = "Calibrated Centroid Position"

```

LASERCOM.FRM - 5

```

Timer5.Enabled = False'turn timer off
form1.Picture2.Visible = False 'turn off picture2 when done
form1.AvControl1.Visible = True'show real time video
form1.AvOverlay.Visible = True'allow overwriting on window
form1.Label6.Caption = " Off" 'status output if centroid off
form1.Label8.Caption = " Off"
End If
End Sub

Sub CENTOFF_Click () 'Turn centroiding Off
CentroidOn = False 'set global variable
Timer5.Enabled = False'turn timer off
form1.Picture2.Visible = False 'turn off picture2 when done
form1.AvControl1.Visible = True'show real time video
form1.AvOverlay.Visible = True'allow overwriting on window
form1.Label6.Caption = " Off" 'status output if centroid off
form1.Label8.Caption = " Off"
End Sub

Sub CENTON_Click () 'Turn centroiding On
CentroidOn = True 'set the global variable
Timer5.Enabled = True'turn timer on
End Sub

Sub CONTENTS_Click ()
Dummy = Shell("c:\windows\winhelp.exe lasercom.hlp")'start windows help on help
End Sub

Sub DIAGONAL_Click () 'draw a diagonal line of light
Dim IncrementX As Single 'x step size
Dim IncrementY As Single 'y step size
Dim FreqX As Single 'local x frequency holder
Dim FreqY As Single 'local y frequency holder
Dim J As Integer 'local counter
Call TURNZOOMOFF 'turn off the zoom if on
'leave enable line on to watch the drawing be created
Call RST 'TOGGLE RESET LINES to clear Fifo
IncrementX = (MaxXFreq - MinXFreq) / 249 '250 x steps
IncrementY = (MaxY1Freq - MinY1Freq) / 249 '250 Y steps
FreqY = MinY1Freq 'set to initial step
For FreqX = MinXFreq To MaxXFreq Step IncrementX 'step through frequencies
For J = 0 To 7 'eight occurrences in the fifo for each freq (8*250=2000)
Call DOSENDING(FreqX, FreqY) 'mid value for y freq
Next J
Call DRAMMULTI(FreqX, FreqY) 'draw each spot on the screen without erasing old spots
FreqY = FreqY + IncrementY 'increment Y frequencies with X
Next FreqX
IncrementY = (MaxY2Freq - MinY2Freq) / 249 'another 2000 fifo location
FreqY = MinY2Freq 'reset Y for second half
For FreqX = MinXFreq To MaxXFreq Step IncrementX
For J = 0 To 7 'eight occurrences in the fifo for each freq
Call DOSENDING(FreqX, FreqY) 'mid value for y freq
Next J
Call DRAMMULTI(FreqX, FreqY) 'draw each spot on the screen without erasing old spots
FreqY = FreqY + IncrementY 'increment Y frequencies with X
Next FreqX
End Sub

Sub DONE_Click () 'Ready to terminate program run
Call TURNZOOMOFF 'turn off zoom and centroider if on
form1.Timer5.Enabled = False 'turn off centroider timer
Call ONOFF(False)
End
End Sub

Sub EIGHTBEAM_Click () 'display one spot in each corner of the two halves
Dim FreqX As Single 'local frequency holder
Dim FreqY As Single 'local frequency holder
Call TURNZOOMOFF 'turn off the zoom if on
Call ENABLE(0) 'TURN OFF READ
Call RST 'TOGGLE RESET LINES
FreqX = MinXFreq 'set frequencies to Left half, lower left
FreqY = MinY1Freq

```

LASERCOM.FRM - 5

```

'1
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'2
FreqY = MaxY1Freq 'Left half, Upper left
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'3
FreqX = MinXFreq
FreqY = MinY2Freq 'Right Half Lower Left
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'4
FreqY = MaxY2Freq 'Right Half Upper Left
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'5
FreqX = MaxXFreq 'Left half, lower right
FreqY = MinY1Freq
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'6
FreqY = MaxY1Freq 'left half, Upper Right
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'7
FreqX = MaxXFreq
FreqY = MinY2Freq 'Right half, Lower Right
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
'8
FreqY = MaxY2Freq 'Right Half, Upper Right
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
  Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw the spot
Call ENABLE(1) 'TURN READ LINE BACK ON
End Sub

```

```

Sub ELEVENX_Click () 'zoom spot 11 X
threeX.Checked = False
fiveX.Checked = False
sevenX.Checked = False
nineX.Checked = False
elevenX.Checked = True 'check the correct menu Item
ZOOMOFF.Checked = False
IsZoomed = SMALLSPOT * 11 'set spot to 11 X size
SPOTDRAW 'draw the spot
Freqout 'send out the spot
End Sub

```

```

Sub FIVEX_Click () 'zoom the spot to 5 X
threeX.Checked = False
fiveX.Checked = True 'check the correct menu Item
sevenX.Checked = False
nineX.Checked = False
elevenX.Checked = False
ZOOMOFF.Checked = False
IsZoomed = SMALLSPOT * 5 'set the spot size

```


LASERCOM.FRM - 7

```
SPOTDRAW          'draw the spot
Freqout           'send out the spot
End Sub
```

```
Sub FOPEN_Click () 'choose to open a picture file
Load FileBox      'get the dialog box
FileBox.Show      'show the dialog box
End Sub
```

```
Sub FORM_GotFocus () 'whenever the Form is on top
SPOTDRAW          'redraw the spot
End Sub
```

```
Sub Form Load () 'When the program starts this form is loaded first
APP.HelpFile = "lasercom.hlp" 'define the help file for the F1 key
form1.Hide        'hide the main form until it is resized
Safety.Show 1     'warn about laser 1 for modal
Call CNOFF(True)  'TURN HARDWARE BOX ON
IsZoomed = SMALLSPOT 'initialize the spot size
OldIsZoomed = IsZoomed 'Remember it for latter
CentroidOn = False 'centroid off to start
Calibrated = False 'Not calibrated yet
MaxCounter = 10   'number of warmup Intervals for timers
OnCounter = 0     'initially all off for timers
form1.Text2 = Format$(MidXFreq, "##0.000") 'set start Freq
form1.Text4 = Format$(MidY2, "##0.000") 'set start Freq
Call TVFRAMESETUP 'Set up Form 1
form1.Refresh     'force display to update
Call BOARDINIT    'Initialize the hardware
Timer1.Enabled = True 'in one second turn on spot
End Sub
```

```
Sub FORM_MouseMove (Button As Integer, Shift As Integer, X As Single, Y As Single)
Screen.MousePointer = 1 'When mouse is on Form, let it be an ARROW POINTER
End Sub
```

```
Sub Form Paint () 'when the form need refreshing
If Not Fancy Then
    SPOTDRAW 'draw a single spot if not in multispot mode
    Freqout 'SEND SPOT OUT
End If
End Sub
```

```
Sub FORM_Resize () 'If form size changes
If form1.Width > 600 Then TVFRAMESETUP 'dynamically scale all the screen elements if not an Icon
End Sub
```

```
Sub FORM_Unload (Cancel As Integer) 'When program is terminating
Cancel = True 'Yes this is the end of the program
form1.Timer5.Enabled = False 'turn off centroider
Call CNOFF(False)
End Sub
```

```
Sub FOURBEAM_Click () 'four simultaneous beams
Dim FreqX As Single 'local frequency holder
Dim FreqY As Single 'local frequency holder
Call TURNZOOMOFF 'turn off the zoom if on
Call ENABLE(0) 'TURN OFF READ
Call RST 'TOGGLE RESET LINES
FreqX = (MaxXFreq - MinXFreq) / 3 + MinXFreq 'left half, 1/3
FreqY = MidY1 'middle Y
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
    Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'Draw spot on screen without erasing others
FreqY = MidY2 'Right half middle
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
    Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'Draw spot on screen without erasing others
FreqX = (MaxXFreq - MinXFreq) * 2 / 3 + MinXFreq 'left half, 2/3
```

LASERCOM.FRM - 8

```

FreqY = MidY1 'middle Y
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
    Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'Draw spot on screen without erasing others
FreqY = MidY2 'right half middle
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
    Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'Draw spot on screen without erasing others
Call ENABLE(1) 'TURN READ LINE BACK ON
End Sub

Sub HORIZONTAL_Click () 'draw horizontal Line
Dim increment As Single 'X frequency step
Dim Freq As Single 'local X frequency holder
Call TURNZOOMOFF 'turn off the zoom if on
'leave enable line on to watch the drawing be created
Call RST 'TOGGLE RESET LINES
increment = (MaxXFreq - MinXFreq) / 249 '250 steps across each half
For Freq = MinXFreq To MaxXFreq Step increment 'do steps for left half
    For J = 0 To 7 'eight occurrences in the fifo for each freq
        Call DOSENDING(Freq, MidY1) 'mid value for y freq
    Next J
    Call DRAWMULTI(Freq, MidY1) 'draw the spots on the screen without erasing old ones
Next Freq
For Freq = MinXFreq To MaxXFreq Step increment 'do steps for right half
    For J = 0 To 7 'eight occurrences in the fifo for each freq
        Call DOSENDING(Freq, MidY2) 'mid value for y freq
    Next J
    Call DRAWMULTI(Freq, MidY2) 'draw the spots on the screen without erasing old ones
Next Freq
End Sub

Sub HSCROLL1_Change () 'when bar or buton is clicked
DEGX = HScroll1.Value / 100 'get X text and convert to degrees
DEGY = -(VScroll1.Value / 100 - VMax / 200) 'get Y text and convert to degrees
Call DEGtoFREQ(DEGX, DEGY) 'convert degrees to frequencies
Text1.Text = Format$(DEGX, "##0.0") 'redisplay degree X text
Text2.Text = Format$(XFreqOut, "##0.000") 'display new X frequency as text
Text4.Text = Format$(YFreqOut, "##0.000") 'display new Y frequency as text
SPOTDRAW 'draw the new spot
End Sub

Sub HSCROLL1_Scroll () 'The bar button is being dragged
DEGX = HScroll1.Value / 100 'get X text and convert to degrees
DEGY = -(VScroll1.Value / 100 - VMax / 200) 'get Y text and convert to degrees
Call DEGtoFREQ(DEGX, DEGY) 'convert degrees to frequencies
Text1.Text = Format$(DEGX, "##0.0") 'redisplay degree X text
Text2.Text = Format$(XFreqOut, "##0.000") 'display new X frequency as text
Text4.Text = Format$(YFreqOut, "##0.000") 'display new Y frequency as text
SPOTDRAW 'draw the new spot
End Sub

Sub NINEX_Click () 'Set zoom to 9 X
threeX.Checked = False
fiveX.Checked = False
sevenX.Checked = False
nineX.Checked = True 'check only the correct menu item
elevenX.Checked = False
ZOOMOFF.Checked = False
IsZoomed = SMALLSPOT * 9 'set spot size to 9 X
SPOTDRAW 'draw the spot
Freqout 'send the spot out
End Sub

Sub NOBEAMS_Click ()
Call TURNZOOMOFF 'turn off zoom if on
RST 'reset FIFO turns all beams off
form1.Picture1.Cls 'and clear the display window
'redraw vertical separator line on screen
form1.Picture1.Line (.5 * form1.Picture1.ScaleWidth, 0)-(1.5 * form1.Picture1.ScaleWidth, form1.Picture1.ScaleHeight), Black

```

LASERCOM.FRM - 9

End Sub

```
Sub PICTURE1_MouseDown (Button As Integer, Shift As Integer, X As Single, Y As Single)
PMOUSE = True 'Set the global variable to MOUSE IS DOWN
HScroll1.Value = (X / form1!Picture1.Width) * hmax 'set the scroll bar to match the mouse position
VScroll1.Value = (Y / form1!Picture1.Height) * VMax 'a change in the scrollbars will update the text output
End Sub
```

```
Sub PICTURE1_MouseMove (Button As Integer, Shift As Integer, X As Single, Y As Single)
Screen.MousePointer = 2 'while mouse is moving in the picture window, set it to crosshair shape
If PMOUSE = True Then 'if the mouse button is pressed...
    form1.Timer5.Enabled = False 'turn off timer while moving
    h = (X / form1!Picture1.Width) * hmax 'get the mouse X Coord.
    v = (Y / form1!Picture1.Height) * VMax 'get the mouse Y Coord.
    If h < 0 Then 'limit the value to within the Picture1 size
        h = 0
    Else If h > hmax Then h = hmax
    End If
    If v < 0 Then
        v = 0
    Else If v > VMax Then v = VMax
    End If
    HScroll1.Value = h 'set the scrollbars to reflect the mouse position
    VScroll1.Value = v 'a change in the scrollbars will update the text output
End If 'is mouse button pressed
If CentroidOn Then form1.Timer5.Enabled = True 'turn it on again
End Sub
```

```
Sub PICTURE1_MouseUp (Button As Integer, Shift As Integer, X As Single, Y As Single)
PMOUSE = False 'set the Global variable to reflect that the mouse button is no longer pressed
End Sub
```

```
Sub SEVENX_Click () 'Seven X menu option chosen
threeX.Checked = False
fiveX.Checked = False
sevenX.Checked = True 'make sure only seven X menu item is checked
nineX.Checked = False
elevenX.Checked = False
ZOOMOFF.Checked = False
IsZoomed = SMALLSPOT * 7 'set spot size to 7 X
SPOTDRAW 'draw the spot
Freqout 'send out the spot
End Sub
```

```
Sub TEXT2_Change () 'when the X screen text is changed, output the new spot
Call Freqout 'SEND FREQUENCY DATA TO FIFO #1
End Sub
```

```
Sub TEXT4_Change () 'when the Y screen text is changed, output the new spot
Call Freqout 'SEND FREQUENCY DATA TO FIFO #2
End Sub
```

```
Sub THREEX_Click () 'Three X menu option chosen
threeX.Checked = True 'make sure only Three X menu item is checked
fiveX.Checked = False
sevenX.Checked = False
nineX.Checked = False
elevenX.Checked = False
ZOOMOFF.Checked = False
IsZoomed = SMALLSPOT * 3 'set spot size to 3 X
SPOTDRAW 'draw the spot
Freqout 'send out the spot
End Sub
```

```
Sub TIMER1_TIMER () 'initialize output
Call Freqout 'send out spot after program starts
Timer1.Enabled = False 'after doing it turn self off
End Sub
```

```
Sub TIMER3_Timer ()
```

LASERCOM.FRM - 10

Call CENTROIDING 'used to periodically do centroiding
End Sub

```
Sub TWOBEAM_Click () 'Menu Item for two cut beams chosen
Dim FreqX As Single 'local Frequency holder
Dim FreqY As Single 'local Frequency holder
Call TURNZOOMOFF 'turn off zoom if on
Call ENABLE(0) 'TURN OFF READ
Call RST 'TOGGLE RESET LINES
FreqX = MidXFreq 'set mid left half
FreqY = MidY1 'set mid Y
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw each spot without erasing old ones
FreqY = MidY2 'set mid right
For J = 0 To 199 '200 occurrences in the fifo for each freq(2 fill times)
Call DOSENDING(FreqX, FreqY) 'mid value for X & Y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw each spot without erasing old ones
Call ENABLE(1) 'TURN READ LINE BACK ON
End Sub
```

```
Sub USING_Click ()
Dummy = Shell("c:\windows\winhelp.exe WinHelp.hlp") 'start windows help on help
End Sub
```

```
Sub VERTICAL_Click () 'Draw a vertical line in each half, was chosen from the menu
Dim increment As Single 'step size holder
Dim FreqY As Single 'local Frequency holder
Dim FreqX As Single 'local Frequency holder
Call TURNZOOMOFF 'turn off zoom if on
'leave enable line on to watch the drawing be created
Call RST 'TOGGLE RESET LINES
FreqX = MidXFreq 'middle Of X
increment = (MaxY1Freq - MinY1Freq) / 249 '250 steps
FreqY = MinY1Freq 'start at left bottom
While FreqY < MaxY1Freq 'doit
For J = 0 To 7 'eight occurrences in the fifo for each freq
Call DOSENDING(FreqX, FreqY) 'mid value for y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw each spot without erasing old ones
FreqY = FreqY + increment 'next step up
Wend
increment = (MaxY2Freq - MinY2Freq) / 249 'reset for right half
FreqY = MinY2Freq 'skip unused verticle bandwidth
While FreqY < MaxY2Freq 'doit
For J = 0 To 7 'eight occurrences in the fifo for each freq
Call DOSENDING(FreqX, FreqY) 'mid value for y freq
Next J
Call DRAWMULTI(FreqX, FreqY) 'draw each spot without erasing old ones
FreqY = FreqY + increment 'next step up
Wend
End Sub
```

```
Sub VSCROLL1_Change () 'The bar of arrows are being clicked on
DEGX = HScroll1.Value / 100 'convert the screen text to X degrees
DEGY = -(VScroll1.Value / 100 - VMax / 200) 'convert the screen text to Y degrees
Call DEGtoFREQ(DEGX, DEGY) 'convert the degrees to frequencies
Text2.Text = Format$(XFreqOut, "###.000") 'display the new X Frequency
Text3.Text = Format$(DEGY, "###.0") 'display the new Y Degrees
Text4.Text = Format$(YFreqOut, "###.000") 'display the new Y Frequency
SPOTDRAW 'draw the new spot
End Sub
```

```
Sub VSCROLL1_Scroll () 'the button on the bar is being dragged
DEGX = HScroll1.Value / 100 'convert the screen text to X degrees
DEGY = -(VScroll1.Value / 100 - VMax / 200) 'convert the screen text to Y degrees
Call DEGtoFREQ(DEGX, DEGY) 'convert the degrees to frequencies
Text2.Text = Format$(XFreqOut, "###.000") 'display the new X Frequency
Text3.Text = Format$(DEGY, "###.0") 'display the new Y Degrees
Text4.Text = Format$(YFreqOut, "###.000") 'display the new Y Frequency
SPOTDRAW 'draw the new spot
```

LASERCOM.FRM - 11

End Sub

```
Sub ZOOMOFF_Click () 'zoom off menu Item chosen
Call TURNZOOMOFF      'turn off the zoom if on
SPOTDRAW              'draw the spot
Freqout               'send out the spot
End Sub
```

SAFETY.FRM - 1

```
Sub OK_Click ()  
safety.Hide 'continue with program  
End Sub
```

```
Sub cancel_click ()  
End 'end the program before it starts  
End Sub
```

```
Sub form_paint ()  
OKbutton.SetFocus 'highlight button as default  
End Sub
```

```
Sub OKbutton_Click ()  
safety.Hide 'when OK continue with program  
End Sub
```

FILEBOX.FRM - 1

```

Sub DIR1_Change () 'if the selected directory changes, reflect the change
    File1.Path = Dir1.Path
End Sub

Sub DRIVE1_Change () 'if the selected directory changes, reflect the change
    On Error GoTo DriveError 'make sure no error on reading drive
    Dir1.Path = DRIVE1.Drive 'if no error, get data
Exit Sub
DriveError:
    'handle error
    Beep
    If Err = 68 Or Err = 71 Then 'print error message
        Msg$ = "Error #" + Str$(Err) + " No Floppy in the Drive!"
        MsgBox Msg$, 48
    Else
        Msg$ = "Error #" + Str$(Err) 'print generic error message
    End If
    Resume 'go back to program
End Sub

Sub ExitDemo_Click ()
    Filebox.Hide 'if filebox canceled, get rid of window
End Sub

Sub FILE1_Db1Click () 'allow double clicking the name to load the file
    Call LOADFILE_Click 'If double clicked then load file
End Sub

Sub LOADFILE_Click ()
    ' Routine to get a data file and use it to display a line pattern
    Dim Filename As String 'The file containing the data
    Dim Command As String 'The first item command on each data line
    Dim FirstParm As Single 'The second item on each data line (if needed)
    Dim SecondParm As Single 'The third item on each data line (if needed)
    Dim ThirdParm As Integer 'The fourth item on each data line (if needed)
    Dim I As Integer 'local counter
    Dim J As Integer 'local counter
    Dim NTIMES As Integer 'The number of fifo locations for each point
    Dim OldDX As Single 'temporary parameter holder
    Dim OldDY As Single 'temporary parameter holder
    Dim DegX As Single 'Spot position holder
    Dim DegY As Single 'Spot position holder
    Dim StepX As Single 'increment of next spot position
    Dim StepY As Single 'increment of next spot position
    Filebox.Hide 'get rid of the File Open Dialog Box
    form1.Refresh 'Repaint the display
    If File1 <> "" Then 'a name was chosen
        'make the file name with full path specified
        If Right$(Dir1, 1) = "\" Then 'root filenames end in slash
            Filename = Dir1 + File1
        Else
            Filename = Dir1 + "\" + File1 'subdirectories need slash added
        End If
        Open Filename For Input As #1 'open the file
        Input #1, Command 'check the first statement
        If UCase$(Command) <> "START" Then 'If not "start" then file not in correct format
            Beep 'beep and do nothing
        Else 'file is OK to start
            Call TURN2OCMOFF 'turn off the zoom if on
            Call RST 'TOGGLE RESET LINES 'Clear the Fifo
            form1.Picture1.Cls 'clear the Display area
            Input #1, NTIMES 'Get the number of location to fill the fifo for each point
            displayed
            While (Not EOF(1)) 'Keep getting data until the end of the file
                Input #1, Command 'get the next command
                Select Case UCase$(Command) 'Act on the command
                    Case "POINT" 'If it is a point
                        Input #1, FirstParm, SecondParm 'Get X and Y Coordinates, in Degrees
                        OldDX = FirstParm 'save it for latter
                        OldDY = SecondParm 'save it for latter
                        Call DEGtoFREQ(FirstParm, SecondParm) 'convert degrees to frequencies
                        For J = 0 To NTIMES - 1 'for NTimes

```

```

    Call DOSENDING(XFREQOUT, YFREQOUT) 'Fill the Fifo
    Next J
    Call DRAWMULTI(XFREQOUT, YFREQOUT) 'Display location on screen
    Case "LINE" 'If it is a line
        Input #1, FirstParm, SecondParm, ThirdParm 'Get the X, Y and number of steps
        StepX = (FirstParm - OldDX) / (ThirdParm - 1) 'Calculate the X step size
        StepY = (SecondParm - OldDY) / (ThirdParm - 1) 'Calculate the Y step Size
        DegX = OldDX + StepX 'take one step from starting point
        DegY = OldDY + StepY 'take one step from starting point
        For I = 1 To ThirdParm - 1 'for number of step do...
            Call DEGtoFREQ(DegX, DegY) 'convert to frequencies
            For J = 0 To NTIMES - 1 'for NTimes
                Call DOSENDING(XFREQOUT, YFREQOUT) 'Fill the Fifo
            Next J
            Call DRAWMULTI(XFREQOUT, YFREQOUT) 'Display the point
            DegX = DegX + StepX 'increment to the next point
            DegY = DegY + StepY 'increment to the next point
            Next I
            OldDX = FirstParm 'Remember where we left off
            OldDY = SecondParm 'Remember where we left off
        Case "CLEAR" 'Start new picture
            Call RST 'TOGGLE RESET LINES to clear the Fifo
            foral.Picture1.Cls 'clear the display
        Case "END"
            'does nothing, but looks good at end of the file
        Case Else
            Beep 'Anything else is not a valid command.
        End Select
    Wend
End If 'End of Valid data file
Close #1 'close the file
Fancy = True 'set the Mode variable to multipoint display
End If 'no file name chosen
End Sub

Sub TEXT1_KeyDown (KeyCode As Integer, Shift As Integer)
    If KeyCode = 13 Then 'If Enter key is hit
        File1.Pattern = Text1.Text 'select text
    End If
End Sub

```


LASERCOM.BAS - 1

'Lasercom Software, Version 1.01, June 1993
'Written By Lee Burberry, Staff Engineer
'Harris Corp., Information Systems Division
'PO Box 98000, Melbourne FL, 32902

```
Global PMouse As Integer      'IS MOUSE DOWN IN PICTURE1
Global OldX As Single         'PRVIOUS X IN PICTURE1
Global OldY As Single         'PRVIOUS Y IN PICTURE1
Global IsZoomed As Integer    'ZOOM TOGGLE
Global OldIsZoomed As Integer 'ZOOM STATE STORAGE
Global XFreqOut As Single     'X OUTPUT FREQUENCY IN MHz
Global YFreqOut As Single     'Y OUTPUT FREQUENCY IN MHz
Global UpperHalf As Integer   'WHICH HALF OF SPLIT
Global PortOut(0 To 2) As Integer 'PORTA=0, PORTB=1, PORTC=2
Global Status As Integer      'RETURN FROM DIGITAL BOARD
Global CentroidOn As Integer  'on off place holder
Global Fancy As Integer       'Is more than one spot being drawn
Global XCentroid, YCentroid As Single 'weighted average inside box
Global XCentroids(0 To 12, 0 To 12) As Single 'array of calibration offsets
Global YCentroids(0 To 12, 0 To 12) As Single 'array of calibration offsets
Global Calibrated As Integer  'state of calibration
Global Const SMALLSPOT = 15  'Number of Pixels to draw for spot Radius
Global Const Hmax = 3600     'Horizontal scale for 360 degrees
Global Const Vmax = 360      'Vertical scale for 36 degrees
Global Const Black = 0       'Color number
Global Const White = &HFFFFFF 'Col : number
Global Const Magenta = &HFF00FF 'Color number
Global Const MinXFreq = 18    'Horizontal bragg cell band minimum in MegaHertz
Global Const MaxXFreq = 30    'Horizontal bragg cell band maximum in MegaHertz
Global Const MidXFreq = (MaxXFreq - MinXFreq) / 2 + MinXFreq 'Horizontal bragg cell band middle
Global Const MinY1Freq = 18   'Vertical cell band minimum in MegaHertz
Global Const MaxY1Freq = 23.25 'Vertical cell band maximum in MegaHertz for lower mirror
Global Const MidY1 = (MaxY1Freq - MinY1Freq) / 2 + MinY1Freq 'middle of lower vertical bandwidth
Global Const MinY2Freq = 24.75 'Vertical cell Upper band minimum in MegaHertz
Global Const MaxY2Freq = 30    'Vertical cell band maximum in MegaHertz
Global Const MidY2 = (MaxY2Freq - MinY2Freq) / 2 + MinY2Freq 'middle of upper vertical bandwidth
Global Const OffsetY = MinY2Freq - MinY1Freq 'Seperation of the two vertical Bands
Global Const NumBits = 262144  '2^18 BITS for DDS board resolution
Global Const DDSClock = 160    '160 MHZ CLOCK TO DDS BOARDS
Global Const EnableHi = 32     'BINARY 00100000 ENABLE HIGH (OR IN)
Global Const EnableLo = 223    'BINARY 11011111 ENABLE LOW (AND IN)
Global Const ABMask = 255      'BINARY 11111111
Global Const CMask = 3         'BINARY 00000011
Global Const ClearC = 252      'BINARY 11111100
Global Const ResetHi = 4       'BINARY 00000100
Global Const ResetLo = 251     'BINARY 11111011
Global Const ResetDDSHi = 128  'BINARY 10000000
Global Const ResetDDSLo = 127  'BINARY 01111111
Global Const WrtIn1Hi = 8      'BINARY 00001000
Global Const WrtIn1Lo = 247    'BINARY 11110111
Global Const WrtIn2Hi = 16     'BINARY 00010000
Global Const WrtIn2Lo = 239    'BINARY 11101111
Global Const RelayOn = 2       'BINARY 00000010
Global Const RelayOff = 253    'BINARY 11111101
Global Const MB_OK = 0          'Define buttons
Global Const MB_OKCANCEL = 1
Global Const MB_YESNOCANCEL = 3
Global Const MB_YESNC = 4
Global Const MB_ICONSTOP = 16
Global Const MB_ICONQUESTION = 32
Global Const MB_ICONEXCLAMATION = 48
Global Const MB_ICONINFORMATION = 64
Global Const MB_DEFBUTTON2 = 256 'Define other.
Global Const IDOK = 1           'OK button selected.
Global Const IDCANCEL = 2       'Cancel button selected.
Global Const IDABORT = 3        'Abort button selected.
Global Const IDRETRY = 4        'Retry button selected.
Global Const IDIGNORE = 5       'Ignore button selected.
Global Const IDYES = 6          'Yes button selected.
Global Const IDNO = 7           'No button selected.
```

```
'The following three lines declare the functions that control the I/O card
Declare Function DIG_Out_Port Lib "atwdaq.dll" (ByVal slot%, ByVal port%, ByVal pattern%)
Declare Function DIG_Prt_Config Lib "atwdaq.dll" (ByVal slot%, ByVal port%, ByVal latch_mode%,
    ByVal direction%)
Declare Function DIG_Prt_Status Lib "atwdaq.dll" (ByVal slot%, ByVal port%, Status%)
'The following is for the Video Frame Grabber Card
'.....
```

```
'Global Declarations For SVM CIL (Common Interface Library)
'New Media Graphics (c) 1992
'Modifications:
'    Release 1.3b Supplemental (1:33 pm)
'    gek 22-Jun-1992 Add support for Still Frame Compression board
'    gek 17-Jun-1992 Change FrameGrab Structure to accept pointers
'    Change AVputToBitmap and AVgetFromBitmap graphicsRect to
'    use As Any instead of As AVrect
'    Add Window's SendMessage declaration
```

'Function Declarations

```
'-----
' From Av_ctrl.h
'-----
```

```
' Private Window Messages Start Here (Cx400) :
Global Const WM_USER = 1024
```

```
' Define New Messages that can be sent to the AV Control
```

Message ID	wParam	lParam
Global Const AVM_GETVIDEO = (WM_USER + 1)		
Global Const AVM_FADEIN = (WM_USER + 2)	FadeMask	Duration
Global Const AVM_FADEOUT = (WM_USER + 3)	FadeMask	Duration
Global Const AVM_FREEZE = (WM_USER + 4)	True/False	
Global Const AVM_LISTSOURCES = (WM_USER + 5)	Buffer Length	Buffer Pointer
Global Const AVM_GETSOURCE = (WM_USER + 6)	Buffer Length	Buffer Pointer
Global Const AVM_SETSOURCE = (WM_USER + 7)		Buffer Pointer
Global Const AVM_SETCOLORKEY = (WM_USER + 8)	Hardware color index	
Global Const AVM_GETCOLORKEY = (WM_USER + 9)		
Global Const AVM_SETCOLOR = (WM_USER + 10)		COLORREF
Global Const AVM_SETDISPLAY = (WM_USER + 11)	Video Parameter	Value
Global Const AVM_GETDISPLAY = (WM_USER + 12)	Video Parameter	
Global Const AVM_SETAUDIO = (WM_USER + 13)	Audio Parameter	Value
Global Const AVM_GRAB = (WM_USER + 14)	AV_GRAB command	LPFRAMEGRAB
Global Const AVM_PUT = (WM_USER + 15)	AV_PUT command	LPFRAMEGRAB
Global Const AVM_FITMODE = (WM_USER + 16)	Fit Mode	
Global Const AVM_AUTORESIZE = (WM_USER + 17)	True/False	
Global Const AVM_NOTIFY = (WM_USER + 19)		
Global Const AVM_GETFITMODE = (WM_USER + 20)		
Global Const AVM_TUNE = (WM_USER + 21)	channel loword=finetune, hi-standard	
Global Const AVM_GETAUDIO = (WM_USER + 22)	Audio Parameter	
Global Const AVM_SETPOSITION = (WM_USER + 23)		AVrectPtr
Global Const AVM_GETPOSITION = (WM_USER + 24)		AVrectPtr
Global Const AVM_MAP = (WM_USER + 25)		
Global Const AVM_UNMAP = (WM_USER + 26)		
Global Const AVM_GETCOLOR = (WM_USER + 27)		

```
' List of normal window messages WM_ that are used by the AV control
```

Message	Additional use in AV Control
WM_ENABLE	This will enable/disable the Video
WM_SIZE	Resizes the video to fit the window

LASERCCM.BAS - 3

' WM_MOVE Moves the video to fit the window

' Commands & Data structures involved in FrameGrabbing

Global Const AV_GRAB_FILE = 0 ' uses filename field to name dest file
Global Const AV_GRAB_BITMAP = 1 ' uses bitmap field to hold result
Global Const AV_GRAB_CUT = 2 ' uses Windows Clipboard to hold result
Global Const AV_GRAB_COPY = 3 ' uses Windows Clipboard to hold result

Global Const AV_PUT_FILE = 0 ' uses filename field to hold source file
Global Const AV_PUT_BITMAP = 1 ' uses bitmap field as the source
Global Const AV_PUT_PASTE = 2 ' uses Windows Clipboard as the source
Global Const AV_PUT_CLEAR = 3 ' Puts all black to the framebuffer

'
' Copyright (C) 1992 New Media Graphics Corp.

' Module: avsys.h
' Description: Visual Basic definitions for AV CIL

' M S - W I N D O W S 3 . 0 E D I T I O N
' Compiled under Visual Basic 1.0
'
'

' Name of configuration file (does not specify location)

Global Const CONFIGFILE = "VIDEO.INI" ' Filename of Configuration file

' Define the strings for graphics mode configuration

Global Const INI_GRAPHICS_MODE = "Mode"
Global Const INI_WALIGN_LEFT = "Wleft"
Global Const INI_WALIGN_TOP = "Wtop"
Global Const INI_VALIGN_LEFT = "Vleft"
Global Const INI_VALIGN_RIGHT = "Vright"
Global Const INI_VALIGN_TOP = "Vtop"
Global Const INI_VSTART = "Vstart"
Global Const INI_SHIFT = "Shift"
Global Const INI_GDELAY = "Gdelay"
Global Const INI_RED = "Red"
Global Const INI_GREEN = "Green"
Global Const INI_BLUE = "Blue"

' Maximum length of a source name

Global Const SRCNAME_LEN = 16

' This structure defines what a vidport looks like. It
' is used by AVdefineVidport.

Type Vidport
 X1 As Integer
 Y1 As Integer
 X3 As Integer
 Y3 As Integer
End Type

Type Winport
 X As Integer
 Y As Integer
 Width As Integer
 Height As Integer
End Type

Type DisplayAttr

LASERCOM.BAS - 4

```

    bright As Integer
    sat As Integer
    contrast As Integer
    hue As Integer
    sharp As Integer
    flags As Integer
End Type
' Black and white flag

```

' Describe a unit configuration

```

Type UnitConfig
    unit_type As Integer
    total_vins As Integer
    total_ains As Integer
    window_mode As Integer
    locks As Integer
    key_mode As Integer
    key_value As Integer
    active As Integer
End Type
' Type of video unit, from UNIT_ below
' Video inputs
' Audio inputs
' Reserved
' Number of open handles
' Current color keying mode KEY_ below
' Parameter for color key mode

```

' Describe a source configuration

```

Type SrcConfig
    srctype As Integer
    sigtype As Integer
    active As Integer
End Type
' See SRC_ below
' See SIG_ below
' TRUE or FALSE

```

' Describe a connection. Both of these are numbered 1..n.
 ' These are logical numbers, not physical, so the private bus
 ' would simply be considered some ordinally numbered input.

```

Type ConConfig
    video_input As Integer
    audio_input As Integer
End Type

```

' Misc defines

```

Global Const AV_UNDEF = -1
Global Const AV_FILLIN = -2

```

' Error returns from video module

```

Global Const AV_OK = 0
Global Const AV_FAIL = 1
Global Const AV_NOMEM = 2
Global Const AV_SYSERR = 3
Global Const AV_INTERNAL = 4
Global Const AV_NULLVID = 5
Global Const AV_ILLARG = 6
Global Const AV_RANGE = 7
Global Const AV_TIMECUT = 8
Global Const AV_OVERRUN = 9
' Everything hunky dory
' No memory left
' The system returned an error
' Internal error
' Null video handle passed
' Illegal argument
' Argument out of range
' Timeout - no response from hardware
' Data overrun

```

```

Global Const AV_NOTFOUND = 10
Global Const AV_NOCONFIG = 11
Global Const AV_NOUNITS = 12
Global Const AV_BADCONFIG = 13
Global Const AV_DUPNAME = 14
Global Const AV_BADINPUT = 15
Global Const AV_SPLIT = 16
Global Const AV_SIGNAL = 17
Global Const AV_NOCONTROL = 18
Global Const AV_INUSE = 19
Global Const AV_NOTSUPPORT = 20
Global Const AV_NOTACTIVE = 21
Global Const AV_NOCONNECT = 22
' Entry not in configuration file
' No configuration file
' No video generators on this system
' Bad entry in configuration file
' Attempt to add a duplicate name
' Illegal connection description
' Can't split audio/video across units
' Unknown signal description
' No control line available for device
' Device is active
' Feature not supported
' Device requested is not active
' Device not connected

```

```

Global Const AV_BADLOC = 23
Global Const AV_BADSIZE = 24
' Attempt to move to bad location
' Attempt to create window with bad size

```

LASERCOM.BAS - 5

```

Global Const AV_BADFIT = 25      ' Window won't fit on screen
Global Const AV_WMODE = 26      ' Can't in this windowing mode
Global Const AV_ALMOST = 27      ' The winport values were adjusted

Global Const AV_NOTREADY = 28    ' Device not ready
Global Const AV_DEVICE = 29      ' Wrong device type for operation

Global Const AV_BADFORMAT = 30   ' Format not allowed for this operation
Global Const AV_BADFILENAME = 31 ' Filename was not allowed
Global Const AV_BADREGION = 32   ' Error in framegrabbing region

Global Const AV_NOTCOMPLETE = 33 ' Used in framegrabbing.
                                ' Operation went fine but is NOT
                                ' finished yet. It should be called
                                ' again

Global Const AV_BADIADDR = 35    ' Bad SVW I/O address
Global Const AV_BADMEMADDR = 36  ' Bad framebuffer address

' Masks for AVconfigure
Global Const AV_QUERY = 1

' Return values from AVgrabToBand and AVputFromBitmap
Global Const XFR_CMPLT = &HA0
Global Const XFR_NCMPLT = &HA1
Global Const XFR_START = &HA2

'
' * Useful Audio constants
' * These constants are documented to be these ranges and will not change.
'
Global Const AV_MINVOL = 0
Global Const AV_MAXVOL = 100
Global Const AV_MINBAL = -100
Global Const AV_MAXBAL = 100
Global Const AV_MINBASS = 0
Global Const AV_MAXBASS = 100
Global Const AV_MINTREBLE = 0
Global Const AV_MAXTREBLE = 100

Global Const AV_VOLUME = 1
Global Const AV_VOLUME_UP = 2
Global Const AV_VOLUME_DOWN = 3
Global Const AV_VOLUME_MUTE = 4
Global Const AV_BALANCE = 5
Global Const AV_BALANCE_LEFT = 6
Global Const AV_BALANCE_RIGHT = 7
Global Const AV_BASS = 8
Global Const AV_BASS_MORE = 9
Global Const AV_BASS_LESS = 10
Global Const AV_TREBLE = 11
Global Const AV_TREBLE_MORE = 12
Global Const AV_TREBLE_LESS = 13
Global Const AUDIO_USRDEF = &H1000      ' Load user defined default

' Flags for DisplayAttr.flags
Global Const DISP_FLAG_BNW = &H1

' AVsetDisplay parameters
Global Const DISP_HUE = 1
Global Const DISP_SATURATION = 2
Global Const DISP_BRIGHTNESS = 3
Global Const DISP_CONTRAST = 4
Global Const DISP_SHARPNESS = 5
Global Const DISP_MFILTER = 6
Global Const DISP_BNW = 7
Global Const DISP_RED = 8
Global Const DISP_GREEN = 9
Global Const DISP_BLUE = 10
Global Const DISP_USRDEF = &H1000      ' Load user defined default
Global Const DISP_SYSDEF = &H2000      ' Load system defined default

```

LASERCOM.BAS - 6

```

Global Const DISP_MIN_HUE = 0
Global Const DISP_MAX_HUE = 100
Global Const DISP_MIN_SAT = 0
Global Const DISP_MAX_SAT = 100
Global Const DISP_MIN_BRIGHT = 0
Global Const DISP_MAX_BRIGHT = 100
Global Const DISP_MIN_CONTRAST = 0
Global Const DISP_MAX_CONTRAST = 100
Global Const DISP_MIN_SHARP = 0
Global Const DISP_MAX_SHARP = 100

' Types of sources
Global Const SRC_UNKNOWN = "U"
Global Const SRC_LASERDISC = "L"
Global Const SRC_TUNER = "T"
Global Const SRC_VCR = "V"
Global Const SRC_CAMERA = "C"
Global Const SRC_TUNER_PLUS = "I"

' TV Tuner
' Jr = Tuner (inboard)

' Types of video units
Global Const UNIT_HIRES = "H"
Global Const UNIT_SVW = "S"
Global Const UNIT_SVW_SL = "J"
Global Const UNIT_SVW_TV = "P"
Global Const UNIT_SVW_CM = "C"
Global Const UNIT_SVW_MCA = "M"

' Workstation product
' Super VideoWindows
' Super VideoWindows SL
' TV VideoWindows (on one card)
' Super VideoWindows w/Compression
' Super VideoWindows Microchannel

' Video source types
Global Const SIG_NONE = 0
Global Const SIG_AUTO = "a"
Global Const SIG_NTSC = "n"
Global Const SIG_PAL = "p"
Global Const SIG_RGB = "r"
Global Const SIG_SVHS_NTSC = "v"

' Automatically detect
' Not supported by SVW

' Fade flag
Global Const FADE_IN = 1
Global Const FADE_OUT = 0

' Fade masks -- Not supported in this release
Global Const FADE_VIDEO = 1
Global Const FADE_AUDIO = 2
Global Const FADE_SCREEN = 4

' Various modes for AVfitMode
Global Const FIT_STRETCH = 6H10
Global Const FIT_COMPRESS = 6H20
Global Const FIT_CROP = 6H40
Global Const FIT_CENTER = 6H21
Global Const FIT_GRA3 = 6H11
Global Const FIT_ONETOONE = 6H12

' 16 decimal
' 32 decimal
' 64 decimal - not supported
' 33 decimal
' 17 decimal
' 18 decimal

' Color key modes
Global Const KEY_NONE = 0
Global Const KEY_COLOR = 1
Global Const KEY_MASK = 2
Global Const KEY_LOGICAL_PALETTE = 3
Global Const KEY_PHYSICAL_PALETTE = KEY_COLOR

' Single color
' Set of colors-not implemented yet

' Op codes for AVcvRGBtoKeyColor
'
' * BGR666 or COLORREF are intended to accept a Windows COLORREF structure

Global Const CVT_BGR666 = 1
Global Const CVT_COLORREF = 1

'
' * BGR666 is intended to accept the Microsoft C6 constants such
' * as _RED and _GREEN that appear in graph.h.

Global Const CVT_BGR666 = 2

```

LASERCOM.BAS - 7

' * Flags for AVgetDevices. The active and inactive modifiers
' * are mutually exclusive. Asking for both of them gives you nothing.

Global Const GET_SOURCES = &H1
Global Const GET_UNITS = &H2
'Global Const GET_ALL = (GET_SOURCES | GET_UNITS)
Global Const GET_ONLYINACTIVE = &H10
Global Const GET_ONLYACTIVE = &H20
'Global Const AVgetSources(index,buf,n) = AVgetDevices(GET_SOURCES|GET_ONLYACTIVE,index,buf,n)

' * Various definitions for how to parse video.ini
' * These are case insensitive

Global Const INI_VIDEO_CONNECTION = "VideoOut"
Global Const INI_AUDIO_CONNECTION = "AudioOut"
Global Const INI_ACTIVE_SOURCE = "Active"
Global Const INI_CONTROL_LINE = "Control"
Global Const INI_CONTROL_SETTINGS = "CtrlCfg"
Global Const INI_SIGNAL_TYPE = "Signal"
Global Const INI_SOURCES = "Sources"
Global Const INI_DRIVER_NAME = "DLL" ' For Microsoft Windows 3.0
Global Const INI_UNITS = "VideoUnits"
Global Const INI_IOADDR = "IOaddr" ' For SVM, Tuner
Global Const INI_MEMADDR = "MemAddr" ' For SVM
Global Const INI_SYNC = "AlignSync"
Global Const INI_CONTRAST = "Contrast"
Global Const INI_HUE = "Hue"
Global Const INI_SAT = "Saturation"
Global Const INI_BRIGHT = "Brightness"
Global Const INI_SHARP = "Sharpness"
Global Const INI_VOLUME = "Volume"
Global Const INI_BASS = "Bass"
Global Const INI_TREBLE = "Treble"
Global Const INI_BALANCE = "Balance"
Global Const INI_SOURCE_DEFAULT = "DefaultSource"
Global Const INI_SOURCE_NONE = ""

Global Const DEV_LASERDISC = "Laserdisc"
Global Const DEV_VCR = "VCR"
Global Const DEV_TUNER = "Tuner"
Global Const DEV_TUNER_PLUS = "TunerPlus"
Global Const DEV_CAMERA = "Camera"
Global Const DEV_UNKNOWN = "Unknown"
Global Const DEV_SVM = "SVM"
Global Const DEV_HIRES = "Hires"

' * Laserdisc stuff

Global Const PLAY_FORWARD = 0
Global Const PLAY_REVERSE = 1

Global Const AUDIO_NONE = 0
Global Const AUDIO_LEFT = 1
Global Const AUDIO_RIGHT = 2
Global Const AUDIO_BOTH = 3

Global Const PLAYER_AUDIO = 1
Global Const PLAYER_DIRECTION = 2
Global Const PLAYER_SPEED = 3
Global Const PLAYER_FRAME = 4
Global Const PLAYER_DISPLAY = 5

' * Frame Grabbing Stuff

'/* Rectangle */

Type AVrect

Left As Integer
Top As Integer
right As Integer
bottom As Integer

End Type

LASERCOM.BAS - 9

```
/* Framegrab Structure */
Type FrameGrab
    format As Integer
    filename As String * 30
    filename As Long
    bitmap As Integer
    region As
    region As Long
End Type

.....
'
' * Data structures describing an image currently being framegrabbed
'
' .....
' FGB format flags
Global Const AV_BITMAP = 1
Global Const AV_FILE = 0
Global Const AV_PUT = 2
Global Const AV_GRAB = 0
Global Const AV_BOTTOMUP = 4
Global Const AV_TOPDOWN = 0

.....
'
' * Data structures describing a FGB format installed in the CIL
'
' .....
'
' Native Format IDs
Global Const AV_SVM = 1

' Supported features of a framegrab format
Global Const AV_GRABBITMAP_SUPT = 1
Global Const AV_PUTBITMAP_SUPT = 2
Global Const AV_GRABFILE_SUPT = 4
Global Const AV_PUTFILE_SUPT = 8
Global Const AV_PRESCAN_SUPT = 16
Global Const AV_APPLGLOBAL = 32

Global Const FILE_REVISION = 1

.....
'
' * Format IDs
'
' .....

' Band Formats
Global Const BAND_SVM_NATIVE = 1
Global Const BAND_WINDOWS24 = 2
Global Const BAND_TARGA16 = 4
Global Const BAND_TARGA24 = 5
Global Const BAND_TARGA32 = 6
Global Const BAND_PCXGRAY = 7
Global Const BAND_PCX256 = 8
Global Const BAND_WINDOWS8 = 9
Global Const BAND_WINDOWS8GRAY = 10
Global Const BAND_JPEG = 11

' Bitmap Formats
Global Const BITMAP_SVM_NATIVE = BAND_SVM_NATIVE
Global Const BITMAP_WINDOWS24 = BAND_WINDOWS24
Global Const BITMAP_WINDOWS8 = BAND_WINDOWS8 ' Grab Only
Global Const BITMAP_WINDOWS8GRAY = BAND_WINDOWS8GRAY ' Grab Only

' File formats
Global Const FILE_SVM_NATIVE = BAND_SVM_NATIVE ' read/write
Global Const FILE_WINDOWS24 = BAND_WINDOWS24 ' read/write
Global Const FILE_TARGA16 = BAND_TARGA16 ' read/write
Global Const FILE_TARGA24 = BAND_TARGA24 ' read/write
```


LASERCOM BAS - 3

```
Global Const FILE_TARGA32 = BAND_TARGA32      ' read/write
Global Const FILE_PCXGRAY = BAND_PCXGRAY      ' Write Only
Global Const FILE_PCX256 = BAND_PCX256       ' Write Only
Global Const FILE_WINDOWS8 = BAND_WINDOWS8    ' Write Only
Global Const FILE_WINDOWS8GRAY = BAND_WINDOWS8GRAY ' Write Only
Global Const FILE_JPEG = BAND_JPEG            ' read/write
```

' Standards for the AVtuner call

```
Global Const USA_BCST = 0
Global Const USA_CATV = 1
Global Const JAPAN = 3
```

' Still Frame Compression Framegrabbing Literals

```
Global Const FGC_ALL = 0
Global Const FGC_HIGH = 1
Global Const FGC_MED = 2
Global Const FGC_LOW = 3
Global Const FGC_CUSTOM = 4
Global Const FGC_DIALOG = 5
Global Const FGC_PUT = 6
Global Const FGC_LAST = 7
```

'#endif

```
Declare Function AVdefineAudio Lib "Video" (ByVal vid As Long, ByVal volume As Integer, ByVal b
alance As Integer, ByVal bass As Integer, ByVal treble As Integer) As Integer
Declare Function AVsetAudio Lib "Video" (ByVal vid As Long, ByVal parm As Integer, ByVal Value
As Integer) As Integer
Declare Function AVgetDisplay Lib "Video" (ByVal vid As Long, ByVal parm As Integer) As Integer
Declare Function AVgetAudio Lib "Video" (ByVal vid As Long, ByVal parm As Integer) As Integer
Declare Function AVCvtBGRtoKeyColor Lib "Video" (ByVal op As Integer, ByVal Value As Long) As I
nteger
Declare Function AVCvtRGBtoKeyColor Lib "Video" (ByVal R As Integer, ByVal g As Integer, ByVal
b As Integer) As Integer
Declare Function AVgetPlayerStatus Lib "Video" (ByVal vid As Long, ByVal parm As Integer) As Lo
ng
Declare Function AVpausePlayer Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVplayPlayer Lib "Video" (ByVal vid As Long, ByVal end_frame As Long) As Inte
ger
Declare Function AVseekPlayer Lib "Video" (ByVal vid As Long, ByVal frame As Long) As Integer
Declare Function AVsetPlayer Lib "Video" (ByVal vid As Long, ByVal parm As Integer, ByVal Value
As Integer) As Integer
Declare Function AVstepPlayer Lib "Video" (ByVal vid As Long, ByVal incr As Long) As Integer
Declare Function AVstopPlayer Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVcolorKey Lib "Video" (ByVal vid As Long, ByVal mode As Integer, ByVal Value
As Integer) As Integer
Declare Function AVfitMode Lib "Video" (ByVal vid As Long, ByVal mode As Integer) As Integer
Declare Function AVcreate Lib "Video" (ByVal source As String) As Long
Declare Sub AVdestroy Lib "Video" (ByVal vid As Long)
Declare Function AVsetDisplay Lib "Video" (ByVal vid As Long, ByVal parm As Integer, ByVal Valu
e As Integer) As Integer
Declare Function AVmap Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVunmap Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVenable Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVdisable Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVfreeze Lib "Video" (ByVal vid As Long, ByVal flag As Integer) As Integer
Declare Function AVconfigure Lib "Video" (ByVal vid As Long, frame As Winport, ret_wp As Winpor
t, ByVal mask As Integer) As Integer
Declare Function AVmove Lib "Video" (ByVal vid As Long, ByVal X As Integer, ByVal Y As Integer)
As Integer
Declare Function AVsize Lib "Video" (ByVal vid As Long, ByVal width1 As Integer, ByVal Height A
s Integer) As Integer
Declare Function AVfade Lib "Video" (ByVal vid As Long, ByVal flag As Integer, ByVal mask As In
teger, ByVal delay As Integer) As Integer
Declare Function AVisFaded Lib "Video" (ByVal vid As Long, ByVal mask As Integer) As Integer
Declare Function AVvideoWindow Lib "Video" (ByVal src_name As String, ByVal X As Integer, ByVal
Y As Integer, ByVal width1 As Integer, ByVal Height As Integer) As Long
Declare Function AVgetKeyMode Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVgetKeyValue Lib "Video" (ByVal vid As Long) As Integer
Declare Function AVdevice Lib "Video" (ByVal vid As Long, ByVal device As String) As Integer
```

LASERCOM.BAS - 10

```

Declare Function AVTuner Lib "Video" (ByVal vid As Long, ByVal channel As Integer, ByVal fine As Integer, ByVal standard As Integer) As Integer
Declare Function AVgrabtofile Lib "Video" (ByVal vid As Long, ByVal filename As String, ByVal format As Integer, graphicsRect As Any) As Integer
Declare Function AVputFromfile Lib "Video" (ByVal vid As Long, ByVal filename As String, ByVal format As Integer, graphicsRect As Any) As Integer
Declare Function AVgrabToBitmap Lib "Video" (ByVal vid As Long, ByVal format As Integer, graphicsRect As Any, bitmapPtr As Long) As Integer
Declare Function VputFromBitmap Lib "Video" (ByVal vid As Long, ByVal format As Integer, ByVal bitmap As Integer, graphicsRect As Any) As Integer
Declare Function AVClear Lib "Video" (ByVal vid As Long, graphicsRect As AVrect) As Integer
Declare Function AVinit Lib "Video" (ByVal fnam As String) As Integer
Declare Sub AVend Lib "Video" ()

```

'Windows 3.x functions

```

Declare Function sendmessage Lib "User" (ByVal hWnd As Integer, ByVal wParam As Integer, ByVal wMsg As Integer, lParam As Any) As Long

```

'Still Frame Compression Framegrabbing functions

```

Declare Function FGCInstall Lib "Fgc.dll" (ByVal format As Integer) As Integer
Declare Function FGCRemove Lib "Fgc.dll" (ByVal format As Integer) As Integer
Declare Sub FGCsetImageQuality Lib "Fgc.dll" (ByVal quality As Integer, ByVal sharpness As Integer)
Declare Function FGCqualityDialog Lib "Fgc.dll" () As Integer
Declare Function FGCgetSharpness Lib "Fgc.dll" () As Integer
Declare Function FGCgetQuality Lib "Fgc.dll" () As Integer
Declare Function FGCsetAddress Lib "Fgc.dll" (ByVal address As Integer) As Integer
Declare Function FGCgetAddress Lib "Fgc.dll" () As Integer
Declare Function FGCaddressDialog Lib "Fgc.dll" () As Integer

```

Sub DEGtoFREQ (ByVal X As Single, ByVal Y As Single)

'Routine to convert from degrees to output frequencies

'X AND Y PASSED IN DEGREES

'X -> 0 TO 360 DEGREES

'Y +/- 18 DEGREES

Dim Sc1X As Single 'X scale (horizontal)

Dim Sc1Y As Single 'Y scale (vertical)

Sc1X = (MaxXFreq - MinXFreq) / 180 'x always goes 0 to 180

If X < 180 Then

Sc1Y = (MaxY1Freq - MinY1Freq) / 36 'Y has two regions

Upperhalf = False

Else

X = X - 180 'WRAP SPACE MOD 180 DEGREES

Sc1Y = (MaxY2Freq - MinY2Freq) / 36 'if x>180 then use upper half

Upperhalf = True

End If

XFreqOut = X * Sc1X + MinXFreq 'REQUIRED FREQ OUTPUT

YFreqOut = Y * Sc1Y + MidY1 - Upperhalf * OffsetY

'RETURN FREQ FOR TWO DIFFERENT REGIONS

End Sub

Sub DOSENDING (XOut As Single, YOut As Single)

'This routine converts frequencies to the numbers required by the dds board

Dim Number As Long 'holds the number to send to the Fifos in the dds card

Dim Midd As Long 'number is 18 bits, mid is middle byte

Dim H As Integer 'hi is most significant byte

' do the X frequency

Number = (NumBits / DDSClock) * XOut + 1 'calculate number for dds board

PortOut(0) = Number And ABMask 'ABMASK is lower 8 bits only

Midd = Number \ 256 'SHIFT RIGHT 8 BITS

PortOut(1) = Midd And ABMask 'set up middle 8 bits

H = Midd \ 256 'SHIFT RIGHT 8 BITS

'set up two msbs, (never used)

' 2 msb's are never set in used frequency range

' msb changed to control hardware on-off relay

' portout(2) = (portout(2) And CLEARC) Or (H And CMASK)

'SEND THEM OUT

For I = 0 To 2

Status = DIG_Out_Port\ (ByVal 1, ByVal I, ByVal PortOut(I))

LASERCOM.BAS - 11

```

Next I
'AND STrobe WRITE LINE to advance fifo counter
Call WRTLN(1) 'FIFO 1 OR 2

' do the Y frequency
Number = (NumBits / DDSClock) * YOut + 1 'calculate number for dds board
PortOut(0) = Number And ABMask 'ABMASK is Lower 8 bits only
Midd = Number \ 256 'SHIFT RIGHT 8 BITS
PortOut(1) = Midd And ABMask 'set up middle 8 bits
HI = Midd \ 256 'SHIFT RIGHT 8 BITS
' set up two msbs, (never used)
' 2 msb's are never set in used frequency range
' msb changed to control hardware on-off relay
' portout(2) = (portout(2) And CLEARC) Or (HI And CMASK)

'SEND THEM OUT
For I = 0 To 2
    Status = DIG_Out_Port\ (ByVal 1, ByVal I, ByVal PortOut(I))
Next I
'AND STrobe WRITE LINE to advance fifo counted
Call WRTLN(2) 'FIFO 1 OR 2
End Sub

Sub DRAMMULTI (ByVal X As Single, ByVal Y As Single)
'routine to draw more than one spot on Pictuure1 frame for fancy outputs
Dim Q As Single 'x position on display window
Dim R As Single 'y position on display window
'draw but don't erase
'calculate and scale the X position
Q = ((X - MinXFreq) / (MaxXFreq - MinXFreq)) * Form1!Picture1.Width * .494
'is it in left half or right half
If Y > MaxYIFreq Then 'right half
    Q = Q + Form1!Picture1.Width * .5 'jump to right half
    Y = Y - OffsetY 'reduce to in picture range
End If
'calculate and scale the y position
R = Form1!Picture1.Height - ((Y - MinYIFreq) / (MaxYIFreq - MinYIFreq)) * Form1!Picture1.Height
' .95 - 40
'Output spot to screen
Form1!Picture1.Line (Q - IsZoomed, R - IsZoomed)-(Q + IsZoomed, R + IsZoomed), Black, BF
'draw vertical screen separator line
Form1!Picture1.Line (.5 * Form1!Picture1.ScaleWidth, 0)-(.5 * Form1!Picture1.ScaleWidth, Form1!Picture1.ScaleHeight), Black
End Sub

Sub ENABLE (I As Integer) '0 FOR LOW, 1 FOR HI
'READ ENABLE IS DISABLED WHEN LO, ENABLED WHEN HI
'set up port 2 with bit pattern for enable and leave other bits intact
If I = 0 Then
    PortOut(2) = PortOut(2) And EnableLo 'PORT C
Else
    PortOut(2) = PortOut(2) Or EnableHi 'PORT C
End If
'send it out
Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
End Sub

Sub FreqOut () 'parameters passed as global variable XFreqOut, and YFreqOut
'routine to output a single spot to the DDS Fifo and update the screen
Dim I, J, K, N As Integer 'local counters
Dim XOut As Single 'Local version of XFreqOut
Dim YOut As Single 'Local version of YFreqOut
Dim ZoomFactor As Integer 'amount of Zoom
Dim Delta As Single 'SPACING OFFSET FACTOR
Const XOffset = .025 'MHz .025
Const YOffset = .1 'MHz .05

ZoomFactor = IsZoomed / SMALLSPOT 'How much to zoom

Call ENABLE(0) 'TURN OFF READ
Call RST 'TOGGLE RESET LINES

Select Case ZoomFactor:

```

```

Case 1:
  XOut = XFreqOut
  YOut = YFreqOut
  Call DOSENDING(XOut, YOut)
Case 3:
  Delta = 1
  N = 103
  Do While N >= 0
    I = Int(N / 26) - 1.5
    J = Int((N Mod 52) / 13) - 1.5
    'each spot is offset one pixel spacing
    XOut = XFreqOut + I * Delta * XOffset
    YOut = YFreqOut + J * Delta * YOffset
    Call DOSENDING(XOut, YOut)
    N = N - 1
  Loop 'next n
Case 5:
  Delta = 1.5
  N = 103
  Do While N >= 0
    I = Int(N / 26) - 1.5
    J = Int((N Mod 52) / 13) - 1.5
    'each spot is offset one pixel spacing
    XOut = XFreqOut + I * Delta * XOffset
    YOut = YFreqOut + J * Delta * YOffset
    Call DOSENDING(XOut, YOut)
    N = N - 1
  Loop 'next n
Case 7:
  Delta = 2
  N = 103
  Do While N >= 0
    I = Int(N / 26) - 1.5
    J = Int((N Mod 52) / 13) - 1.5
    'each spot is offset one pixel spacing
    XOut = XFreqOut + I * Delta * XOffset
    YOut = YFreqOut + J * Delta * YOffset
    Call DOSENDING(XOut, YOut)
    N = N - 1
  Loop 'next n
Case 9:
  Delta = 2.5
  N = 103
  Do While N >= 0
    I = Int(N / 26) - 1.5
    J = Int((N Mod 52) / 13) - 1.5
    'each spot is offset one pixel spacing
    XOut = XFreqOut + I * Delta * XOffset
    YOut = YFreqOut + J * Delta * YOffset
    Call DOSENDING(XOut, YOut)
    N = N - 1
  Loop 'next n
Case 11:
  Delta = 3
  N = 103
  Do While N >= 0
    I = Int(N / 26) - 1.5
    J = Int((N Mod 52) / 13) - 1.5
    'each spot is offset one pixel spacing
    XOut = XFreqOut + I * Delta * XOffset
    YOut = YFreqOut + J * Delta * YOffset
    Call DOSENDING(XOut, YOut)
    N = N - 1
  Loop 'next n
End Select
Call ENABLE(1)
End Sub

Sub CNOFF (I As Integer) 'FALSE FOR OFF, TRUE FOR ON
' THIS ROUTINE CONTROLS THE ON-OFF RELAY IN THE HARDWARE
' BIT 1 ON PORT 2 USED TO BE MSB OF DATA
' SINCE IN USED FREQ RANGE MSB WAS NEVER SET,
' LINE WAS CHANGED (2/2/93) TO CONTROL SYSTEM ON -OFF

```

```

If I = False Then 'turn it off
    PortOut(2) = PortOut(2) And RelayOff 'PORT C
Else
    'turn it on
    PortOut(2) = PortOut(2) Or RelayOn 'PORT C
End If
Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
End Sub

Sub RST () 'routine to reset hardware box, Reset clears Fifo
'FLIP RESET BAR AND DDSRESET THEN RESTORE
    PortOut(2) = PortOut(2) And ResetLo 'PORT C
    PortOut(2) = PortOut(2) Or ResetDDSHi 'set both reset and dds reset
    Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
    PortOut(2) = PortOut(2) Or ResetHi 'set back the other way
    PortOut(2) = PortOut(2) And ResetDDSLo 'transition
    Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
End Sub

Sub SPOTDRAW () 'This routine prints the dot on the User Interface
If Fancy Then 'If the previous mode was a many spot draw then
    Fancy = False 'reset mode to single point
    Form1!Picture1.Cls 'and clear the display window
End If
'Set the X and Y scale so that all of the small spot are displayed at the edges
X = Form1!HScroll1.Value * .994 * Form1!Picture1.Width / Wmax
Y = Form1!VScroll1.Value * .95 * Form1!Picture1.Height / Vmax
'erase old spot
Form1!Picture1.DrawWidth = 1 'one pixel linewidth
Form1!Picture1.FillColor = White 'WHITE TO ERASE
Form1!Picture1.FillStyle = 0 'SOLID FILL, spot is a small box
Form1!Picture1.Line (OldX - OldIsZoomed, OldY - OldIsZoomed) - (OldX + OldIsZoomed, OldY + OldIsZoomed), White, BF
'redraw it at new location
Form1!Picture1.FillColor = Black 'BLACK
Form1!Picture1.FillStyle = 0 'SOLID FILL, spot is a small box
Form1!Picture1.Line (X - IsZoomed, Y - IsZoomed) - (X + IsZoomed, Y + IsZoomed), Black, BF
'redraw vertical separator line on screen
Form1!Picture1.Line (.5 * Form1!Picture1.ScaleWidth, 0) - (.5 * Form1!Picture1.ScaleWidth, Form1!Picture1.ScaleHeight), Black
'remember spot location so next time it can be erased
OldX = X
OldY = Y
OldIsZoomed = IsZoomed 'remember old size of spot
End Sub

Sub TURNZOOMOFF () 'when no zoom is wanted
IsZoomed = SMALLSPOT 'Set zoom to one spot size
Form1!threeX.Checked = False
Form1!fiveX.Checked = False
Form1!sevenX.Checked = False
Form1!nineX.Checked = False
Form1!elevenX.Checked = False
Form1!ZOOMOFF.Checked = True 'set the zoomoff check on the pulldown menu
Form1!Picture1.Cls 'clear the screen display
Fancy = True 'set mode to multi spot
'also turn off centroiding
CentroidOn = False 'set global variable
Form1!Picture2.Visible = False 'turn off picture2 when done
Form1!AvControl1.Visible = True 'show real time video
Form1!avoverlay.Visible = True 'allow overwriting on window
End Sub

Sub WRTLN (I As Integer) 'Toggle the Hardware Fifo Write line
'channel 1 OR 2 FOR CHOICES
If I = 1 Then 'CHANNEL 1
    'SEND THEM LO THEN BACK TO HIGH
    PortOut(2) = PortOut(2) And WrtlnLo 'PORT C
    Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
    PortOut(2) = PortOut(2) Or WrtlnHi 'PORT C
    Status = DIG_Out_Port\ (ByVal 1, ByVal 2, ByVal PortOut(2))
Else 'CHANNEL 2
    'SEND THEM LO THEN BACK TO HIGH

```

LASERCCM.BAS - 14

```
PortOut(2) = PortOut(2) And Wrtln2Lo 'PORT C
Status = DIG_Out_Port\ByVal 1, ByVal 2, ByVal PortOut(2))
PortOut(2) = PortOut(2) Or Wrtln2Hi 'PORT C
Status = DIG_Out_Port\ByVal 1, ByVal 2, ByVal PortOut(2))
End If
End Sub
```

Appendix B. Breadboard Control PC Help File Listing (User's Guide)

The following pages present the listing of the on-line help files that are available to the operator via the breadboard control software (see also Appendix A, Section 5.2). These help files contain a brief overview of the breadboard system and therefore constitute a User's Guide of sorts that should be reviewed by anyone who is preparing to operate the breadboard.

* Table of Contents

Index to General Information

Index to Menu Descriptions

Index to Technical Information

* CONTENTS_MAIN

Index to General Information

Program Overview

Release History

Know Bugs and Limitations

Copyright Notice

CONTENTS_OVERVIEW

* Index to Menus

File Menu

Zoom Menu

Multibeam Menu

Scan Menu

Centroid Menu

Help Menu

* CONTENTS_MENU

* Index to Technical Information

Description of Bragg Cells

Description of Optics

Alignment Procedure

The Centroiding Algorithm

Pattern File Format

How to Write a Pattern File

Laser Safety Issues

Electronics Description

* CONTENTS_TECHINFO

*K5 Program Overview

Lasercom is a system designed to output an 830 nm laser beam in any direction within a cylinder of space that ranges from 0 to 360 degrees in the horizontal direction by ± 18 degrees in the vertical direction. The size of the beam is designed to cover an angular spread of 0.36 degrees. The purpose of this system is to demonstrate beam steering for low orbit satellite optical communication with no moving parts.


This software is the control interface needed to operate the breadboard. The beam can be positioned by clicking the mouse on a new position on the beam positioning control area, dragging the beam spot from one position to another, or by adjusting the position slide controls.

System Optical Field Coverage.

Beam Specifications

Divergence = 0.36 Degrees

Resolution = 1000 (Horizontal) x 100 (Vertical).

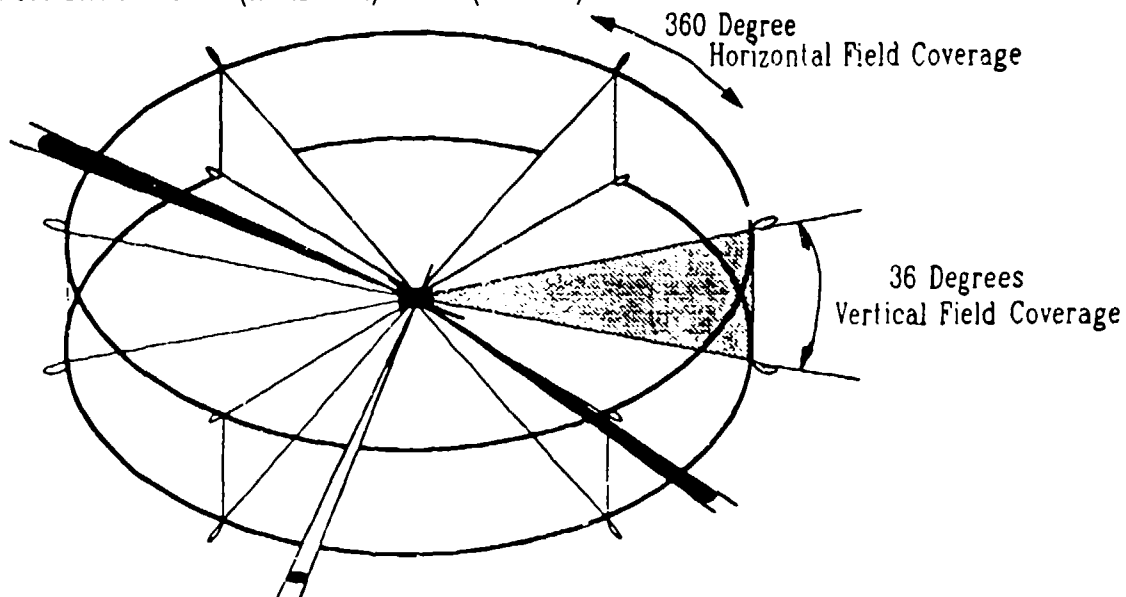

* GENERAL _OVERVIEW

* OVERVIEW, LASER, TYPE, SCAN RANGE, BEAM STEERING, SATELLITE, OPTICAL COMMUNICATION, CONTROL
INTERFACE, BEAM POSITION,
PROGRAM OVERVIEW

• ✕ ✕ Release History

Version 1.01

June 1993

GENERAL_HISTORY
✕ RELEASE HISTORY, VERSION, DATE
\$ RELEASE HISTORY

K3 Know Bugs and Limitations

There are as yet, no known bugs.

Please keep us informed of any bugs found during use.

This program is limited to a single instance. Only one working copy can be run at a time.

GENERAL_BUGS
K BUGS:LIMITATIONS
S KNOW BUGS AND LIMITATIONS

Copyright Notice

**LaserCom Interface
Written By Lee Burberry,
Staff Engineer
Harris Corp, Information Systems Division
Copyright © June 1993**

Sponsored By SDIO and Directed by Rome Laboratories under Contract No. F30602-91-C-0131

**# GENERAL_COPYRIGHT
K BURBERRY:LASERCOM;HARRIS;ROME;SDIO;CONTRACT NO.;SPONSORED BY
\$ COPYRIGHT NOTICE**

#K \$ File Menu

Open

**Pops up a file open dialog box to select pattern files.
Pattern files draw pictures with the output light beam.**

**Select a file name and click OK to display the picture.
Or double click the filename to display the picture.**

Select CANCEL if you do not want to display a picture file.

Exit

Ends the program.

The program terminates after a one minute cooldown period.

**# MENU, FILE
K FILE MENU: OPEN; EXIT; PATTERN FILE
\$ FILE MENU**

#K S Zoom Menu

Off

Turn zoom off and returns the output laser beam to its normal size covering 0.36 degrees of field

3 X

Enlarges the output laser beam to 3 times its normal size to cover a 1.08 degree field

5 X

Enlarges the output laser beam to 5 times its normal size to cover a 1.80 degree field

7 X

Enlarges the output laser beam to 7 times its normal size to cover a 2.52 degree field

9 X

Enlarges the output laser beam to 9 times its normal size to cover a 3.24 degree field

11 X

Enlarges the output laser beam to 11 times its normal size to cover a 3.96 degree field

MENU_ZOOM
K ZOOM MENU:OFF;3X;5 X,7 X,9 X,11X;ENLARGE
S ZOOM MENU

*** K3 Multibeam Menu**

0 No Beams

This clears the system FIFO of all output frequencies. This will turn off all the output beams.

2 Beam Demo

Displays two simultaneous beams, one in the center of each field. These two beams define the centered output of each fisheye lens and can be used as an aid to system alignment. The coordinates of each beam in space is; 90 degrees horizontally by 0 degrees vertically, and 270 degrees horizontally by 0 degrees vertically.

4 Beam Demo

Displays four simultaneous beams. The coordinates of each beam in space is; 60 degrees horizontally by 0 degrees vertically, 120 degrees horizontally by 0 degrees vertically, 240 degrees horizontally by 0 degrees vertically, and 300 degrees horizontally by 0 degrees vertically.

8 Beam Demo

Displays eight simultaneous beams, one in each corner of each field. These beams define the limits of each field and can be used to scale the data to cover the output field of each fisheye lens. The coordinates of each beam in space is; 0 degrees horizontally by -18 degrees vertically, 0 degrees horizontally by 18 degrees vertically, 179.9 degrees horizontally by -18 degrees vertically, 179.9 degrees horizontally by 18 degrees vertically, 180 degrees horizontally by -18 degrees vertically, 180 degrees horizontally by 18 degrees vertically, 359.9 degrees horizontally by -18 degrees vertically, 359.9 degrees horizontally by 18 degrees vertically.

MENU_MULTIBEAM

K MULTIBEAM: NO BEAMS, 0 BEAMS, 2 BEAM, 4 BEAM, 8 BEAM, ALL BEAMS OFF, TURN OFF BEAMS

S MULTIBEAM MENU

K \$ Scan Menu

Horizontally

Draws a Horizontal line from 0 degrees to 360 degrees horizontally, 0 degrees vertically.

Vertically

Draws two vertical lines from -18 degrees to +18 degrees vertically, 90 degrees horizontally, and 270 degrees horizontally.

Diagonally

Draws two Diagonal lines from 0 degrees horizontally by -18 degrees vertically to 179.9 degrees horizontally by +18 degrees vertically, and 180 degrees horizontally by -18 degrees vertically to 359.9 degrees horizontally by +18 degrees vertically.

MENU_SCAN
K SCAN MENU: HORIZONTAL; VERTICAL; DIAGONAL
\$ SCAN MENU

#KS Centroid Menu

On

Turns centroiding on. When a single beam is output, this function periodically finds the position of the beam as seen from the reference CCD camera. The detected coordinates are displayed alongside of the camera display output. With centroiding on, the system pauses for a few seconds each time the centroiding takes place. Centroiding dramatically slows down the system.

Off

Turns off the centroiding function.

Calibrate

This function is used to create a lookup table between the desired beam output locations and the actual location as seen on the CCD camera. It takes a few minutes to operate and should only be used if an exact correlation between desired and actual beam output is required.

MENU_CENTROID
K CENTROID MENU;CENTROID ON;CENTROID OFF;CENTROID CALIBRATE;CALIBRATE
S CENTROID MENU

K S Help Menu

Contents

Activates this Help File

Using Help

This Opens the Help File on how to use a Help File.


About

The About choice pops up a Dialog Box with the Version number, Copyright Information and Sponsorship of this software.

```
# MENU_HELP
K HELP MENU;CONTENT;USING HELP;ABOUT
S HELP MENU
```

#KS Description of Bragg Cells


Basic Theory

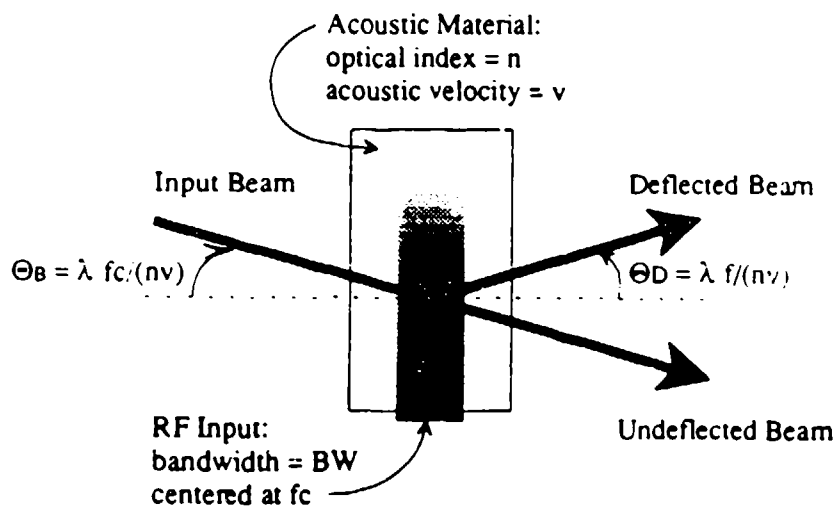

The Bragg cells are the key component in the beam steering system. The direction of light passing through the Bragg cells is changed to an angle that is a linear function of the RF frequency that is used to stimulate the cells. Inside the Bragg cells an acoustic grating

(compressional wave) is propagated at the frequency of the RF stimulus in the transverse direction of the optical beam path. The time that it takes for the acoustic wave to propagate over the width of the input optical beam is referred to as the "time aperture" of the cell. This corresponds to the time that it takes to uniquely change the angle of optical deflection from the cells.

How Zooming is performed

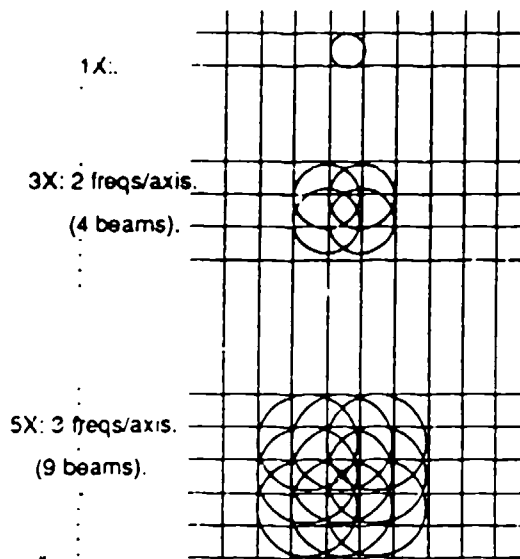

An interesting result can be obtained by switching the RF stimulus frequencies faster than the time aperture of the Bragg cells. The deflected optical beam can be made to effectively expand, or "zoom", in divergence angle by repetitively cycling several closely spaced frequencies within the time aperture of the cells. Each unique frequency steers the deflected beam to a slightly different direction, and the sub-aperture fill time of each frequency causes each deflected beam to spread more due to diffraction and hence overlap the neighboring beams. The result of these two effects is that the net (composite)

TECH BRAGG
K DESCRIPTION OF BRAGG CELLS; BRAGG CELLS STEERING; ZOOMING; MULTIPLE BEAMS; MAX RF POWER; RF
POWER
\$ DESCRIPTION OF BRAGG CELLS


deflected beam appears to have increased in size over that of the uncycled (cw) beam size. The zoom factor can be continuously varied by programming the correct frequency spacings and cycle times to the Bragg cells. The demo software (under ZOOM MENU) has been pre-configured to provide zoom factors of 1X (cw), 3X, 5X, 7X, 9X, and 11X.

How Multiple Beams are performed

As mentioned above, Bragg cells operate by transforming a particular input RF stimulus frequency into a specific optical deflection angle. Multiple simultaneous deflection beams can therefore be generated by inserting simultaneous RF stimulus frequencies into the Bragg cells. The demo electronics/interface box has 3 additional input ports per Bragg cell for this purpose. Since the electronics/interface box provides only one frequency source per Bragg cell (DDS synthesizer) then a different approach is used to "simulate" the effect of multiple beams without using the additional input ports. The approach used is to time-division-multiplex the frequencies rapidly between the different beam locations (i.e., faster than the CCD camera can respond) so that the illusion of multiple beams is created. However, the true generation of multiple beams can only occur by simultaneously summing frequencies into the Bragg cells via the front panel input ports.

WARNING: the total combined RF power (the summed power of all input frequencies) into each Bragg cell should not exceed 400 mW due to potential thermal damage to the cells. **NOTE:** the DDS frequency synthesizer in the electronics/interface box has a gain pot that has been pre-adjusted to produce 400 mW to each Bragg cell. If the front panel input ports are used to provide additional frequencies then one of the following options should be executed: 1) the DDS outputs should be attenuated appropriately with in-line pads, or, 2) the DDS outputs should be disconnected and terminated with 50 ohm load, or, 3) the gain pots on the DDS boards should be adjusted to appropriately reduce the power.

K 3 Description of Optics

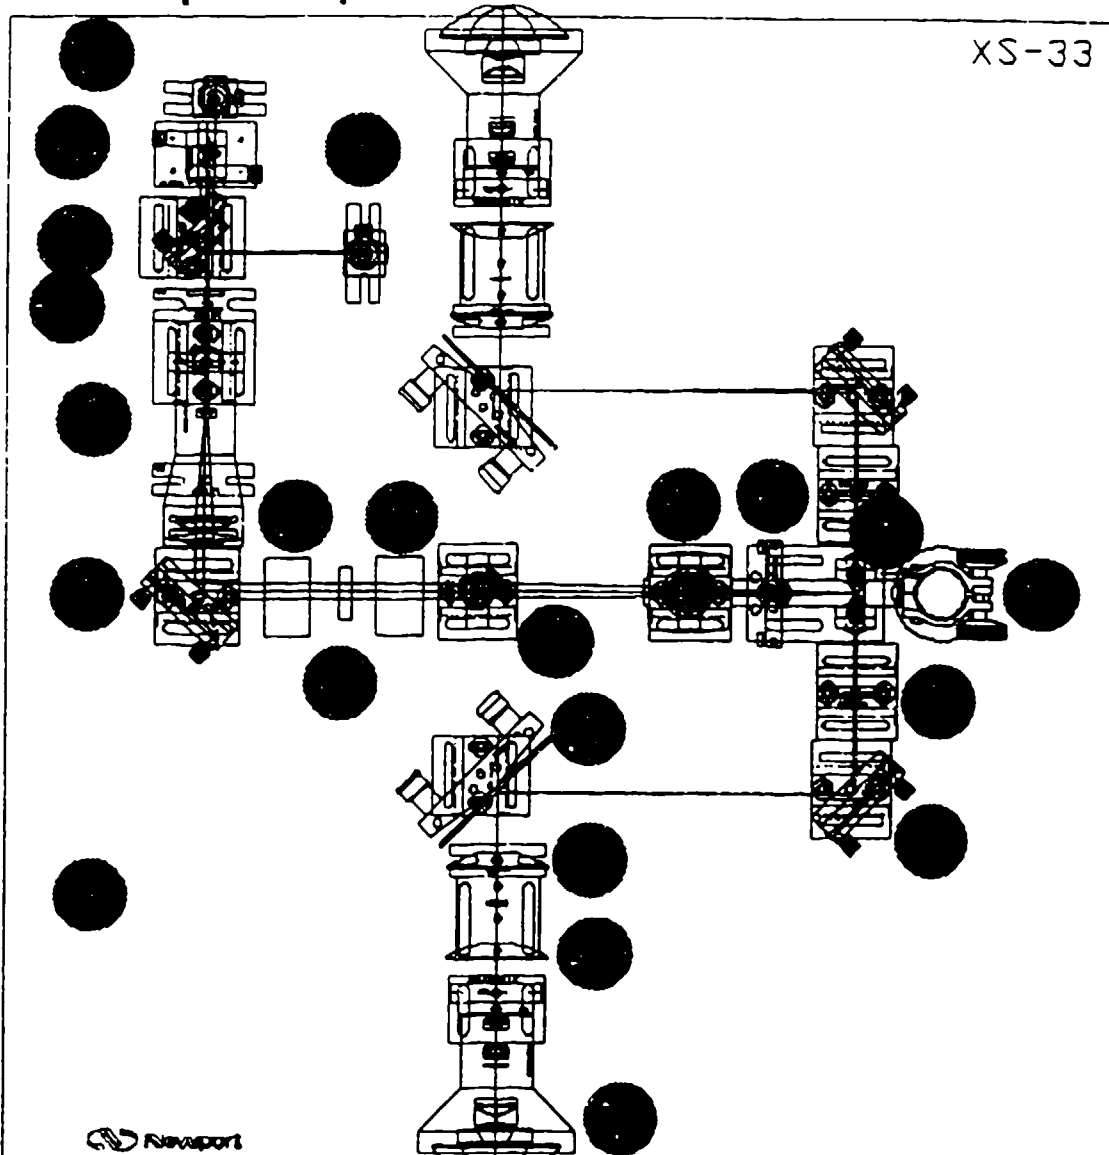

The following is a list of parts in the Lasercom system illustrated above. Only one 180 degree field is enumerated, the other field is identical.

- 1) The base plate is a 2 inch thick 3 foot square optical breadboard with a one inch 1/4-20 hole pattern grid.
- 2) The 25 mW 830 nm laser and collimator.
- 3) The 10 mW 670 nm laser and collimator.
- 4) A 2X anamorphic corrector prism pair.
- 5) Hot Mirror beam combiner (reflects IR, passes visible)
- 6) A half wave plate and a quarter wave plate

TECH OPTICS
K DESCRIPTION OF OPTICS PARTS COMPONENTS
3 DESCRIPTION OF OPTICS

- 7) A 6 X beam expander.
- 8) A 2 Inch Folding Mirror
- 9) The Horizontal Bragg cell
- 10) A half wave plate
- 11) The Vertical Bragg Cell
- 12) The Horizontal Fourier transform Lens (300 mm)
- 13) The camera pickoff beam splitter, the cameras Vertical Fourier transform lens, and CCD TV camera suspended above.
- 14) Holds the Vertical Fourier transform Lens (80 mm) for the projection legs
- 15) The image divider mirrors, and two 40 mm Lenses (one for each half field)
- 16) Camera support post
- 17) 100 mm lens
- 18) A 2 Inch fold mirror
- 19) A 3 Inch fold mirror
- 20) 150 mm Lens
- 21) 150 mm Lens
- 22) 8 mm Nikon Fisheye Lens

The optics consists of several sections. The first part is the illumination optics(2-8), the next part is the Bragg cells that do the beam steering(9-11). Then comes the Fourier transform optics that form the beam waists(12-14). The beam waist field is then divided in half and each half reimaged to the input field of the fisheye lenses(15-21). The fisheye lenses then project the beams out to free space(22).

This system was optimized for an 830 nm laser. However, to provide a visible demonstration capability, a 670 nm laser was also provided. The power to the laser is provided by a BNC connector on the back panel of the system control box. This connector supplies 5 volts to the two laser drivers. Inline on the power cable is a switch that selects either the RED laser or the IR laser. Only one laser can be used at a time to avoid spot confusion at the CCD camera plane. The aspect ratio required at the Bragg cells is 2:1 with the long axis in the horizontal direction. The aspect ratio out of the RED laser is 4:1, so a 2X prismatic beam expander is used to form the correct ratio. The out of the IR laser is about 2:1 so no correction is required. The beams are combined using a hot mirror. A hot mirror is a dichroic surface that reflects IR (above 700 nm) and transmits visible light. The beam sizes at this point are about 2 by 4 mm. A 6X beam expander is used to create a 12 by 24 mm beam to illuminate the Bragg cells. The Fourier Cylinders then form a scan plane with a field of 500 spots by 200 spots. A beamsplitter reflects a small portion of the light to the CCD TV camera for spot position monitoring. The top half and bottom half of the fields are divided by a mirror pair into the left field and right fields, each with 500 by 100 spot. These fields are then reimaged and magnified to fill the input aperture of the fisheye lens. The fisheye then projects the spots to fill each half field of 180 degrees horizontally by +/- 18 degrees vertically.

85 Alignment Procedure

This alignment procedure assumes that all the optical mount holders are in their nominal positions (see Description of Optics). The optical axis should be aligned to be 5 1/2 inches above the optical table. At all times observe laser safety precautions! Useful tools not supplied are an infrared viewer, an IR sensitive viewing card, a power meter, and an oscilloscope.

1. Place 830 laser with collimator into holder (2).
2. Rotate the laser beam to a clear area of the table.
3. Adjust laser until near and far field of beam is at 5 1/2 inches above the table.
4. Aim the beam at the center of the dichroic splitter (5).
5. Adjust the splitter angle to maintain the 5 1/2 inch height and project the beam along the line of components (6), (7), and (8).
6. Center the half wave plate and the quarter wave plate (6) on the beam.
7. Center the 6 X beam expander (7).
8. Before inserting turning mirror (8), use the collimation tester (supplied) to adjust the collimation out of the 6 X beam expander. Rotate the focus ring until the fringes on the view screen are parallel to the shadow of the wire.
9. Insert turning mirror (8) centered on the beam and folding 90 degrees toward the horizontal Bragg cell.
10. Position the horizontal Bragg cell (9) in the center of the beam.
11. Place a 300 mm lens (supplied) after the cell, and project the spot onto a detector with the detector output displayed on a scope.
12. Energize the cell by starting the software. Select Scan Horizontal from the menu.
13. Adjust the position and angle of the cell to maximize the output on the detector and maintain a flat bandshape.
14. Iteratively adjust the rotation of the halfwave and quarterwave plates (6) to maximize the output of the horizontal cell. Greater than 80 throughput efficiency can be obtained.
15. Remove the 300 mm lens.
16. Position the halfwave plate (10) in the center of the diffracted beam.
17. Position the vertical Bragg cell (11) in the center of the diffracted beam.
18. Place a 300 mm lens (supplied) after the cell, and project the spot onto a detector with the detector output displayed on a scope.
19. Energize the cell by starting the software. Select Scan Vertical from the menu.
20. Adjust the position and angle of the cell to maximize the output on the detector and maintain a flat bandshape.
21. Iteratively adjust the rotation of the halfwave plate (10) to maximize the output of the vertical cell. Greater than 80 % throughput efficiency can be obtained.

TECH ALIGNMENT
K ALIGNMENT PROCEDURE TOOLS
\$ ALIGNMENT PROCEDURE

22. Select Scan Diagonally from the software menu and check the composite deflection efficiency. greater than 60 % should be available across the band.
23. Remove the 300 mm lens.
24. Place the 300 mm cylinder lens in position (12). This focuses the scan horizontally.
25. Place beamsplitter (13) so that the diffracted light passes through and is reflected upward.
26. Position the vertical Fourier lens (14) into position, centered on the beam.
27. Position a second cylinder lens above the beamsplitter, supported off vertical post (16).
28. Suspend the CCD TV camera also from post (16).
29. Center diffracted light on the camera.
30. Select Scan Vertically from the software and focus the line of light on the camera by moving the camera position up and down.
31. Select Scan Horizontally from the software and focus the line of light on the camera by moving the suspended cylindrical lens.
32. Select Multibeam, 8 beam demo from the software menu
33. Center the pattern on the TV camera by moving the camera.
34. The TV camera setup may have to be repeated after the projected beams are set up.
35. Focus cylinder lens (12) and (14) to form an image in front of folding and splitting mirrors (15)
36. Position splitting mirrors (15) to deflect the top half of the image to the left and the bottom half of the image to the right.
37. Chose the pattern file RIGHT0.PTN from the File Open menu.
38. Position the 40 mm lens(15) to project the beams straightly.
39. Position the 100 mm lens (17) in the center of the beam.
40. Position Mirror (18) to direct the beams toward mirror (19).
41. Observe the image at position (19) . Individual spots should be observed.
42. Position Mirror (19) to center the image in the center of the following lens positions
43. Center Lens (20) on the beam.
44. Center Lens (21) on the beam.
45. Insert the Nikon Lens (22) into its holder.
46. Focus lens (17) to obtain clean spots on the screen.
47. Position mirror (19) to center the array of spots in the vertical direction and horizontally.
48. Finely adjust the position of lens 22 along the beam path to set the outer spots at the outer edge of the observation screen.
49. Iterate any adjustments out of tune.
50. Repeat for the other projection leg.

Note: The system can only be nominally adjusted for on wavelength laser at a time. If the 670 laser needs to be used than the 830 laser will no longer be in adjustment.

#K § The Centroiding Algorithm

To display and centroid the optical spot, a CCD TV camera is used in conjunction with a NEW MEDIA GRAPHICS Super Video Windows, video display and capture board. During normal operation, only the real-time video is displayed on the screen. During centroiding, the real time video is hidden and only the frame grabbed image is displayed. The frame grabbed picture is used as a holding place for the video data. Each pixel of video holds the 8 bit gray level value of the data (only upper 7 bits are significant). An area that surrounds the expected position of the spot is selected and the average of the pixels, times the position, is taken, and divided by the average of the pixel values to get the weighted average. From this data, the located spot data is obtained. However, in order for this data to be valid, the system must be calibrated. The calibration routine, creates of grid of know spot location and their associated centroided positions. Using this data, a four point interpolation is used to find the calibrated centroid positions.

TECH. CENTROIDING
K CENTROIDING ALGORITHM/FRAME GRABBER VIDEO
§ THE CENTROIDING ALGORITHM

#K 5 Pattern File Format

Triangle.PTN

EXAMPLE
START,33
POINT,90,15
LINE,120,-10,40
LINE,60,-10,40
LINE,90,15,40
END

This is a spot based drawing routine. However, since the fill time of the Bragg cell is 100 locations in the FIFO and the FIFO has 4096 total locations, only 40 totally independent spots may be displayed. Up to 4096 position may be specified, but under filling the Bragg cells will cause the beam to grow.

The First command in a Pattern file must be the START command followed by a comma, and the number of FIFO locations used for each spot draw. The other commands may be mixed or repeated in any order. An END command at the conclusion of the file is optional but is included for clarity. Other commands consist of 'POINT',X,Y (where X,Y are the coordinates of a spot location in degrees horizontal (0-360) by degrees vertical (-18 - +18)) and 'LINE',X,Y,NUM (which draws a series of points from the present location to the specified X,Y coordinates, with the number of steps indicated by NUM-1 (a NUM of 2 produces just the two endpoints). 'CLEAR' will erase the present drawing in the FIFO and allow for multiple successive pictures in one file, used for animation purposes.

#TECH PATTERN
K PATTERN FILE FORMAT; START; POINT; LINE; CLEAR; END; * PTN; FIFO
\$ PATTERN FILE FORMAT

#K \$ How to Write a Pattern File

Pattern files can be written with any text editor that can save files in ASCII format. Each Line must start with a keyword, with parameters following separated by commas. One command per line must be used. Illegal commands will cause the program to BEEP when the bad line in the file is accessed. The file will continue to run, however.


TECH WRITE
HOW TO WRITE A PATTERN FILE;TEXT EDITOR;ASCII;BEEP
\$ HOW TO WRITE A PATTERN FILE

Appendix C. Electronic Interface Board Schematics

The following pages present the electrical schematics for the Electronic Interface Board.


Control Interface Schematic

Page 1 of 7

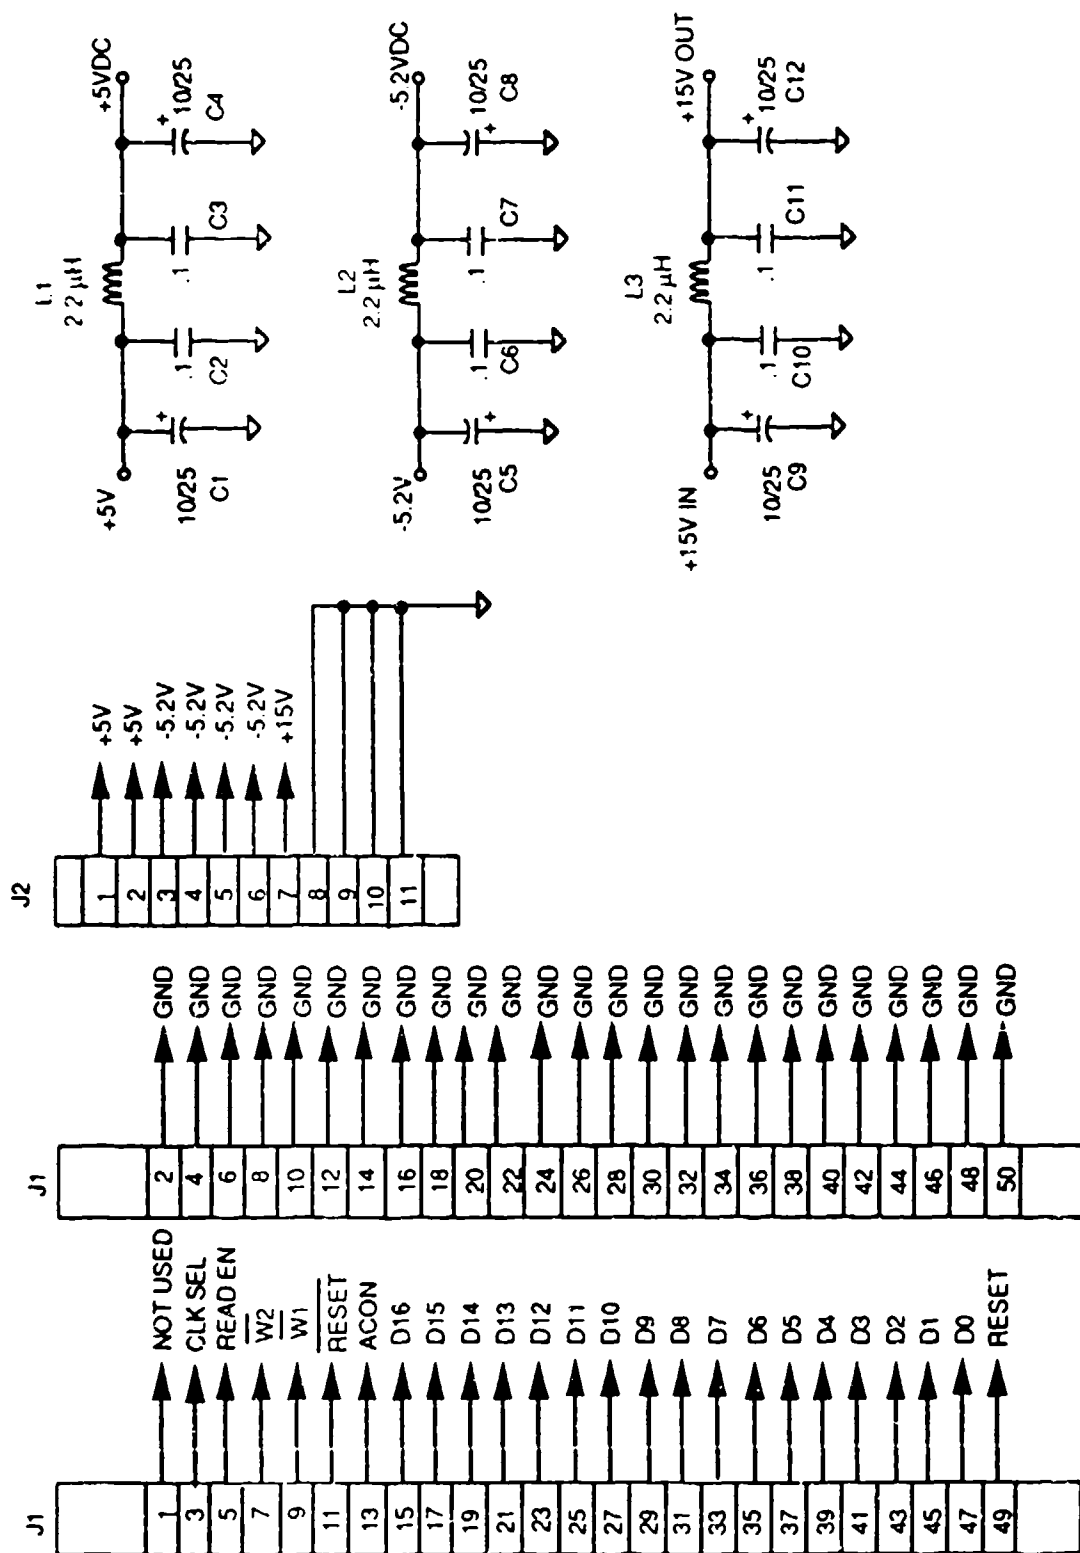


Control Interface Schematic



Page 2 of 7

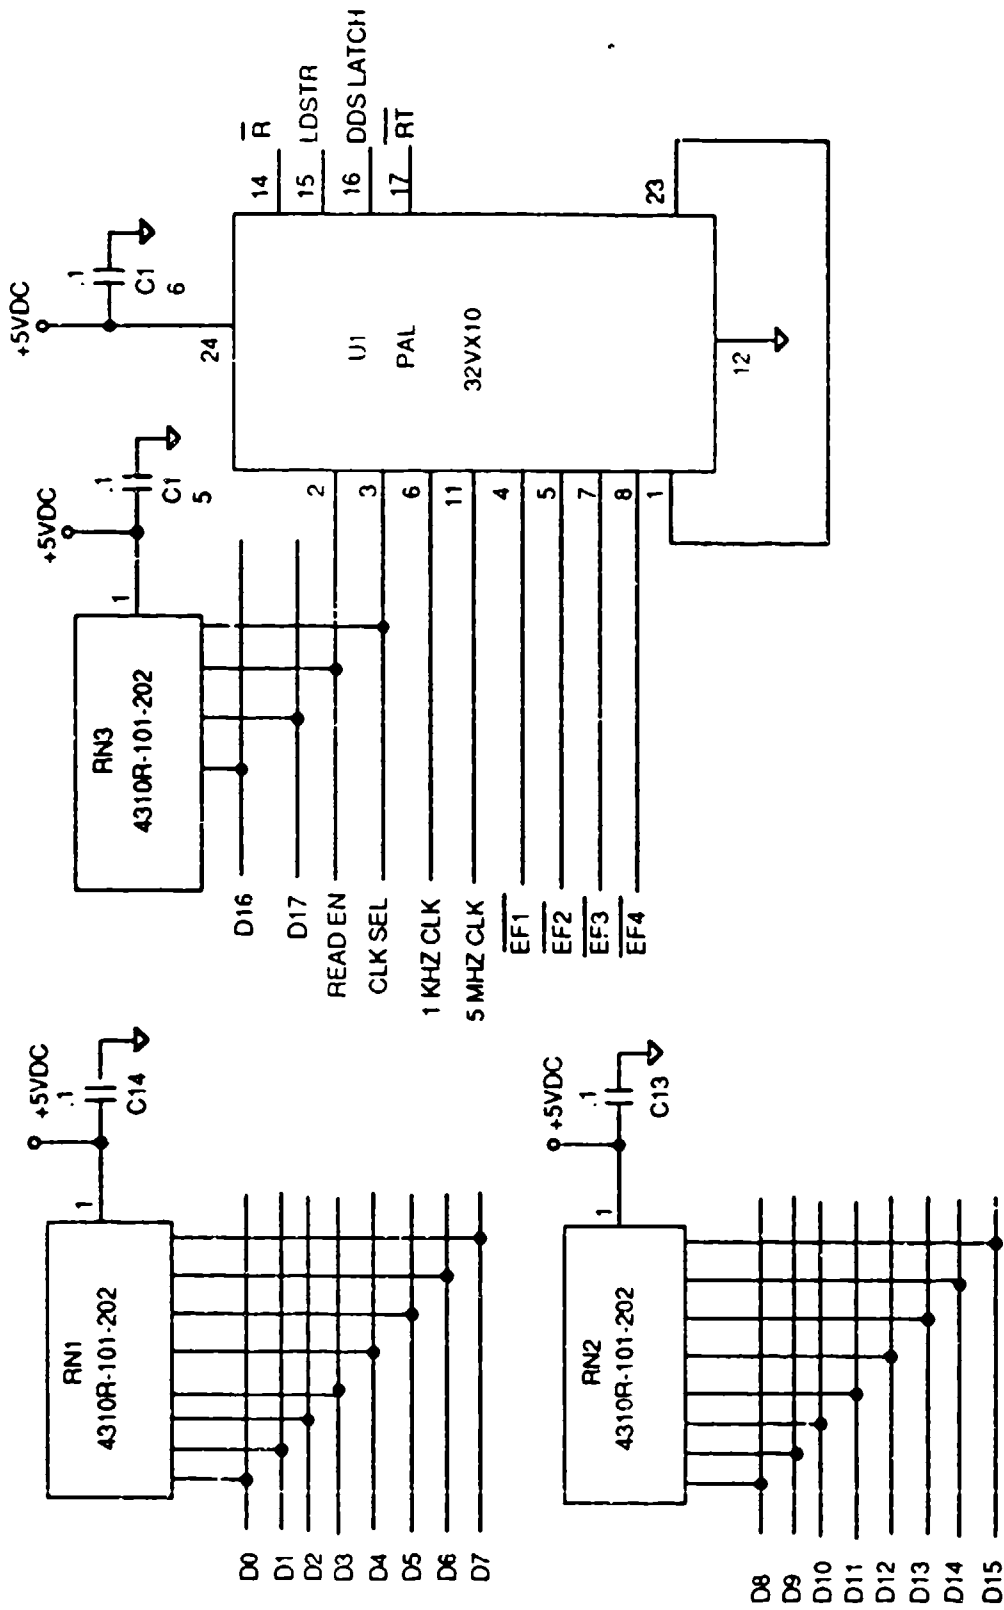

Control Interface Schematic


Page 3 of 7

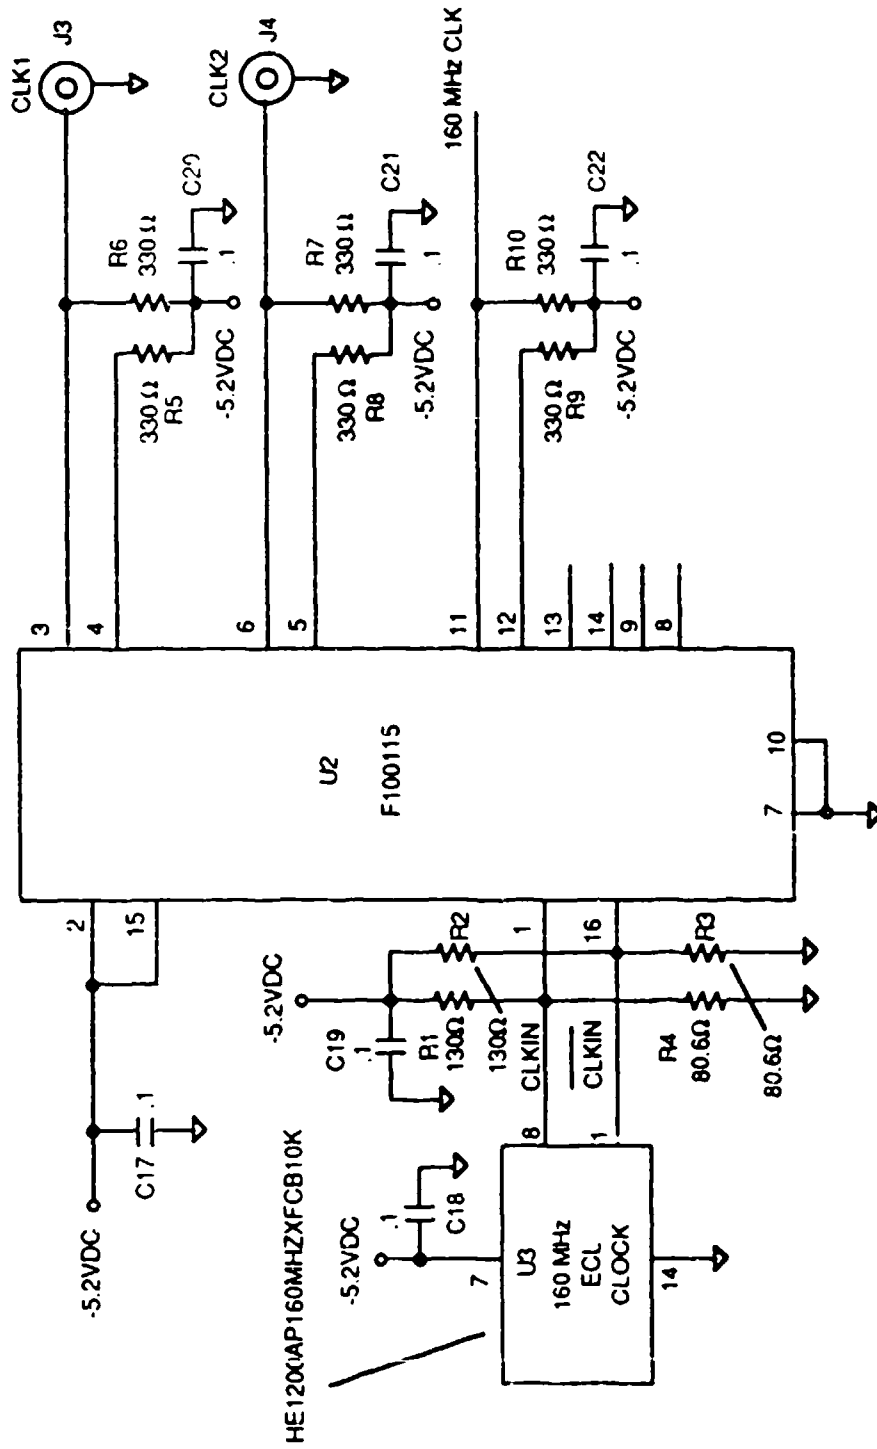

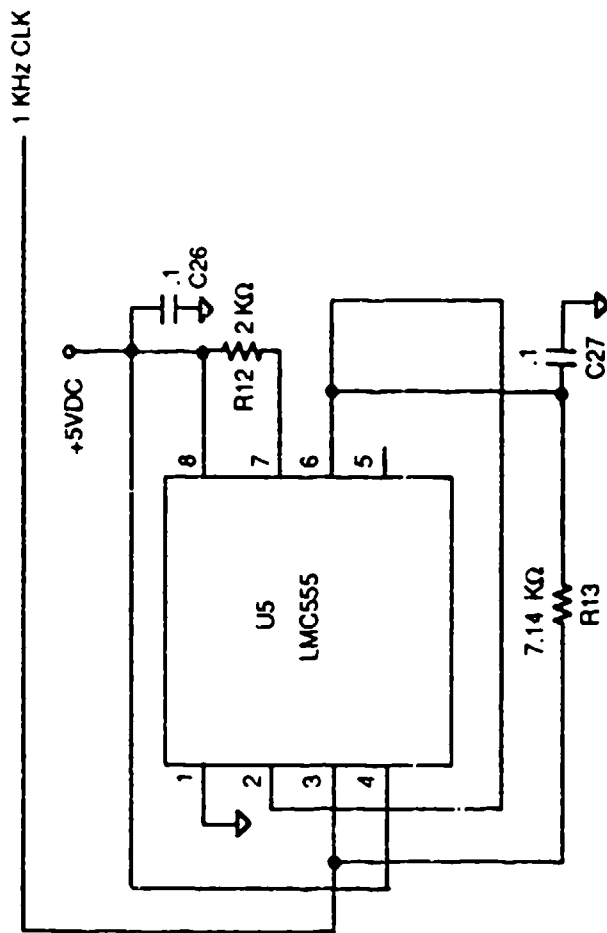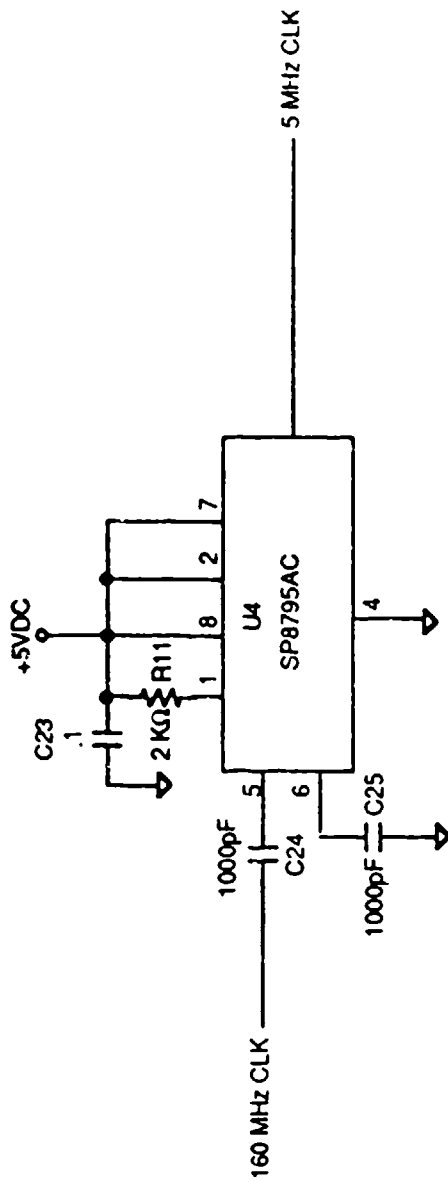


Control Interface Schematic

Page 5 of 7

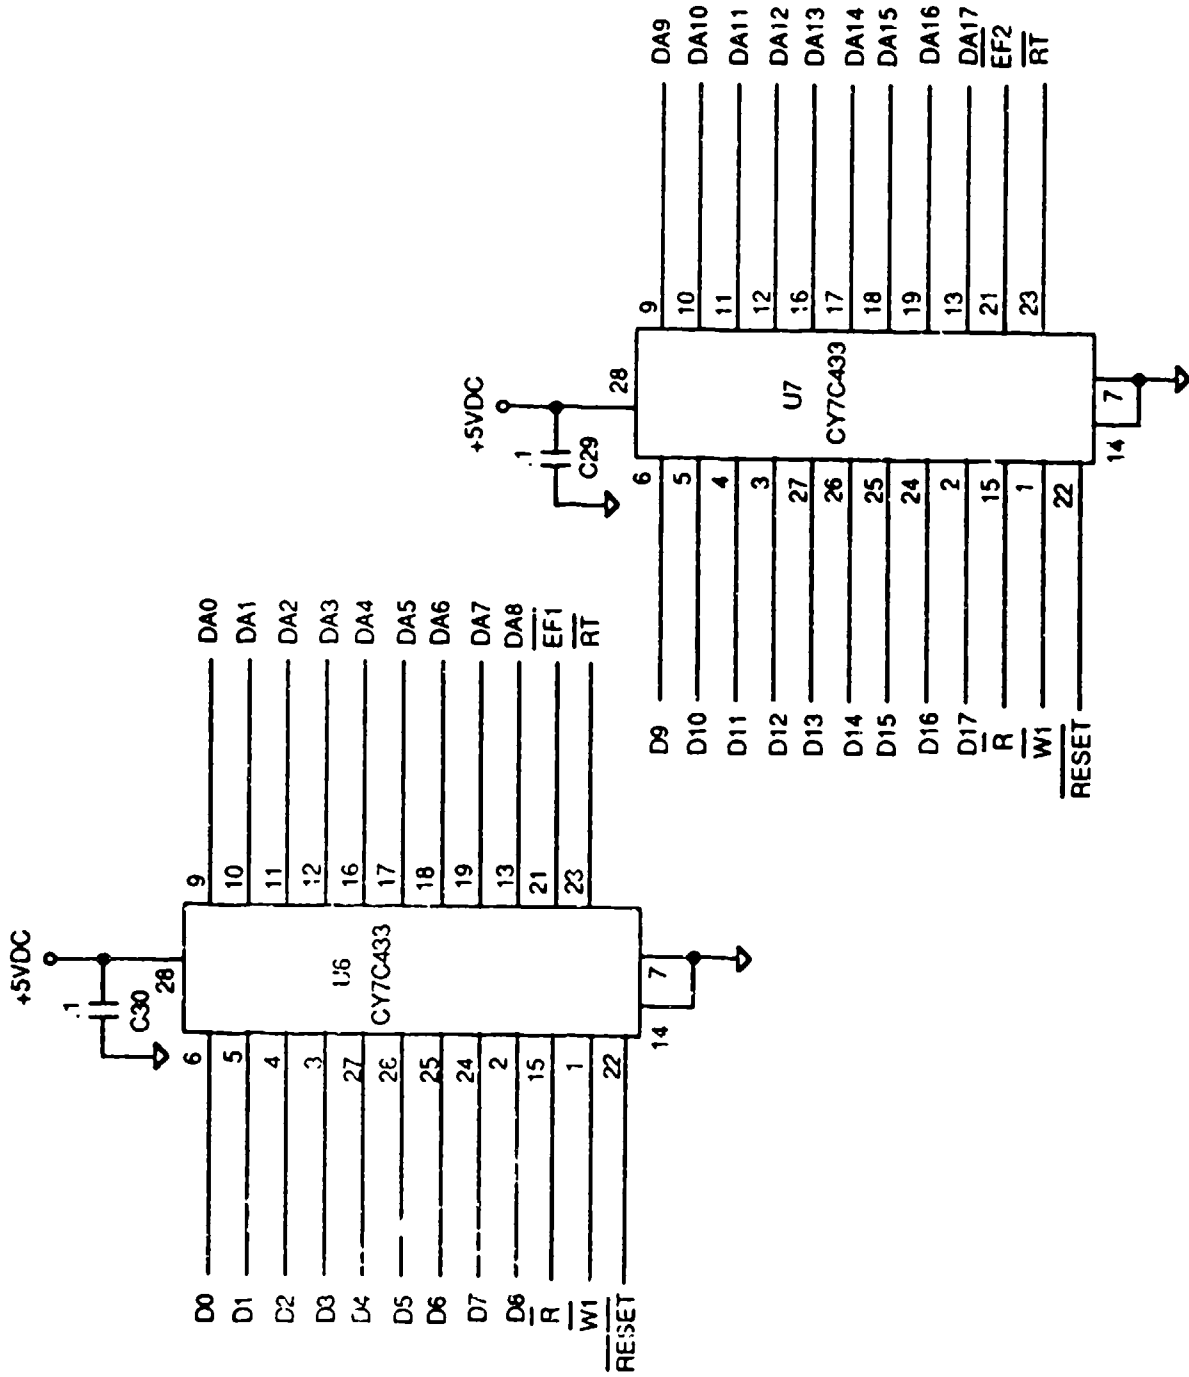


Control Interface Schematic

Page 6 of 7

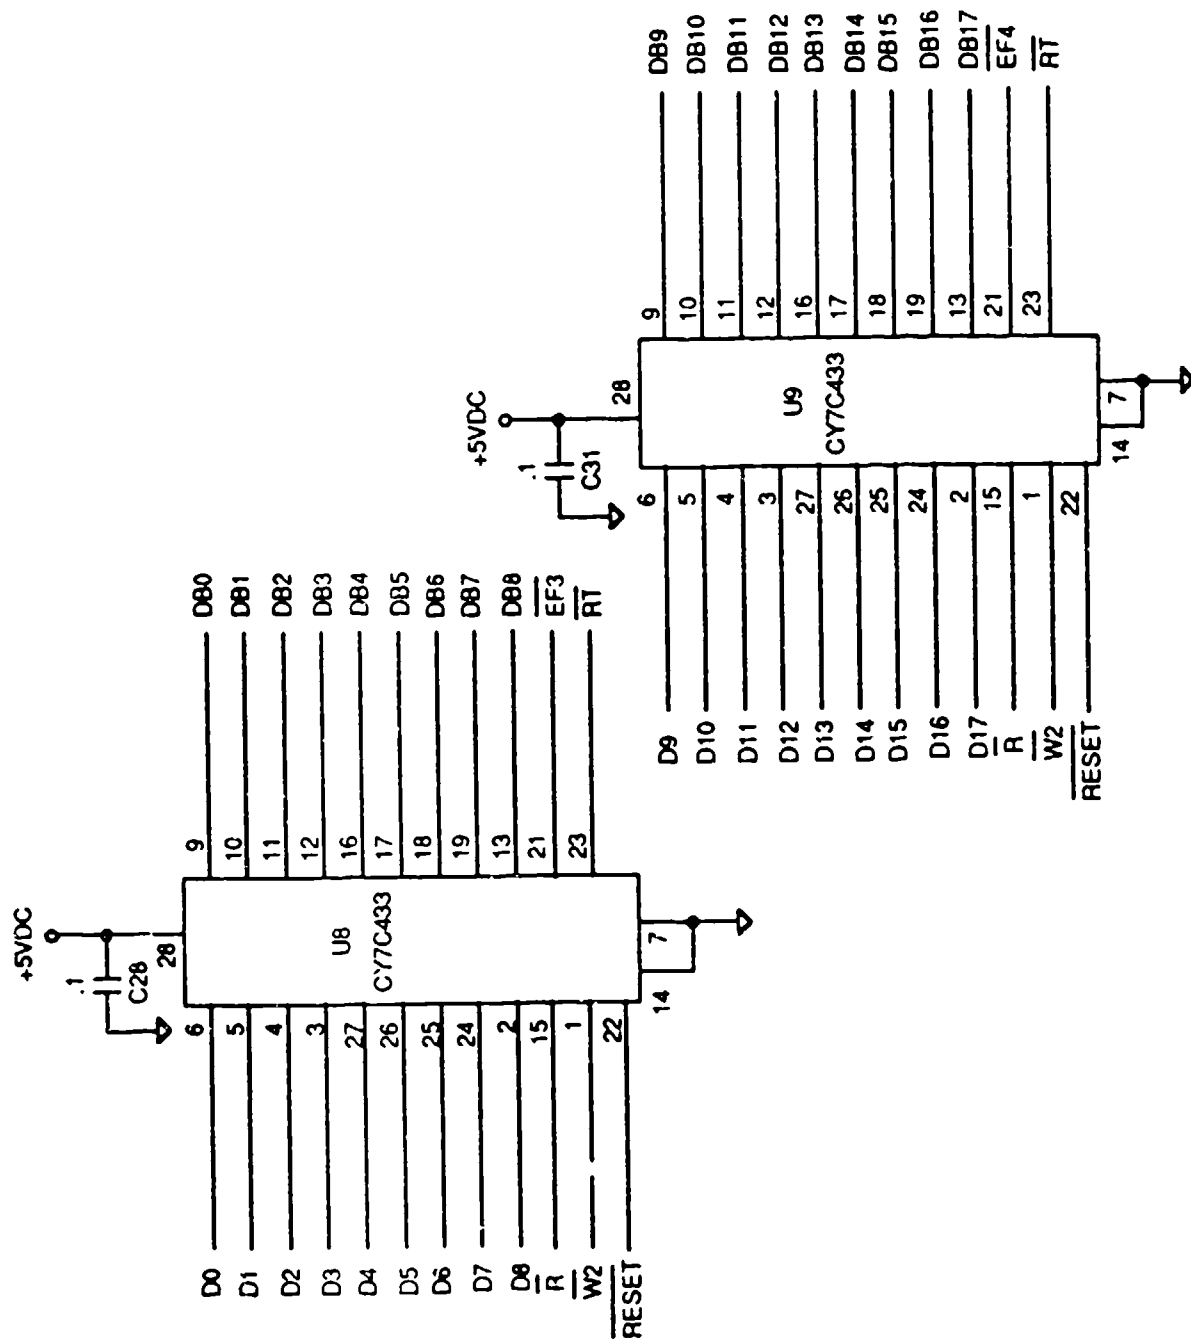

Control Interface Schematic

Page 7 of 7

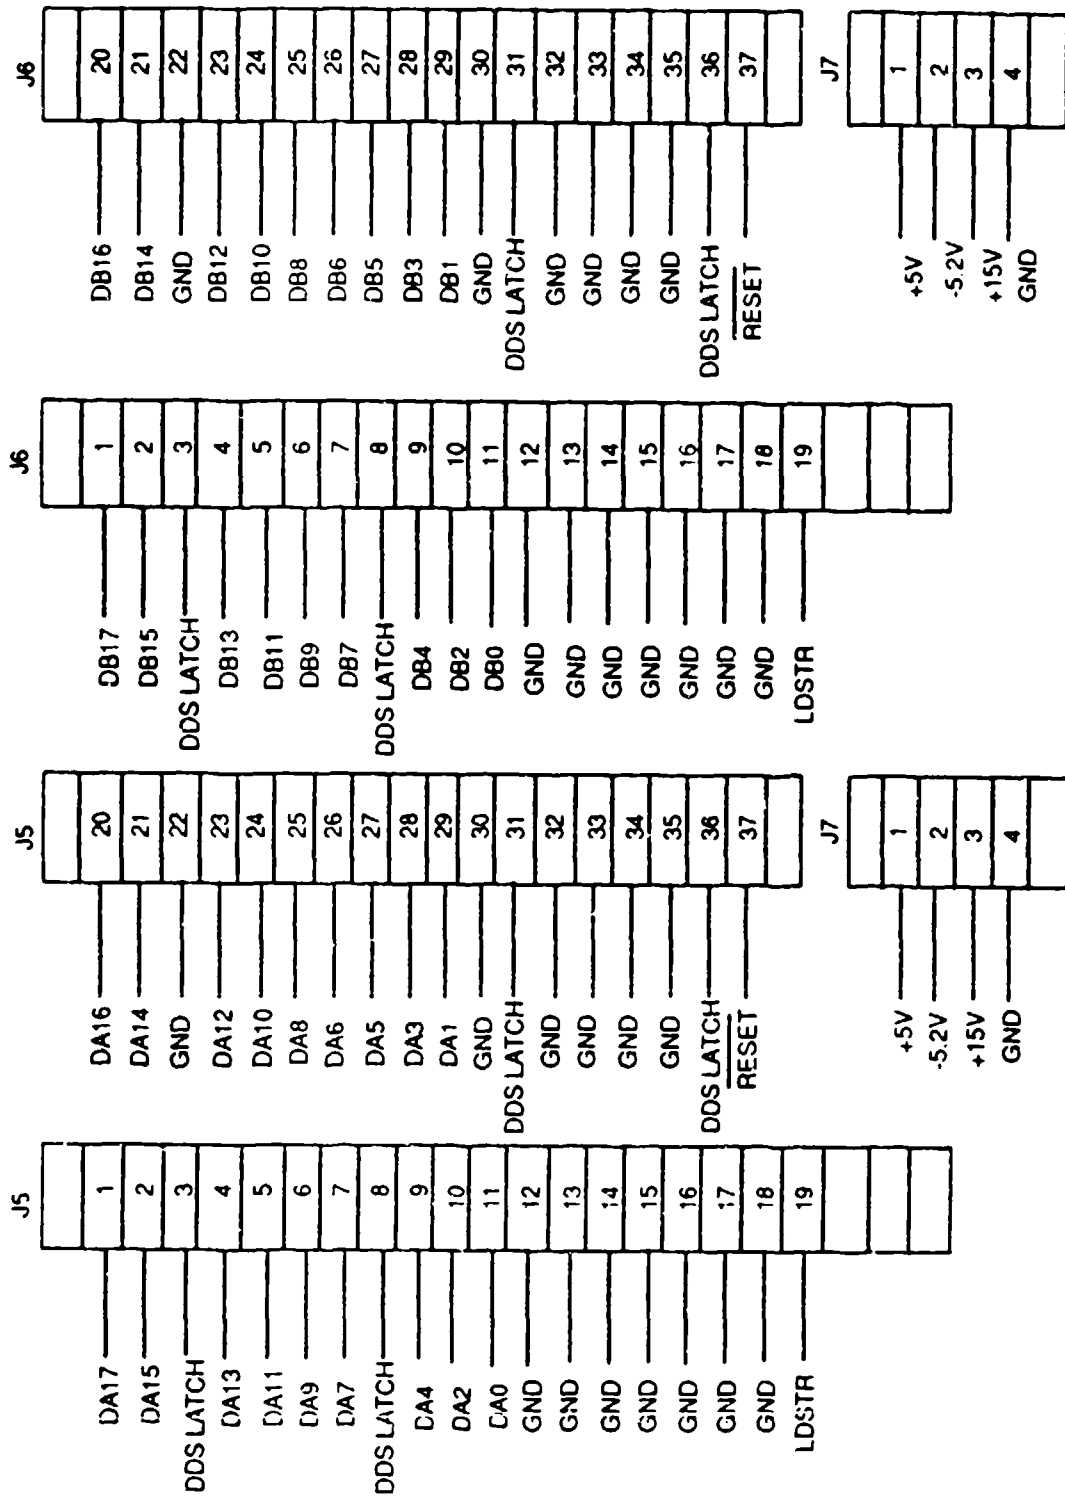

Appendix D. List of Acronyms and Frequently Used Abbreviations

AC	Alternating Current	RAM	Random Access Memory
AO	Acousto-Optic	RF	Radio Frequency
AOTF	Acousto-Optic Tunable Filters	SDI	Strategic Defense Initiative
APT	Acquisition, Pointing, Tracking	SDL	Spectra Diode Laboratories
		sec	seconds
BER	Bit Error Rate	SOW	Statement of Work
BTS	Built-in Test Set		
BW	Band Width	TBW	Time Band Width product
		TeO ₂	Tellurium Dioxide
°C	Degrees Centigrade	TV	Television
CCD	Charge Coupled Device	VSWR	Voltage Standing Wave Ratio
cm	centimeter	W	Watts
CW	Continuous Wave		
dB	decibel		
dBc	decibel relative to carrier		
dBm	decibel relative to 1 mW		
DC	Direct Current		
DDS	Direct Digital Synthesis		
DOI	D. O. Industries		
EMI	Electro-Magnetic Interference		
FIFO	First In, First Out		
FOR	Field Of Regard		
GHz	GigaHertz		
Hz	Hertz		
I/O	Input/Output		
IR	Infra Red		
KHz	KiloHertz		
Km	Kilometer		
LIDAR	Laser Radar		
m	meter		
Mbps	Megabits per second		
MHz	MegaHertz		
mm	millimeter		
mrad	milliradians		
μsec	microseconds		
mW	milliWatts		
nm	nanometer		
ns, nsec	nanosecond		
PAL	Programmable Array Logic		
PC	Personal Computer		

DISTRIBUTION LIST

addresses	number of copies
ATTN: MR. PAUL OLESKI RL/C3BA 525 BROOKS ROAD GRIFFISS AFB NY 13441-4505	10
HARRIS CORPORATION P. O. BOX 94000 MELBOURNE FL 32902	5
RL/SUL TECHNICAL LIBRARY 26 ELECTRONIC PKY GRIFFISS AFB NY 13441-4514	1
ADMINISTRATOR DEFENSE TECHNICAL INFO CENTER DTIC-FDAC CAMERON STATION BUILDING 5 ALEXANDRIA VA 22304-6145	2
BALLISTIC MISSILE DEFENSE ORGANIZATION 7100 DEFENSE PENTAGON WASH DC 20301-7100	2
HQ ACC/DRIY ATTN: MAJ. DIVINE LANGLEY AFB VA 23665-5575	1
ASC/ENEMS WRIGHT-PATTERSON AFB OH 45433-6503	1
WRIGHT LABORATORY/AAAI-4 WRIGHT-PATTERSON AFB OH 45433-6543	1

WRIGHT LABORATORY/AAAI-2 1
ATTN: MR FRANKLIN HUTSON
WRIGHT-PATTERSON AFB OH 45433-6543

AFIT/LOEE 1
2950 P STREET
WRIGHT-PATTERSON AFB OH 45433-6577

WRIGHT LABORATORY/MLPO 1
ATTN: D.L. DENISON
WRIGHT-PATTERSON AFB OH 45433-6533

WRIGHT LABORATORY/MTEL 1
WRIGHT-PATTERSON AFB OH 45433

WRIGHT LABORATORY/FIVS/SURVIAC 1
WRIGHT-PATTERSON AFB OH 45433

AAMRL/HE 1
WRIGHT-PATTERSON AFB OH 45433-6573

AUL/LSE 1
BLOG 1405
MAXWELL AFB AL 36112-5564

US ARMY STRATEGIC DEF 1
CSSD-IM-PA
PO BOX 1500
HUNTSVILLE AL 35807-3801

COMMANDING OFFICER 1
NAVAL AVIONICS CENTER
LIBRARY D/765
INDIANAPOLIS IN 46219-2189

COMMANDING OFFICER NCCOSC RDTE DIVISION CODE 02748, TECH LIBRARY 53560 HULL STREET SAN DIEGO CA 92152-5001	1
CMDR NAVAL WEAPONS CENTER TECHNICAL LIBRARY/C3431 CHINA LAKE CA 93555-6001	1
SPACE & NAVAL WARFARE SYSTEMS COMM WASHINGTON DC 20363-5100	1
CDR, U.S. ARMY MISSILE COMMAND REDSTONE SCIENTIFIC INFO CENTER AMSMT-RD-CS-R/ILL DOCUMENTS REDSTONE ARSENAL AL 35898-5241	2
ADVISORY GROUP ON ELECTRON DEVICES ATTN: DOCUMENTS 2011 CRYSTAL DRIVE, SUITE 307 ARLINGTON VA 22202	2
Report Collection, Research Library MSP364 Los Alamos National Laboratory Los Alamos, New Mexico 87545	1
AEDC LIBRARY TECH FILES/MS-100 ARNOLD AFB TN 37389	1
COMMANDER/USAISC ATTN: ASOP-DO-TL BLDG 61801 FT HUACHUCA AZ 85613-5000	1
AIR WEATHER SERVICE TECHNICAL LIB FL 4414 SCOTT AFB IL 62225-5458	1

AFIWC/MSO 1
102 HALL BLVD STE 315
SAN ANTONIO TX 78243-7016

SOFTWARE ENGINEERING INST (SEI) 1
TECHNICAL LIBRARY
5000 FORBES AVE
PITTSBURGH PA 15213

DIRECTOR NSA/CSS 1
W157
9800 SAVAGE ROAD
FORT MEADE MD 21055-6000

NSA 1
E323/MC
SAB2 DOOR 22
FORT MEADE MD 21055-6000

NSA 1
ATTN: D. ALLEY
DIV X911
9800 SAVAGE ROAD
FT MEADE MD 20755-6000

DDO 1
R31
9800 SAVAGE ROAD
FT. MEADE MD 20755-6000

DIRNSA 1
R509
9800 SAVAGE ROAD
FT MEADE MD 20775

NSA/CSS 1
R9
FORT GEORGE G. MEADE MD 20755-6000

DIRECTOR 2
NSA/CSS
R523
FORT GEORGE G. MEADE MD 20755-6000

DOD COMPUTER CENTER 1
C/TIC
9800 SAVAGE ROAD
FORT GEORGE G. MEADE MD 20755-6000

ESC/IC 1
50 GRIFFISS STREET
HANSCOM AFB MA 01731-1619

ESC/AV 1
20 SCHILLING CIRCLE
HANSCOM AFB MA 01731-2816

FL 2807/RESEARCH LIBRARY 1
OL AA/SULL
HANSCOM AFB MA 01731-5000

TECHNICAL REPORTS CENTER 1
MAIL DROP D130
BURLINGTON ROAD
BEDFORD MA 01731

DEFENSE TECHNOLOGY SEC ADMIN (DTSA) 1
ATTN: STTD/PATRICK SULLIVAN
400 ARMY NAVY DRIVE
SUITE 300
ARLINGTON VA 22202

ATTN: WALT DYER 1
BMDD/TRC
THE PENTAGON
WASH DC 20301-7100

ATTN: KEPI WU 1
BMDD/TRI
THE PENTAGON
WASH DC 20301-7100

ATTN: TRACI SCHUMAN 1
ANSER CORP
SUITE 800 CRYSTAL GATEWAY 31
1215 JEFFERSON DAVIS HIGHWAY
ARLINGTON VA 22202

ATTN: R. T. CARLSON/M/S E050
MITRE CORP
BURLINGTON ROAD
BEDFORD MA 01730

1

ATTN: V. W. S. CHAN
MIT LINCOLN LABORATORY
LEXINGTON MA 02173-0073

1

ATTN: D. M. BOROSON
MIT LINCOLN LABORATORY
LEXINGTON MA 02173-0073

1

ATTN: LARRY TUBBS
USA SDC/DASD-H-5B
P. O. BOX 1500
HUNTSVILLE AL 35807

1

ATTN: JAMES R. LESH
JET PROPULSION LABORATORY
CALIFORNIA INSTITUTE OF TECHNOLOGY
4800 OAK GROVE DRIVE
PASADENA CA 91109-8099

1

ATTN: CARL GASS
PL/VTRA
3550 ABERDEEN AVE
KIRTLAND AFB NM 87117-6008

1

ATTN: WAYNE R. FENNER
ELECTRONICS TECHNOLOGY CENTER
AEROSACE CORP
2350 EAST E1 SEGUNDO BLVD
EL SEGUNDO CA 90245-4691

1



DEPARTMENT OF THE AIR FORCE
AIR FORCE RESEARCH LABORATORY (AFRL)

1 Jun 04

MEMORANDUM FOR DTIC-OCQ

ATTN: Larry Downing
Ft. Belvoir, VA 22060-6218

FROM: AFRL/IFOIP

SUBJECT: Distribution Statement Change

1. The following documents have been reviewed and have been approved for Public Release; Distribution Unlimited:

ADB084552, "Project Birdwatch at Dover AFB", RADC-TR-84-7

ADB191869, "Acousto-Optic Beam Steering Study", RL-TR-94-121

AD0800669, "Use of Commercial Broadcast Facilities for Emergency DoD Communications", RADC-TR-66-392

ADB058979, "Multi-Rate Secure Processor Terminal Architecture Study", RADC-TR-81-77, Vol 1.


ADB053656, "16 KB/S Modem (AN/GCS-38) CONUS Test", RADC-TR-80-89

ADB055136, "VINSON/AUTOVON Interface Applique for the Modem, Digital Data, AN/GCS-8", RADC-TR-80-341

ADB043556, "16 KB/S Data Modem Partitioning", RADC-TR-79-278

ADB029131, "16 Kilobit Modem Evaluation", RADC-TR-78-127.

2. Please contact the undersigned should you have any questions regarding this document. Thank you very much for your time and attention to this matter.


KELLY CAGWIN
STINFO Officer
Information Directorate
315-330-7094/DSN 587-7094